

FUJIFILM

DIGITAL CAMERA


FinePix S6000 fd

DIGITAL CAMERA

FinePix S6500 fd

OWNER'S MANUAL

This manual will show you how to use your FUJIFILM DIGITAL CAMERA FinePix S6000fd / FinePix S6500fd correctly.
Please follow the instructions carefully.

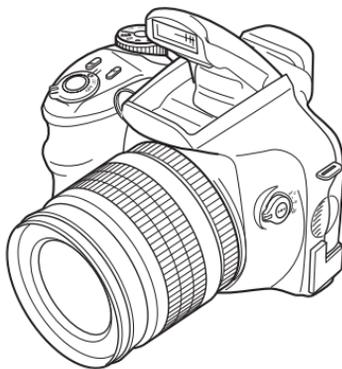

digital
Tools for the imagination.



xD
xD-Picture Card™

Exif Print

PictBridge

Getting Ready

Using the Camera

Advanced Features • Photography

• Playback

• Movie

Settings

Camera Connection

Software
Installation

Appendices

Troubleshooting

BL00548-200(1) 

Warning

To prevent fire or shock hazard, do not expose the unit to rain or moisture.

For customers in the U.S.A.

*Tested To Comply
With FCC Standards
FOR HOME OR OFFICE USE*

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

You are cautioned that any changes or modifications not expressly approved in this manual could void the user's authority to operate the equipment.

Notes on the Grant:

To comply with Part 15 of the FCC Rules, this product must be used with a Fujifilm-specified ferrite-core A/V cable, USB cable, and DC supply cord.

For customers in Canada

CAUTION

This Class B digital apparatus complies with Canadian ICES-003.

Please read the Safety Notes (→p.192) and make sure you understand them before using the camera.

NOTICE

BEFORE OPENING THE CD-ROM PROVIDED BY FUJI PHOTO FILM CO., LTD., PLEASE READ THIS END USER LICENSE AGREEMENT CAREFULLY. ONLY IF YOU AGREE WITH THIS AGREEMENT, SHOULD YOU USE THE SOFTWARE RECORDED ON THE CD-ROM. BY OPENING THE PACKAGE, YOU ACCEPT AND AGREE TO BE BOUND BY THIS AGREEMENT.

End User License Agreement

This End User License Agreement ("Agreement") is an agreement between Fuji Photo Film Co., Ltd. ("FUJIFILM") and you, which sets forth the terms and conditions of the license granted for you to use the software provided by FUJIFILM.

The CD-ROM contains third party software. In case a separate agreement is provided by a third party supplier for its software, the provisions of such separate agreement shall apply to the use of such third party software, prevailing over those of this Agreement.

1. Definitions.

- (a) "Media" means the CD-ROM titled "Software for FinePix CX" which is provided to you together with this Agreement.
- (b) "Software" means the software which is recorded on Media.
- (c) "Documentation" means the operation manuals of Software and other related written materials which are provided to you together with Media.
- (d) "Product" means Media (including Software) and Documentation collectively.

2. Use of Software.

FUJIFILM grants to you a nontransferable, nonexclusive license:

- (a) to install one copy of Software onto one computer in binary machine executable form;
- (b) to use Software on the computer onto which Software is installed; and
- (c) to make one backup copy of Software.

3. Restrictions.

- 3.1 You shall not distribute, rent, lease or otherwise transfer all or any part of Software, Media or Documentation to any third party without FUJIFILM's prior written consent. You also shall not sublicense, assign or otherwise transfer all or any part of the rights granted to you by FUJIFILM under this Agreement without FUJIFILM's prior written consent.
- 3.2 Except as expressly granted by FUJIFILM hereunder, you shall not copy or reproduce all or any part of Software or Documentation.
- 3.3 You shall not modify, adapt or translate Software or Documentation. You also shall not alter or remove copyright and other proprietary notices that appear on or in Software or Documentation.
- 3.4 You shall not, or shall not have any third party, reverse-engineer, decompile, or disassemble Software.

4. Ownership.

All copyrights and other proprietary rights to Software and Documentation are owned and retained by FUJIFILM or the third party suppliers as indicated on or in Software or Documentation. Nothing contained herein shall be construed, expressly or implicitly, as transferring or granting any right, license, or title to you other than those explicitly granted under this Agreement.

5. Limited Warranty.

FUJIFILM warrants to you that Media is free from any defect in material and workmanship under normal use for ninety (90) days from the date of your receipt of Media. Should Media not meet the foregoing warranty, FUJIFILM shall replace such defective Media with other Media bearing no defect. FUJIFILM's entire liability and your sole and exclusive remedy with regard to any defect in Media shall be expressly limited to such FUJIFILM's replacement of Media as provided herein

6. DISCLAIMER OF WARRANTY.

EXCEPT AS PROVIDED IN SECTION 5 HEREIN, FUJIFILM PROVIDES PRODUCT "AS IS" AND WITHOUT WARRANTIES OF ANY KIND, EXPRESS OR IMPLIED. FUJIFILM SHALL MAKE NO WARRANTY, EXPRESS, IMPLIED OR STATUTORY, AS TO ANY OTHER MATTERS, INCLUDING, BUT NOT LIMITED TO NON-INFRINGEMENT OF ANY COPYRIGHT, PATENT, TRADE SECRET, OR ANY OTHER PROPRIETARY RIGHTS OF ANY THIRD PARTY, MERCHANTABILITY, OR FITNESS FOR ANY PARTICULAR PURPOSE.

7. LIMITATION OF LIABILITY.

IN NO EVENT SHALL FUJIFILM HAVE ANY LIABILITY FOR ANY GENERAL, SPECIAL, DIRECT, INDIRECT, CONSEQUENTIAL, INCIDENTAL, OR OTHER DAMAGES (INCLUDING DAMAGES FOR LOSS OF PROFITS OR LOST SAVINGS) INCURRED FROM THE USE OF OR INABILITY TO USE PRODUCT EVEN IF FUJIFILM HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

8. No export.

You acknowledge that neither Software nor any part thereof, will be transferred, or exported to any country or used in any manner in violation of any export control laws and regulations to which Software is subject.

9. Termination.

In case you breach any of the terms and conditions hereof, FUJIFILM may immediately terminate this Agreement without any notice.

10. Term.

This Agreement is effective until the date when you cease to use Software, unless earlier terminated in accordance with Section 9 hereof.

11. Obligation upon termination.

Upon termination or expiration of this Agreement, you shall, at your own responsibility and expense, delete or destroy immediately all Software (including its copies), Media and Documentation.

12. Governing Law.

This Agreement shall be governed by and construed in accordance with laws of Japan.

EC Declaration of Conformity

We

Name: Fuji Photo Film (Europe) GmbH
Address: Heesenstrasse 31
40549 Dusseldorf, Germany

declare that the product

Product Name: FUJIFILM DIGITAL CAMERA FinePix S6000fd / FinePix S6500fd
Manufacturer's Name: Fuji Photo Film Co., Ltd.
Manufacturer's Address: 26-30, Nishiazabu 2-chome, Minato-ku,
Tokyo 106-8620, Japan

conforms to the following Standards:

Safety: EN60065
EMC: EN55022: 1998 Classe B
EN55024: 1998
EN61000-3-2: 1995 + A1: 1998 + A2: 1998

following the provision of the EMC Directive (89/336/EEC, 92/31/EEC and 93/68/EEC) and Low Voltage Directive (73/23/EEC).



Dusseldorf, Germany

August 1, 2006

Place

Date

Signature/Managing Director



This product comes with batteries. When these are empty, you shouldn't throw them away but deliver them as domestic chemical refuse.

Disposal of Electric and Electronic Equipment in Private Households

Disposal of used Electrical & Electronic Equipment (Applicable in the European Union and other European countries with separate collection systems)



This symbol on the product, or in the manual and in the warranty, and/or on its packaging indicates that this product shall not be treated as household waste.

Instead it should be taken to an applicable collection point for the recycling of electrical and electronic equipment.

By ensuring this product is disposed of correctly, you will help prevent potential negative consequences to the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.

If your equipment contains easy removable batteries or accumulators please dispose these separately according to your local requirements.

The recycling of materials will help to conserve natural resources. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you have purchased the product.

In Countries outside the EU:

If you wish to discard this product, please contact your local authorities and ask for the correct way of disposal.

Contents

Warning.....	2
IMPORTANT	3
EC Declaration of Conformity.....	4
Disposal of Electric and Electronic Equipment in Private Households	5
Contents.....	6
Preface.....	9
About this Manual	11
Accessories Included	12
Camera Parts and Features.....	13
Example of screen Text Display.....	16

Getting Ready

Attaching the Strap, Lens cap and Lens hood	17
Loading the Batteries	19
Checking the battery charge	21
Loading the xD-Picture Card	22
Turning On and Off	24
Setting the language, date, and time	25
Correcting the Date and Time	27
Selecting the Language	28

Using the Camera

Basic Operation Guide.....	30
Taking Pictures (AUTO Mode).....	33
Using Intelligent Face Detection when taking pictures	37
Taking pictures with the focus and exposure locked	39
AF-assist illuminator.....	41
Using zoom function	41

Adjusting the shot composition	42
Viewing the Images	44
Erasing the Images/Movies	48
Selecting FRAME or ALL FRAMES	48

Advanced Features — Photography

Using the Photography Functions —	
Procedure of Setting	50
Setting the Shooting Mode	54
AUTO Auto.....	54
Picture Stabilization.....	54
Natural Light / Natural &	55
Portrait	57
Landscape	57
SP Scene Position.....	58
P Program AE.....	62
S Shutter Priority AE.....	63
A Aperture Priority AE	65
M Manual.....	67
Adjusting the Image Brightness	
(Exposure Compensation)	69
Continuous AF.....	71
Manual focus	72
Macro (Close-up).....	74
Setting the Flash (Intelligent Flash).....	75
Taking pictures continuously.....	77
Increasing Monitor Brightness	80
Using F -MODE MENU (Photography)/	
SHOOTING MENU	81
Setting the F -MODE MENU (Portography).....	81

Setting the SHOOTING MENU	81
F -MODE MENU (Photography)	85
Changing the sensitivity setting	
(ISO) ISO	85
Changing the quality setting	
(QUALITY)	86
Changing the FinePix COLOR setting	
(FinePix COLOR)	87
SHOOTING MENU	88
Self-Timer (SELF-TIMER)	88
Selecting light metering method	
(PHOTOMETRY)	90
Adjusting color balance	
(WHITE BALANCE)	91
Focusing the shot quickly	
(HIGH-SPEED SHOOTING)	92
Specifying focusing mode	
(AF MODE)	93
Adjust the image outline (hard/soft)	
(SHARPNESS)	95
Adjust the amount of light emitted by the flash	
(FLASH (Brightness Adjustment))	95
Photograph the same image with different exposure (BRACKETING)	96

Advanced Features — Playback

Playback Information	98
Using F -MODE MENU (Playback)/PLAYBACK MENU	99
Setting the F -MODE MENU (Playback)	99
Setting the PLAYBACK MENU	99

F -MODE MENU (Playback)	100
Setting automatic playback	
(PLAYBACK)	100
DPOF set frame	
(PRINT ORDER (DPOF))	101
PLAYBACK MENU	105
Rotating the images	
(IMAGE ROTATE)	105
Protecting the images	
(PROTECT)	106
Copying the images	
(COPY COPY)	108
Adding voice memos to the images	
(VOICE MEMO)	110
Trimming the images	
(TRIMMING)	113

Advanced Features — Movie

Recording Movies	116
Changing movie size	118
Playing Back Movies	119

Settings

SET SET-UP	122
Using the SET-UP menu	122
SET-UP menu option	123

Camera Connection

Connecting to a TV	134
Using the AC power adapter	
(sold separately)	135

Continued ➔

Connecting Camera Directly to Printer — PictBridge Function	136
--	-----

Software Installation

Installation on a Windows PC	140
Installation on a Mac OS X	143
Connecting to a PC	146
Using FinePixViewer	149

Appendices

System Expansion Option	152
Accessories Guide	153
Overview of the Conversion Lens	155
Using Your Camera Correctly	156
Power Supply and Batteries	157
Discharging rechargeable batteries	159
Notes on the xD-Picture Card™ and the Internal Memory	161
Warning Displays	163

Troubleshooting

Troubleshooting	168
-----------------------	-----

Specifications	175
Explanation of Terms	181
FUJIFILM Digital Camera Worldwide Network	183
Safety Notes	192

Preface

■ Test Shots Prior to Photography

For important photographs (such as weddings and overseas trips), always take a test shot and view the image to make sure that the camera is working normally.

- Fuji Photo Film Co., Ltd. cannot accept liability for any incidental losses (such as the costs of photography or the loss of income from photography) incurred as a result of faults with this product.

■ Notes on Copyright

Images recorded using your digital camera system cannot be used in ways that infringe copyright laws without the consent of the owner, unless intended only for personal use. Note that some restrictions apply to the photographing of stage performances, entertainments and exhibits, even when intended purely for personal use. Users are also asked to note that the transfer of **xD-Picture Card** containing images or data protected under copyright laws is only permissible within the restrictions imposed by those copyright laws.

■ Handling Your Digital Camera

This camera contains precision electronic components. To ensure that images are recorded correctly, do not subject the camera to impact or shock while an image is being recorded.

■ Liquid Crystal

If the LCD monitor is damaged, take particular care with the liquid crystal in the monitor. If any of the following situations arise, take the urgent action indicated.

- If liquid crystal comes in contact with your skin
Wipe the area with a cloth and then wash thoroughly with soap and running water.
- If liquid crystal gets into your eye
Flush the affected eye with clean water for at least 15 minutes and then seek medical assistance.
- If liquid crystal is swallowed
Flush your mouth thoroughly with water. Drink large quantities of water and induce vomiting. Then seek medical assistance.

■ Trademark Information

-  and **xD-Picture Card™** are trademarks of Fuji Photo Film Co., Ltd.
- **IBM PC/AT** is a registered trademark of International Business Machines Corp. of the U.S.A.
- **Macintosh**, **Power Macintosh**, **iMac**, **PowerBook**, **iBook** and **Mac OS** are trademarks of Apple Computer, Inc., registered in the U.S. and other countries.
- **Microsoft**, **Windows**, and the **Windows logo** are trademarks, or registered trademarks of Microsoft Corporation in the United States and/or other countries. **Windows** is an abbreviated term referring to the **Microsoft® Windows® Operating System**.
- * The “**Designed for Microsoft® Windows® XP**” logo refers to the camera and the driver only.
- Other company or product names are trademarks or registered trademarks of the respective companies.

Continued ➔

■ **Notes on Electrical Interference**

If the camera is to be used in hospitals or aircrafts, please note that this camera may cause interference to other equipment in the hospital or aircraft. For details, please check with the applicable regulations.

■ **Explanation of Color Television System**

NTSC: National Television System Committee, color television telecasting specifications adopted mainly in the U.S.A., Canada and Japan.

PAL: Phase Alternation by Line, a color television system adopted mainly by European countries and China.

■ **Exif Print (Exif ver. 2.2)**

Exif Print Format is a newly revised digital camera file format that contains a variety of shooting information for optimal printing.

* See "Using Your Camera Correctly" (→p.156) for more information.

About this Manual

Macro (Close-up)

Use this mode to take close-up shots.

Available Photography modes:

Press to select Macro mode.
The Macro mode setting changes each time you press the .

CHECK

- Focal range:
Wide-angle:
Approx. 10 cm to 3.0 m (3.9 in. to 9.8 ft.)
Telephoto:
Approx. 90 cm to 3.0 m (3.0 ft. to 9.8 ft.)
- Focal range in Super macro:
Approx. 1 cm to 1.0 m (0.4 in. to 3.3 ft.) (Wide-angle only)
- Effective flash range:
Wide-angle:
Approx. 30 cm to 2.0 m (1.0 ft. to 6.6 ft.)
Telephoto:
Approx. 90 cm to 2.0 m (3.0 ft. to 6.6 ft.)

MEMO

- Use a tripod to prevent camera shake in Macro mode.
- Any of the following cancels Macro mode:
 - Changing the Mode dial to , , , or
 - Turning the camera off
 - If the flash is too bright, use flash brightness adjustment (→P.95).
 - Even if (→p.93) in the mode is set, the camera focuses near the center of the screen.

Icons indicate the modes that are available.

CAUTION

This mark denotes issues that may affect the camera's operation.

CHECK


This mark denotes points to notice in the camera's operation.

MEMO

This mark denotes additional topics that complement the basic operating procedures.

4-direction (▲▼◀▶) button

Up, down, left, and right are indicated by black triangles in the Owner's Manual. Up or down is shown as ▲ or ▼, and left or right is shown as ◀ or ▶.

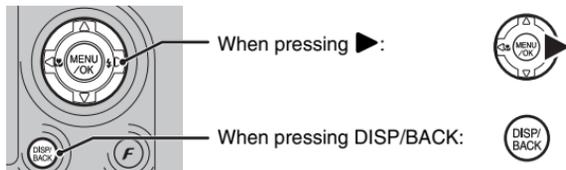

Accessories Included


- AA-size Alkaline Batteries (LR6) (4)



- Strap (1)



- Lens cap (1)
- Lens cap holder (1)

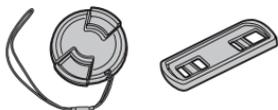

- Lens hood (1)



- A/V cable (1)
Including plug to pin-plug x2



- USB cable (mini-B) (1)




- CD-ROM (1)
Software for FinePix CX



- Owner's Manual (this manual) (1)


Camera Parts and Features

- Refer to the pages in parentheses for information on using the camera parts or features.

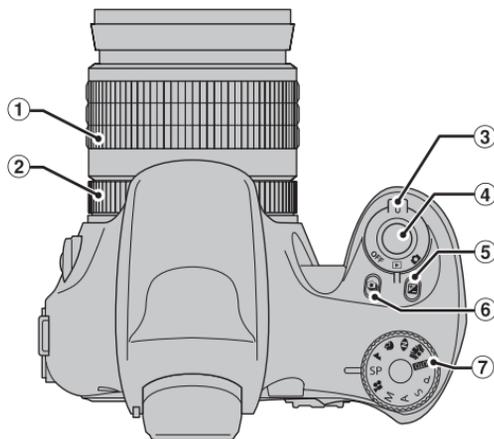


- ① Zoom ring (p.32, 41)
- ② Focus ring (p.32, 72)
- ③ Power switch
- ④ Shutter button
- ⑤  Exposure compensation button (p.69, 80, 98)
- ⑥  Continuous shooting button (p.77)
- ⑦ Mode dial

Continued ➔

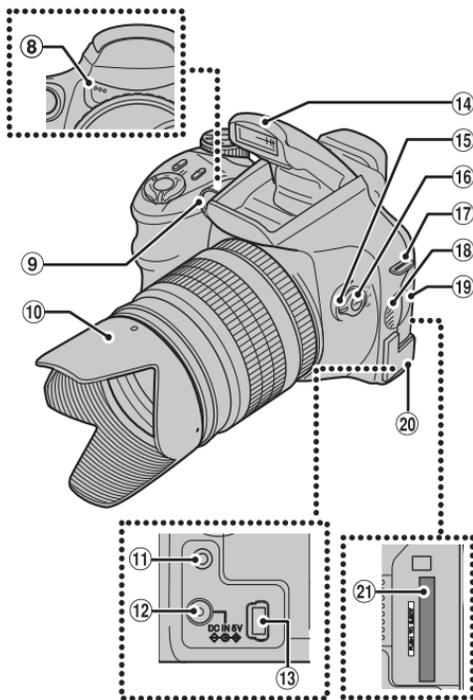


- ⑧ Microphone
- ⑨ AF-assist illuminator (p.41)/Self-timer lamp (p.89)
- ⑩ Lens hood
- ⑪ A/V OUT (Audio/Visual output) socket (p.134)
- ⑫ DC IN 5V (power input) socket (p.135)
- ⑬ USB socket (mini-B)
- ⑭ Flash (p.75)
- ⑮ Focus mode selector switch (p.32, 71, 72)
- ⑯ $\blacktriangleright \bullet \blacktriangleleft$ (One-touch AF) button (p.32, 72)
- ⑰ Strap mount (p.17)
- ⑱ Speaker
- ⑲ Slot cover (p.22)
- ⑳ Terminal cover
- ㉑ xD-Picture Card slot (p.22)

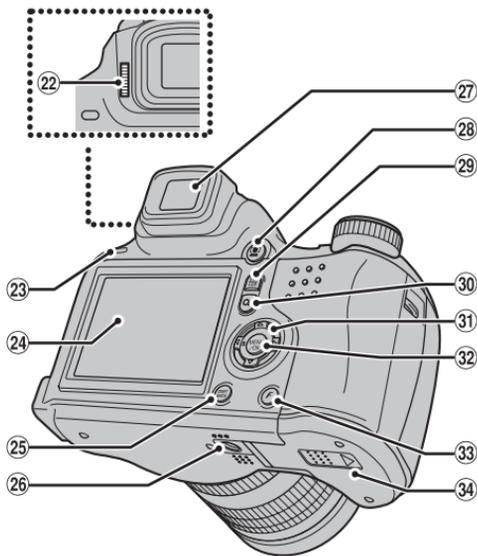

- ② Diopter adjustment dial
- ③ Indicator lamp (p.36)
- ④ LCD monitor
- ⑤ DISP (Display)/BACK button (p.31, 42, 44)
- ⑥ Tripod mount
- ⑦ Viewfinder (EVF)
- ⑧ Intelligent Face Detection button (p.37)
- ⑨ EVF/LCD (monitor selector) button (p.31, 33)
- ⑩ Q Digital zoom button (p.31, 41)
- ⑪ 4-direction (▲▼◀▶) button
- ⑫ MENU/OK button
- ⑬ Photo mode (**F**) button (p.31, 81, 99)
- ⑭ Battery cover (p.19)


Example of screen Text Display

Photography mode

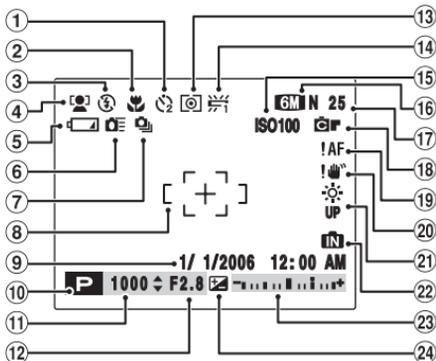

- ① Self-timer (p.88)
- ② Macro (close-up) (p.74)
- ③ Flash (p.75)
- ④ Intelligent Face Detection (p.37)
- ⑤ Battery level indicator (p.21)
- ⑥ High-speed shooting (p.92)
- ⑦ Continuous shooting (p.77)
- ⑧ AF frame (p.34)
- ⑨ Date/Time (p.25)
- ⑩ Photography mode (p.54)
- ⑪ Shutter speed (p.63)
- ⑫ Aperture (p.65)
- ⑬ Photometry (p.90)
- ⑭ White balance (p.91)
- ⑮ ISO 100 Sensitivity (p.85)
- ⑯ 6M N Quality mode (p.86)
- ⑰ Number of available frames (p.179)
- ⑱ FinePix COLOR (p.87)
- ⑲ AF warning (p.163)
- ⑳ Camera shake warning (p.163)
- ㉑ Increasing monitor brightness (p.80)
- ㉒ Internal memory (p.23)
- ㉓ Exposure compensation indicator (p.69)
- ㉔ Exposure compensation (p.69)

Playback mode

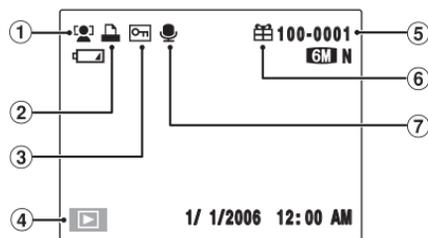


- ① Intelligent Face Detection (p.45)
- ② DPOF (p.101)
- ③ Protection (p.106)
- ④ Playback mode (p.44)
- ⑤ Frame number (p.127)
- ⑥ Present (p.44)
- ⑦ Voice memo (p.110)

FinePix S6000fd / FinePix S6500fd has internal memory that can store images without xD-Picture Card.  appears on the screen when the internal memory is active.

Attaching the Strap, Lens cap and Lens hood

Attaching the strap

1 Attach the strap to the strap mounts on the camera. Once you have attached both ends of the strap, check carefully to make sure that the strap is firmly secured.

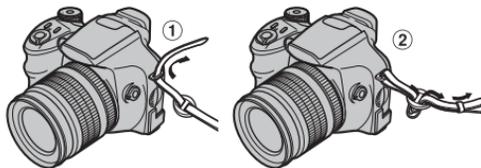

2 Pull the lens cap cord through the strap.



CAUTION


- Attach the strap correctly to prevent dropping the camera.
- Attach the lens cap cord to prevent losing the lens cap.

Attaching the lens cap

Attach the lens cap to the lens by pressing in on both sides of the cap.



MEMO

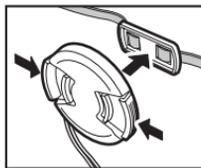


Make sure that the lens cap does not appear in your shot when taking a picture, attach it to the lens cap holder.


Attaching the lens hood

The lens hood is effective for reducing ghost images and flare in backlit scenes so that the camera provides crisp, clear shots.


- 1** Align the indicators on the camera and lens hood, and fit the lens hood to the lens.

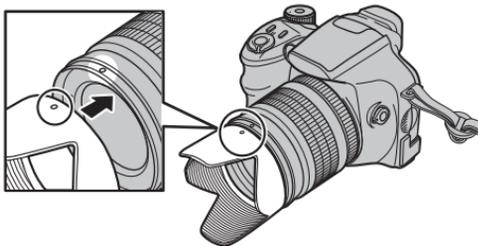

- 2** Turn the lens hood clockwise until it clicks.

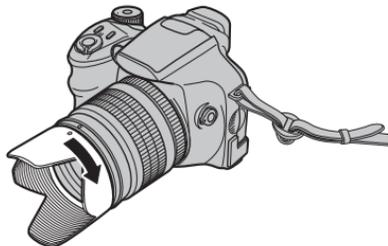

MEMO

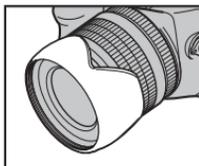

To store the lens hood into the soft case, attach the lens hood upside down.

Loading the Batteries

Batteries are required to operate the digital camera. At first, load the batteries in the camera.


Compatible batteries

AA-size alkaline batteries (4) or AA-size Ni-MH rechargeable batteries (4) (sold separately)




! CAUTION

- Never use the following types of batteries, as they could cause serious problems such as battery fluid leakage or overheating:
 1. Batteries with split or peeling outer casings
 2. Combinations of different types of batteries or new and used batteries together
- Do not use manganese or Ni-Cd batteries.
- Use the same brand and grade AA-size alkaline batteries as those supplied with the camera.

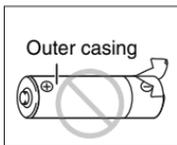

1 Open the battery cover.

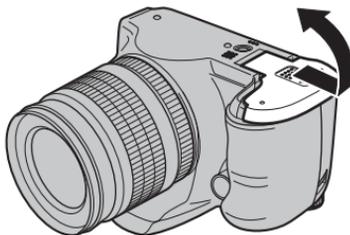

✓ CHECK


Check that the camera is turned off before opening the battery cover.

! CAUTION

- Do not open the battery cover while the camera is on. This could damage the **xD-Picture Card** or ruin the image files on the **xD-Picture Card**.
- Do not apply force to the battery cover.

Continued ➔


- 2** Load the batteries correctly as indicated by the polarity icons.

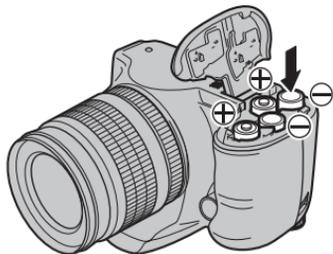

! **CAUTION**

Match the polarity icons (+ and -) of the batteries to those on the inside of the battery cover.

- 3** Press on the battery cover to push the batteries down. Slide the cover closed.

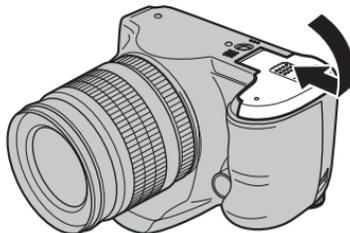

Checking the battery charge

Turn the camera on and check the battery charge.



- ① There is ample battery charge. (Not displayed)
- ② There is insufficient charge left in the batteries. The batteries will soon run out. Have a new set of batteries ready. (Lit red)
- ③ The batteries are depleted. The display will shortly go blank and the camera will stop working. Replace or recharge the batteries. (Blinking red)

! Notes on batteries

- Soil, such as fingerprints on the poles of the batteries, can shorten time for which the batteries can be used.
- The time for which AA-size alkaline batteries (referred to hereafter simply as alkaline batteries) can be used varies depending on the brand. Some brands of alkaline batteries may stop providing power more quickly than those supplied with the camera. Note also that due to their nature, the time for which alkaline batteries can be used decreases in cold conditions (0°C to +10°C/+32°F to +50°F). For this reason, it is better to use AA-size Ni-MH batteries.
- Due to the nature of the battery, the battery level warning (, ) may appear early when the camera is used in cold locations. Try warming the batteries in your pocket or a similar location before use.
- Depending on the battery type and the level of charge in the batteries, the camera may run out of power without first displaying a battery level warning. This is particularly likely to happen when batteries that have run out of charge once are re-used.
- Depending on the camera mode, the transition from  to  may occur more quickly.
- Use Fujifilm Battery charger (sold separately) to charge AA-size Ni-MH batteries.
- See p.157-158 for information on the batteries.
- When first purchased or if left unused for a long period, the amount of time which AA-size Ni-MH batteries can be used may be short. See p.158 for more information.
- Battery power consumption varies greatly depending on use. When you change to Playback mode from Photography mode,  may not occur, however,  may suddenly blink red and the camera may stop operation.

Loading the xD-Picture Card

Although you can store pictures in the camera's internal memory, you can store many more images on the **xD-Picture Card** (sold separately).

1 Open the slot cover.




CHECK

Check that the camera is turned off before opening the slot cover.

CAUTION

Do not open the slot cover while the camera is on. This could damage the **xD-Picture Card** or ruin the image files on the **xD-Picture Card**.

2 Insert an xD-Picture Card.

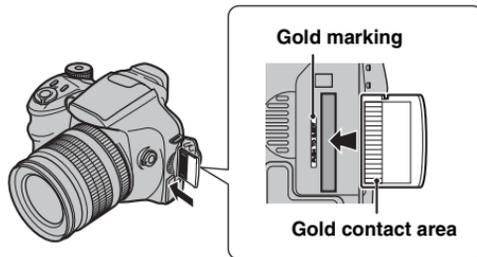


Align the gold marking with the gold contact area.

3 Close the slot cover.



How to replace the xD-Picture Card

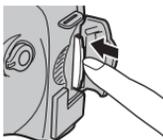

Push the **xD-Picture Card** into the slot and then slowly remove your finger. The lock is released and the **xD-Picture Card** is pushed out.


CAUTION

- When storing **xD-Picture Cards**, make sure that they are kept out of the reach of children. An **xD-Picture Card** could be swallowed and cause suffocation. If a child swallows an **xD-Picture Card**, seek medical attention or call emergency number right away.
- If the **xD-Picture Card** is oriented incorrectly, it will not go all the way into the slot. Do not apply force when inserting an **xD-Picture Card**.
- Note that the **xD-Picture Card** may spring out if you release your finger quickly from the card immediately after the lock is released.
- Operation of this camera is only guaranteed when it is used with **FUJIFILM xD-Picture Card**.
- See p.161 for information on the **xD-Picture Card** and the Internal Memory.

MEMO

- The size of an image file varies depending on the subject. For this reason, the number recorded may not represent the actual number of frames.
- See p.179 for information on the standard number of available frames.

About internal memory

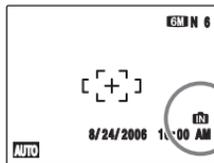

FinePix S6000fd / FinePix S6500fd has internal memory that can store images without **xD-Picture Card**. **iM** appears on the screen when internal memory is active.

When an xD-Picture Card (sold separately) is inserted

[Record images]: Record images to an **xD-Picture Card**.

[Playback images]: Playback images in an **xD-Picture Card**.

When an xD-Picture Card (sold separately) is not inserted

[Record images]: Record images to internal memory.

[Playback images]: Playback images in internal memory.

About images in the internal memory

Images held in the camera's internal memory may be corrupted or erased due to problems such as camera faults. Save your important data to another media (i.e., DVD-R, CD-R, CD-RW, hard disk, etc.).


It is possible to transfer saved images on the internal memory to an **xD-Picture Card** (→p.108).

Turning On and Off

Turning the camera on in Photography mode

Set the Power switch to  to turn the camera on in Photography mode.


Set the Power switch to OFF to turn the camera off.

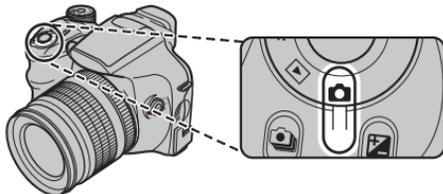

Turning the camera on in Playback mode

Set the Power switch to  to turn the camera on in Playback mode.

Set the Power switch to OFF to turn the camera off.

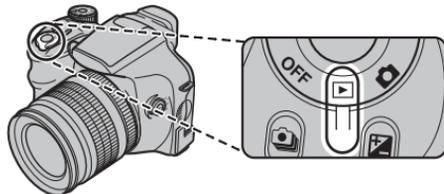

Setting the language, date, and time

When using the camera for the first time after purchasing, the language, date, and time are cleared. Set the language, date, and time.

1 言語/LANG. screen appears when turning the camera on.




① Press ▲, ▼, ◀, or ▶ to select the language.



② Press MENU/OK to confirm the setting.

2 Set the date and time.

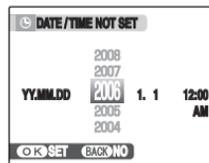

① Press ◀ or ▶ to select Year, Month, Day, Hour, or Minute.



② Press ▲ or ▼ to correct the setting.



MEMO

- Holding down ▲ or ▼ changes the numbers continuously.
- When the time displayed passes “12”, the AM/PM setting changes.

Continued ➔

3 Change the date format.



① Press ◀ or ▶ to select the date format.



② Press ▲ or ▼ to set the format.



③ Always press MENU/OK after the settings are completed.

Date format

ex. August 24, 2006

YY.MM.DD: 2006.8.24

MM/DD/YY: 8/24/2006

DD.MM.YY: 24.8.2006

MEMO

START MENU screen also appears when the batteries have been removed and the camera has been left for a long period. Once the AC power adapter has been connected or the batteries have been installed for 2 hours or more, the camera settings will be retained for roughly 6 hours even if both sources of power are removed.

Auto power off function

When the Auto power off function is active, if the camera is left unused for 2 or 5 minutes, this function turns the camera off (→p.130). To turn the camera back on, set the Power switch to OFF briefly and then back to  or .

Correcting the Date and Time

1 Open the SET-UP menu.



① Press MENU/OK to open the menu.




② Press ▲ or ▼ to select **SET** SET-UP.



③ Press ►.

2 Display the DATE/TIME screen.

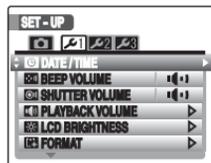

① Press ◀ or ▶ to select **[]**.



② Press ▼ to move to menu item.




③ Press ▲ or ▼ to select **[]** DATE/TIME.



④ Press ►.
See "2 Set the date and time." (→p.25).

Selecting the Language

1 Open the SET-UP menu.

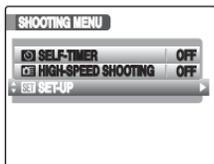

① Press MENU/OK to open the menu.




② Press ▲ or ▼ to select **SET** SET-UP.



③ Press ►.

2 Display the 言語/LANG. screen.

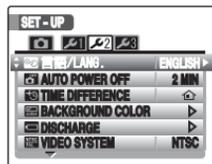

① Press ◀ or ▶ to select 言語/LANG.



② Press ▼ to move to menu item.



③ Press ▲ or ▼ to select 言語/LANG..




④ Press ►.

See “1 言語/LANG. screen appears when turning the camera on.” (→p.25).

Basic Operation Guide

This section describes the camera's buttons and functions.

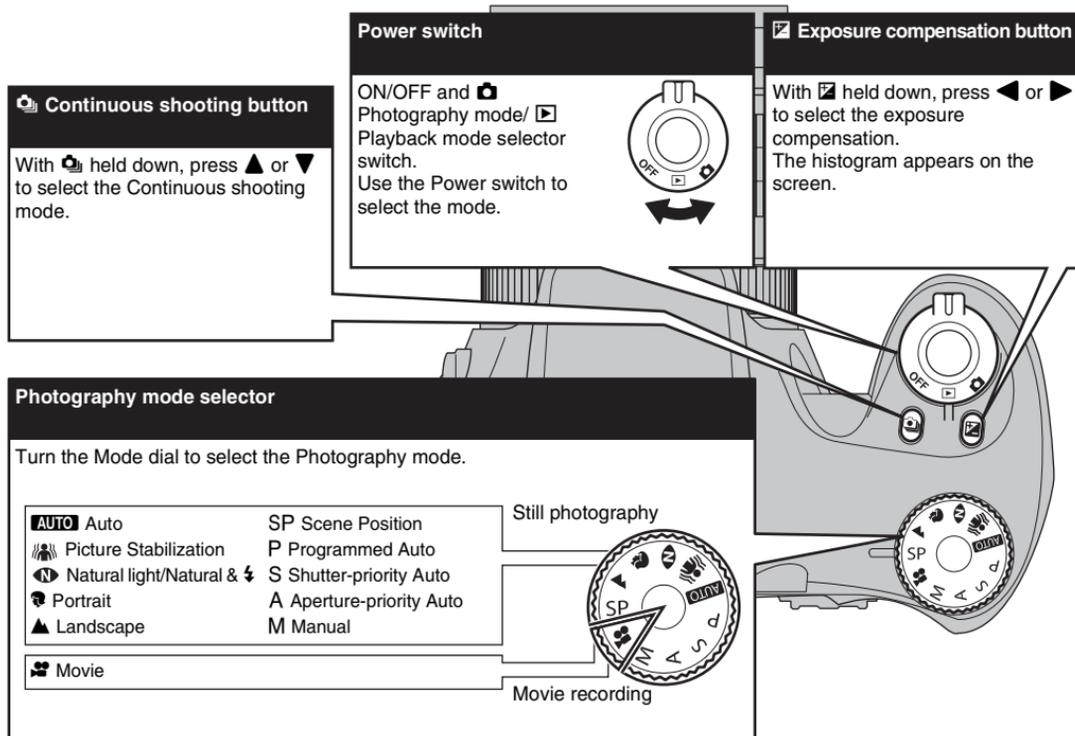

Diopter adjustment dial

Makes the image in the viewfinder easier to see. Set the dial to the position where the AF frame appears sharpest.

Intelligent Face Detection button

Pressing this button allows you to focus on people's faces.

EVF/LCD (monitor selector) button

Pressing the EVF/LCD toggles between the viewfinder (EVF) and the LCD monitor. Use whichever mode is best suited to your shot.

◀▶ button

Photography: ◀ Turns Macro (M) on and off.
▶ Sets the flash (⚡).
Playback: Change frame or movie frame advance.

Q Digital zoom button

Selecting Digital zoom mode (2x).


DISP/BACK button

DISP: Press this button to select the screen display.
BACK: Press this button to stop a procedure midway through.

Photo mode *f* button

Photography: Select the sensitivity, quality mode and FinePix COLOR settings.
Playback: Specify the automatic playback and print order (DPOF) settings.

Continued ➔

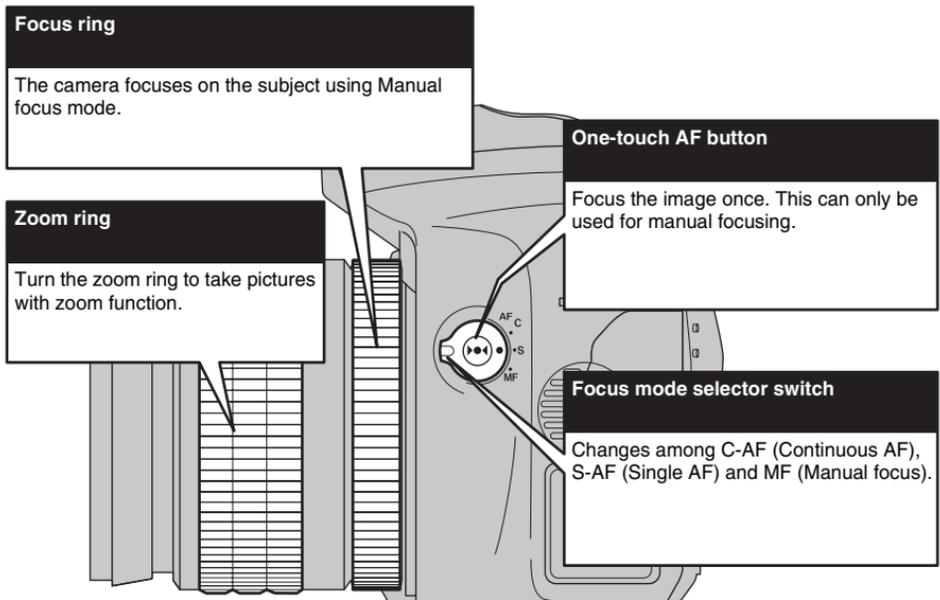


Taking Pictures (AUTO Mode)

This section describes the basic operations.

1 Turn the camera on.

- ① Set the Power switch to .

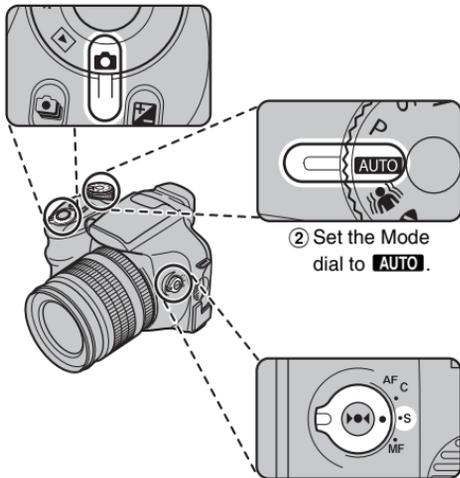

- ② Set the Mode dial to **AUTO**.

- ③ Set the Focus mode selector switch to S-AF.


CHECK

- **Focal range**
Wide-angle: approx. 40 cm (1.3 ft.) to infinity
Telephoto: approx. 2 m (6.6 ft.) to infinity
- Select  Macro mode to take close-up shots (→p.74).

2 Switch the display.

Press the EVF/LCD to alternate between the viewfinder (EVF) and the LCD monitor.

Diopter adjustment dial

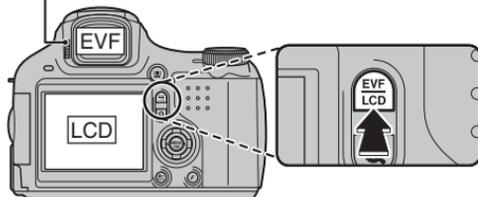

MEMO

- When the AF frame in the viewfinder (EVF) is difficult to see, adjust the viewfinder using the Diopter adjustment dial.
- The EVF/LCD selection is retained even when the camera is off or the mode setting is changed.

Continued ➔

Holding the camera correctly

Brace your elbows against your sides and hold the camera with both hands.

Using the viewfinder (EVF) allows for a steady arm position, preventing picture blur.




Do not cover the lens or flash with your fingers.

! CAUTION

- Moving the camera while shooting gives a blurred picture (camera shake). Hold the camera steadily with both hands.
- If the lens or flash is obscured by your fingers or the strap, subjects may be out of focus or the brightness (exposure) of your shot may be incorrect.

3 Focus on the main subject in the AF frame and press the shutter button down halfway.

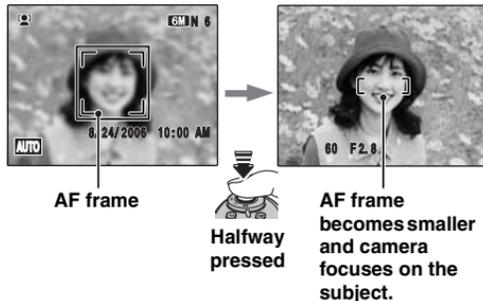

AF frame

Halfway pressed

AF frame becomes smaller and camera focuses on the subject.

✓ CHECK


- **Focus on the subject**
Double beep is heard
Indicator lamp lit green
- **Not focus on the subject**
No sound
!AF indicated
Indicator lamp blinking green

📖 MEMO

- When setting the Power switch to mode for the first time after purchasing, the Intelligent Face Detection function is set.
- The shutter button has a halfway point at which focus and exposure are automatically optimized before taking the picture by pressing fully down.
- When pressing the shutter button halfway, a lens operation sound may be heard.

Flash


Pressing the shutter button halfway when the flash is not popped up, camera pops the flash up as required by the shooting conditions.

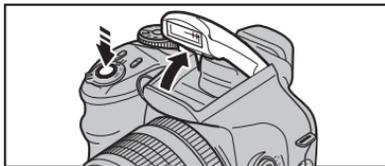

F appears on the screen.

Change the flash mode when you want to take pictures without flash. See p.75 for information on flash.

4 Press the shutter button fully.

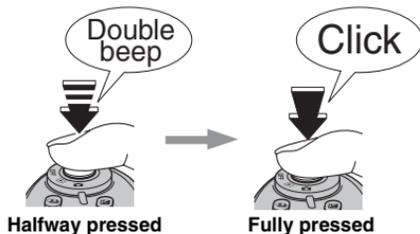

! CAUTION

When taking a picture using the flash, the image may disappear and go dark briefly due to flash charging. The indicator lamp blinks orange during charging.

📄 MEMO

- When the subject is not in the AF frame, use AF/AE lock to take the picture (→p.39).
- When pressing the shutter button down fully in one motion, the camera takes the picture without the AF frame changing.

Compatible filters

58 mm-diameter commercial available filters can be attached.

! CAUTION


- Do not use more than one filter at a time.
- The lens cap (included) may not be used when attaching the filter.

! CAUTION

- The image shown on the screen before the picture is taken may differ in brightness, color, etc. from the image actually recorded. Play back the recorded image to check it (→p.44).
- When selecting a slow shutter speed that will cause camera shake, ! appears on the screen. Use flash or a tripod.
- See p.163-166 for information on warning displays. See “Troubleshooting” (→p.168-174) for more information.

Indicator lamp display

The indicator lamp lights or blinks when pressing the shutter button, etc. The indicator lamp shows the camera status.

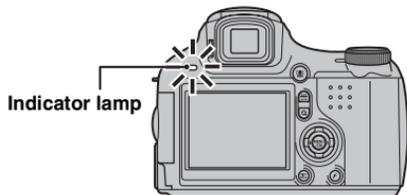

Display	Status
Lit green	Locking the focus
Blinking green	Camera shake warning, AF warning, or AE warning (ready to shoot)
Blinking green and orange alternately	Recording to xD-Picture Card or internal memory (ready to shoot)
Lit orange	Recording to xD-Picture Card or internal memory (not ready)
Blinking orange	Charging flash (flash will not fire)
Blinking red	<ul style="list-style-type: none"> • Warnings for xD-Picture Card and internal memory Card not formatted, incorrect format, memory full, xD-Picture Card or internal memory error • Lens operation error



MEMO

Detailed warning messages appear on the screen (→p.163-166).


Using Intelligent Face Detection when taking pictures

Intelligent Face Detection allows you to focus on and adjust the brightness of people's faces. Intelligent Face Detection is effective with the camera held horizontally or vertically.

Available Photography modes: **AUTO**, , , , , ,  OFF, , P, S, A, M

Available Photography modes: S-AF (Single-AF)

- ① To activate Intelligent Face Detection press  once.
To turn Intelligent Face Detection off, press  again.

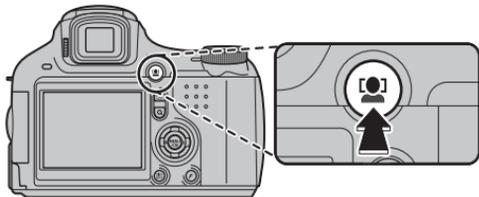

Green frame

When there are multiple people in the frame, Intelligent Face Detection will set a green frame around the face nearest to the center of the picture. This face has focusing priority.

! CAUTION

- If the camera or subject move as the picture is taken, the subject's face may move out of the Intelligent Face Detection frame.
- When the camera is detecting multiple faces, the green frame is set around the face near the center. If you want to focus on another subject, move the camera so that the new subject is in the center of the screen. If focus is still not achieved, press  (Intelligent Face Detection) to turn off the function, and take the picture using AF/AE lock (→p.39). Intelligent Face Detection can focus on a face in a white frame providing the subjects in the green and white frame are of the same focal length.
- Pressing the shutter button halfway with Intelligent Face Detection off, the focus will be on the center of the frame.

Continued ➔



- ② Press the shutter button down fully to take pictures.

Subjects not suitable for Intelligent Face Detection

Intelligent Face Detection automatically focuses on a face(s) turned towards the camera. However, difficulties will occur with the Intelligent Face Detection mode in the following situations:

- The face is obscured by glasses, sunglasses, a hat or hair.
 - A person turned sideways, or who has their head tilted
 - The subject is too far away to recognize a face
- Intelligent Face Detection will not work in cases where the subject is standing on his/her head, is not a person (pet or other animal), or if the camera is not held correctly.
-

Taking pictures with the focus and exposure locked



In the above composition, the subjects are not in the AF frame. Pressing the shutter button halfway at this point will result in the subjects being out of focus.

AF/AE lock is useful:

Use AF/AE lock to guarantee best result when shooting a subject that is not suited to autofocusing (→p.40).

! CAUTION

When taking a picture in AF/AE lock, cancel Intelligent Face Detection.

Using AF/AE lock

- 1 Move the camera slightly so that one of the subjects is in the AF frame.



- 2 Press the shutter button down halfway to focus on the subject.



Halfway pressed



Continued →

- 3 Continue to hold the shutter button down halfway. Move the camera back to the original image and press the shutter button fully.**



Fully pressed

 **MEMO**


- AF/AE lock can be applied repeatedly before the shutter is released.
- On FinePix S6000fd / FinePix S6500fd, pressing the shutter button down halfway locks the focus and exposure settings (AF and AE lock).

Subjects not suitable for autofocus

FinePix S6000fd / FinePix S6500fd uses a high-precision autofocus mechanism. However, it may have difficulty focusing on the following:



Very shiny subjects such as a mirror or car body

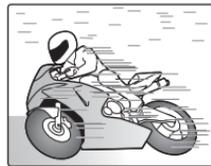

Fast moving subjects


- Subjects photographed through glass
- Subjects that do not reflect well, such as hair or fur
- Subjects with no substance, such as smoke or flames
- Dark subjects
- Subjects with little or no contrast between the subject and the background (such as subjects dressed in the same color as the background)
- Shots where another high-contrast object (not the subject) is close to the AF frame and is either closer or further away than your subject (such as a shot of someone against a background with strongly contrasting elements)

For such subjects use AF/AE lock (→p.39) or "MF" Manual focus mode (→p.72).

AF-assist illuminator

Use this illuminator to focus on the subject in dimly lit conditions.

When pressing the shutter button down halfway, the camera fires the AF-assist illuminator (green) while focusing on your subject.

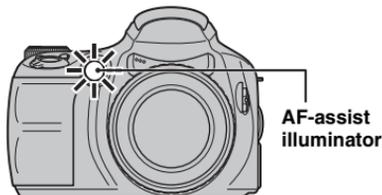


MEMO

- Even when the AF-assist illuminator fires, the camera may have difficulty focusing in some conditions.
- The camera focuses most easily when a picture is taken at a distance of around 4.5 m (14.8 ft.) with wide-angle and 2.0 m (6.6 ft.) with telephoto.
- Even though there is no danger to safety, do not expose it directly in someone's eyes.
- When using the AF-assist illuminator in Macro mode, the camera may have difficulty focusing to take close-up shots.
- See p.122 for information on turning the AF-assist illuminator off.
- AF-assist illuminator does not fire in , , , , , , or  mode.

Using zoom function

Turn the zoom ring to take pictures with zoom function. The zoom bar appears on the screen during zooming.

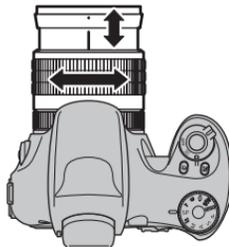

CHECK

Optical zoom focal length (35 mm camera equivalent)


Approx. 28 mm to 300 mm Max. zoom scale: 10.7x



Press **Q** (→p.15, 31) to change to Digital zoom mode (2x).

Use the zoom ring to adjust digital zoom operation as well as optical zoom.

Continued ➔

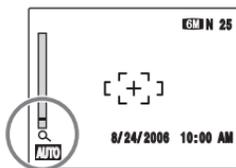

CHECK

When using digital zoom, **Q** appears in the bottom left corner of the screen and the zoom bar color changes.


MEMO

Press **Q** again to cancel digital zoom.

Adjusting the shot composition

Select the screen display.

Press DISP/BACK to change the screen display.

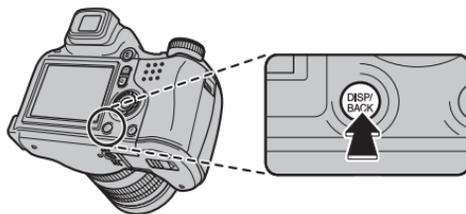

Text displayed



No text displayed



Post shot assist window displayed



Framing guideline displayed

Best framing

Position the main subject at the intersection of two lines in this frame or align one of the horizontal lines with the horizon. Use this frame as a guide to the subject's size and the balance of the shot while composing a shot.



MEMO


Always use AF/AE lock when composing a shot. The image may be out of focus if AF/AE lock is not used.

Post shot assist window

Up to the last 3 photographed images appear on the post shot assist window. This serves as a guide for taking other shots with similar compositions.



Format of post shot assist window

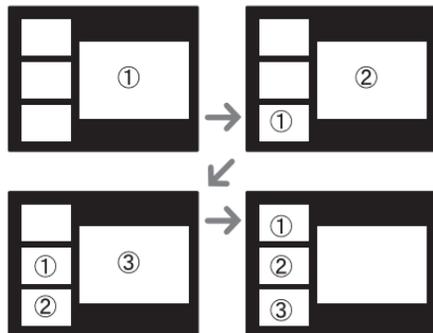

MEMO

Any of the following clears the image in the post shot assist window:

- Setting the camera to Playback mode
- Turning the camera off
- Using the PictBridge function (→p.136)
- Connecting to a PC (→p.146) etc.

CAUTION


Post shot assist window does not appear when CCD-RAW (→p.128) is set.

Viewing the Images

Playback your images to check them. For important photographs, always take a test shot and view the image to make sure that the camera is working normally.

Setting the camera to Playback mode

Set the Power switch to  during shooting to change to Playback mode.

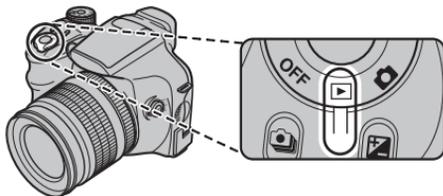

When the camera is off, set the Power switch to  to turn the camera on in Playback mode.

MEMO

Set the Power switch to  to play back the last shot.


CAUTION Still images viewable on FinePix S6000fd / FinePix S6500fd

This camera will display still images recorded on FinePix S6000fd / FinePix S6500fd or still images (excluding some uncompressed images) recorded on any FUJIFILM digital camera that supports xD-Picture Cards. Clear playback or playback zooming may not be possible for still images shot on cameras other than FinePix S6000fd / FinePix S6500fd.

When playing back images shot with a camera other than FinePix S6000fd / FinePix S6500fd,  a present icon appears on the screen.

Select the screen display.

Press DISP/BACK during Playback mode to change the screen display.

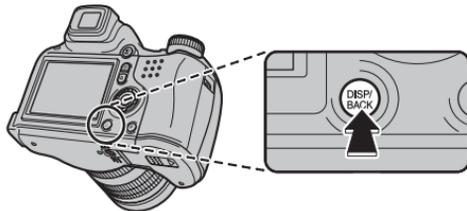

Text displayed



No text displayed



Sorting by date



Multi-frame playback

Single-frame playback



To select the required image:

Press ◀: last image

Press ▶: next image

Intelligent Face Detection

When playing back images taken with Intelligent Face Detection (→p.37) (IFD) appears on the screen), press  (Intelligent Face Detection). A frame appears around the face that detected by FinePix S6000fd / FinePix S6500fd. Press  Intelligent Face Detection to alternate the detected face. The images shot with a camera other than FinePix S6000fd / FinePix S6500fd, the frame does not appear.

Selecting images



To select images on the thumbnail lists screen, hold down ◀ or ▶ for 1 second during playback. When releasing ◀ or ▶, camera returns to single-frame playback.


Playback zoom

1 Zoom in / Zoom out.

To zoom in an image during single-frame playback:

▼ button (Zoom out)

▲ button (Zoom in)

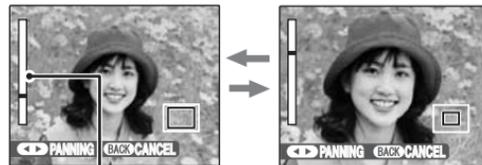

Zoom bar



Press ▲ or ▼ to zoom in or out on an image.



MEMO

Press DISP/BACK to cancel playback zoom.

Continued ➔

2 Display another part of the image.



Navigation screen
(Current displayed
image)



- ① Press ◀ or ▶ to move to another part of the image.



- ② Press ▲, ▼, ◀, or ▶ to display another part of the image.




MEMO

Press DISP/BACK to return to the zoom setting.

Zoom scales

Quality mode	Max. zoom scale
6M (2848 × 2136 pixels)	Approx. 4.5×
3:2 (3024 × 2016 pixels)	Approx. 4.7×
3M (2048 × 1536 pixels)	Approx. 3.2×
2M (1600 × 1200 pixels)	Approx. 2.5×

Intelligent Face Detection

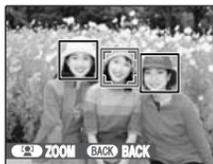

The image taken using Intelligent Face Detection (→p.37) (👤 appears on the screen). Press 📄 (Intelligent Face Detection) to alternate between detected faces. Press ▲ or ▼ to display the selected face zoomed in or out. Press ◀ or ▶ to move to another part of the image. Press ▲, ▼, ◀ or ▶ to display another part of the image.



Multi-frame playback

Multi-frame playback screen (9 frames) appears on the screen. Select required frame from the 9 frames.



- ① Press ▲, ▼, ◀, or ▶ to move the cursor (colored frame) to the selecting frame. Press ▲ or ▼ repeatedly to jump to the next page.



- ② Press MENU/OK to enlarge the image.

Sorting by date

In sorting by date mode, you can view all images taken on the same day.



- 1 Press ▲, ▼, ◀, or ▶ to move the cursor (colored frame) to the selecting frame.



- 2 Press MENU/OK to enlarge the image.

Selecting the date



- 1 Press ▲, ▼, ◀, or ▶ to move the cursor (colored frame) to ◀ on the upper left frame.



- 2 Press ◀ to display the selecting date.




- 3 Press ▲ or ▼ to move the cursor (colored frame) to select the date. Press ▲ or ▼ repeatedly to jump to the next page.



- 4 Press ▶.

Use this mode to erase unnecessary images or movies to have ample free space on the **xD-Picture Card** or internal memory. Your camera calls images "frames".

Selecting **FRAME** or **ALL FRAMES**

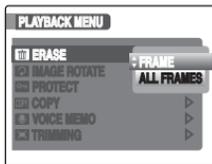

- 1 Press MENU/OK to open the PLAYBACK MENU.



- 2 Press ▲ or ▼ to select  ERASE.



- 3 Press ►.




- 4 Press ▲ or ▼ to select **FRAME** or **ALL FRAMES**.



- 5 Press MENU/OK to confirm the setting.

Erasing one frame at a time (**FRAME**)

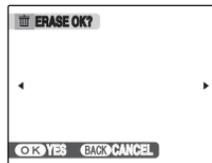

- 1 Press ◀ or ▶ to select the erasing frame (file).



- 2 Press MENU/OK to erase the currently displayed frame (file).



MEMO

To erase another frame (file), repeat above steps. When erasing frames (files) is completed, press DISP/BACK.



CAUTION


Pressing MENU/OK repeatedly erases consecutive frames (files). Take care not to erase a frame (file) by mistake.

Erasing all frames (ALL FRAMES)



Press MENU/OK to erase all the frames (files).

MEMO

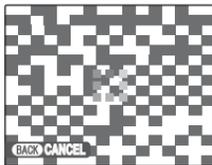

Press DISP/BACK to cancel erasing of all the frames (files). Some unprotected frames (files) will be left unerased.

MEMO

- When using an **xD-Picture Card**, the images in the **xD-Picture Card** are erased. When not using an **xD-Picture Card**, the images in the internal memory are erased.
- Protected frames (files) cannot be erased. Unprotect the frames (files) before erasing them (→p.106).
- If "DPOF SPECIFIED. ERASE OK?" or "DPOF SPECIFIED. ERASE ALL OK?" appears, press MENU/OK again to erase the frames (files).

CAUTION


Erased frames (files) cannot be recovered. Back up important frames (files) onto your PC or another media.

Using the Photography Functions — Procedure of Setting

Specify the camera settings for taking pictures to get the best result. A general guide is given below.

1 Select the Photography mode.

Turn the Mode dial to select the Photography mode. The camera settings are tailored to the scene being shot.

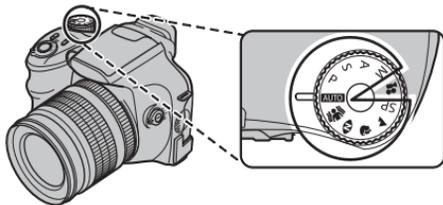


AUTO Auto	This is the easiest mode for taking pictures (→p.54).
 Picture Stabilization	Used for selecting a fast shutter speed that reduces camera shake and moving-subject blurring (→p.54).
 Natural light  Portrait  Landscape SP Scene position	Select the best Shooting mode for the scene being shot (→p.55-61).
P Program AE S Shutter-priority AE A Aperture-priority AE	Used for changing the aperture or shutter speed setting so that the action is frozen, the flow of the motion is conveyed, or the background is out of focus (→p.62-65).
M Manual	All manual settings for taking pictures (→p.67).

! CAUTION

When you have been used for long periods in places subject to extreme temperature rises, it will lower your image quality and streaking may also be visible in your images. If this occurs, turn the camera off several times to prevent heating the camera.

2 Specify the photography settings.

Pressing buttons or selecting menu allows you to specify photography functions. You can obtain the best result for shooting.

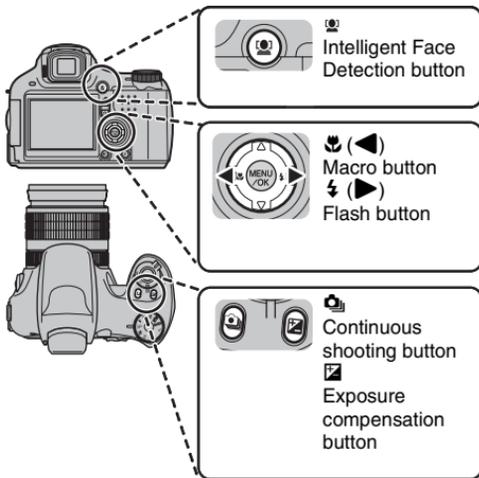



■ Specifying functions using buttons

Intelligent Face Detection	Pressing this button allows you to focus on people's faces (→p.37).
Macro	Used for close-up shots (→p.74).
Flash	Used for shots in dark locations or for backlit subjects, etc. (→p.75).
Continuous	Used to take a series of continuous shots or to use auto bracketing (with exposure compensation) (→p.77).
Exposure compensation	Used for changing the image brightness (→p.69).

Continued ➔



■ Specifying functions using **F-MODE MENU** (**F** button)

 ISO	Use to specify required sensitivity setting (→p.85).
 QUALITY	Use to specify required image size (→p.86).
 FinePix COLOR	Use to specify required color tone (→p.87).

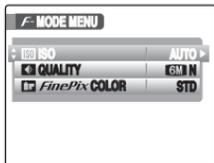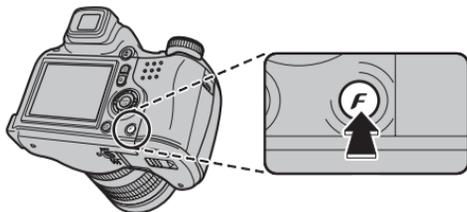

■ Specifying functions using SHOOTING MENU (MENU/OK button)

 SELF-TIMER	Used in situations such as group shots where the photographer is included in the shot (→p.88).
 PHOTOMETRY	Use to select light metering method (set the Mode dial to P, S, A or M. When the Mode dial is set to M, Intelligent Face Detection is deactivated) (→p.90).
 WHITE BALANCE	Use to adjust the color tone (only P, S, A, M) (→p.91).
 HIGH-SPEED SHOOTING	Use to focus the shot quickly (→p.92).
 AF MODE	Use to specify focusing mode (set the Mode dial to P, S, A, or M, to deactivate Intelligent Face Detection) (→p.93).
 SHARPNESS	Use this setting to soften or emphasize the outline and quality of an image (only P, S, A, M) (→p.95).
 FLASH (Brightness Adjustment)	Use this setting to adjust the amount of light emitted by the flash to suit the photography conditions or to achieve a desired effect (only P, S, A, M) (→p.95).
 BRACKETING	Use this setting to photograph the same image with different exposure settings (only P, S, A, M) (→p.96).

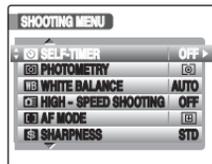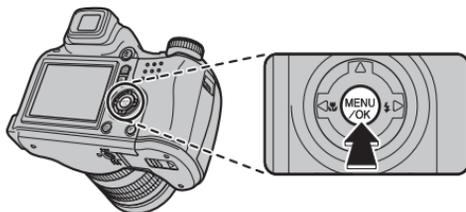

* This example of display appears when Intelligent Face Detection is off.

Setting the Shooting Mode

You can select the most suitable setting according to the subject by selecting one of the Shooting modes.


AUTO Auto

This is the easiest mode for providing crisp and clear shots.

Use this mode for ordinary photography.

Camera specifies all settings other than **F**-MODE (Quality and FinePix COLOR) automatically.

Set the Mode dial to **AUTO**.

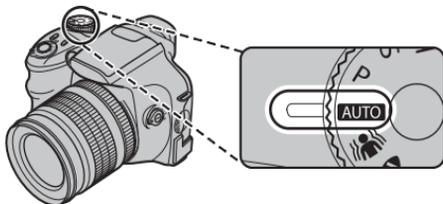

CHECK

- Available flash modes:
AUTO, , , 
- Only AUTO can be selected for the **ISO** ISO (sensitivity) setting.

Picture Stabilization

Use this mode to select a fast shutter speed that reduces camera shake and moving-subject blurring.



Set the Mode dial to .

CHECK

- Available flash modes:
AUTO, , , 
- Only AUTO can be selected for the **ISO** ISO (sensitivity) setting.

Natural Light / **Natural & ζ**

Use this mode to select  NATURAL LIGHT or  NATURAL & ζ .

Select the  SCENE POSITION setting in the SHOOTING MENU.




Set the Mode dial to .

CHECK

Only AUTO can be selected for the  ISO (sensitivity) setting.

Selecting NATURAL LIGHT / **NATURAL & ζ** .

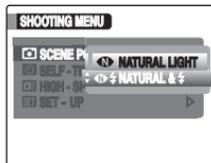

-  ① Press MENU/OK to open the menu.
-  ② Press  or  to select  SCENE POSITION.
-  ③ Press .
-  ④ Press  or  to select  NATURAL LIGHT or  NATURAL & ζ .
-  ⑤ Press MENU/OK to confirm the setting.

Continued 

NATURAL LIGHT

This mode produces beautiful images that retain the natural ambience when shots are taken in low-light conditions.

This mode is also ideal for shooting indoor or situations where the flash cannot be used.



Camera sets the high-sensitivity setting when selecting the Natural light mode. This mode is effective for reducing camera shake and moving-subject blurring when taking pictures in low-light conditions.

CHECK

Flash cannot be used in the Natural light mode.

NATURAL &

This mode shoots 2 images continuously without flash and with flash. Shooting with flash allows you to take a picture of a main subject brightly. Shooting without flash produces beautiful images that retain the natural ambience. This mode is useful for shooting 2 different types of pictures at the same time.



When pressing the shutter button, first picture is taken without flash and next picture is taken with flash. Always 2 pictures are taken per 1 shot. Do not move the camera until the shooting ended.

MEMO

This mode helps to avoid failed shots that may occur when using other Shooting modes when taking a picture against the sun, etc.

CHECK

- Flash fires automatically. Do not use this mode at situations where the flash cannot be used.
- Available flash modes , .

CAUTION

- When there is insufficient space on the **xD-Picture Card** or internal memory for 2 shots, a picture cannot be taken.
- Continuous shooting is disabled when setting .
- When setting , CCD-RAW (→p.128) cannot be set.

Portrait

Use this mode for photography to get beautiful skin tones and soft overall tone.



Set the Mode dial to .



CHECK

- Available flash modes
 AUTO, , , , , 
- Only AUTO can be selected for the **ISO** ISO (sensitivity) setting.

Landscape

Use this mode for shooting scenery in daylight and provides crisp, clear shots of scenery such as buildings and mountains.



Set the Mode dial to .



CHECK

- Flash cannot be used in the Landscape mode.
- Only AUTO can be selected for the **ISO** ISO (sensitivity) setting.

SP Scene Position

This mode provides the best scene position setting for the scene being shot. Choose from 10 types of Shooting modes.

The Shooting mode is selected from  SCENE POSITION in SHOOTING MENU.



Set the Mode dial to SP.

CHECK

- See p.76 for information on the available flash modes.
- Only AUTO can be selected for the  ISO (sensitivity) setting.
-  F-CHROME (→p.87) in  FinePix COLOR cannot be set.

■ Selecting Scene position setting



① Press MENU/OK to open the menu.



② Press  or  to select  SCENE POSITION.



③ Press .



④ Press  or  to select the setting.



⑤ Press MENU/OK to confirm the setting.

SPORT

Use this mode to take pictures of a moving subject. It gives priority to faster shutter speeds.



CHECK

When setting  Sport mode, the camera sets to  High-speed shooting mode (→p.92) automatically.

NIGHT

Use this mode for shooting evening and night scenes.

A picture is taken with a slow shutter of up to 4 seconds.



CHECK

Use a tripod to prevent camera shake, because a picture is taken with a slow shutter.

FIREWORKS


Use this mode to shoot fireworks. It is effective for taking more vivid shots of fireworks with a slow shutter.



CHECK

- Flash cannot be used in the Fireworks mode.
- Shutter speed setting: 1/2 sec. to 4 sec.
- Use a tripod to prevent camera shake in the Fireworks mode.

Selecting the exposure time setting

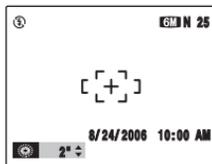

Press  or  to select the exposure time.

SUNSET

Use this mode to shoot sunset, making the colors more vivid.



SNOW

Use this mode to prevent darkening images and provide crisp, clear shots, when shooting at snowy scene where the whole screen appears white.



BEACH

Use this mode to prevent darkening images and provide crisp, clear shots, when shooting at beach under strong sunlight.



MUSEUM

Use this mode for taking pictures in places such as museum where the use of flash and making an operation sound and a shutter sound are restricted.

Flash mode is forcibly set to Suppressed flash, and operation sound, shutter sound, and the AF-assist illuminator/self-timer lamp are off.



MEMO

Check whether photography is permitted before using this mode.

PARTY

Use this mode for shooting at indoor wedding and party.

This mode produces beautiful images that retain the natural ambience when shots are taken in low-light conditions.



* FLOWER

Use this mode to take clear close-up shots when zooming up a flower. It is effective for taking more vivid shots of flower petal.



CHECK

- Flash cannot be used in the Flower mode.
- Focal range
Wide angle:
Approx. 1 cm to 2.0 m (0.4 in. to 6.6 ft.)
Telephoto:
Approx. 90 cm to 2.0 m (3.0 ft. to 6.6 ft.)

TEXT

Use this mode to shoot documents and white board. It is effective for taking clearer shots of letters.



CHECK

- Focal range
Wide angle:
Approx. 1 cm to 2.0 m (0.4 in. to 6.6 ft.)
Telephoto:
Approx. 90 cm to 2.0 m (3.0 ft. to 6.6 ft.)

P Program AE

This is an automatic mode to specify the settings except for the shutter speed and aperture setting.

This is a simple way to take pictures the same as the S Shutter-priority Auto and A Aperture-priority Auto modes (Program shift).




Set the Mode dial to P.

Photography functions:

-  PHOTOMETRY (→p.90)
-  WHITE BALANCE (→p.91)
-  AF MODE (→p.93)
-  SHARPNESS (→p.95)
-  FLASH (→p.95)
-  BRACKETING (→p.96)

Program shift

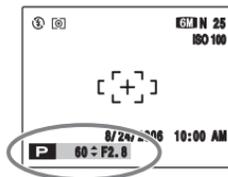

Select different shutter speed and aperture setting combinations without changing the exposure setting.

CHECK


Available flash modes

AUTO, , , , 

MEMO

- The shutter speed and aperture setting appear in yellow when the camera is in Program shift mode.
- Any of following cancels Program shift:
 - Changing the Mode dial setting
 - Switching the flash setting
 - Setting the camera to Playback mode
 - Turning the camera off

CAUTION

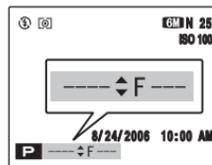

- When the brightness of the subject is outside the camera's brightness metering range, "----" appears as the shutter speed and aperture setting on the screen.

- Program shift can be used when  SUPPRESSED FLASH (→p.75) is set in flash mode.

S Shutter Priority AE

This is an automatic mode to set the shutter speed. Use this mode to freeze a moving subject (fast shutter speed) or convey the impression of movement (slow shutter speed).



Set the Mode dial to S.

Photography functions:


- PHOTOMETRY (→p.90)
- WHITE BALANCE (→p.91)
- AF MODE (→p.93)
- SHARPNESS (→p.95)
- FLASH (→p.95)
- BRACKETING (→p.96)

CHECK

Available flash modes



■ Setting the shutter speed

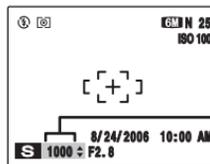

Shutter speed



- ① Press or to select the shutter speed.



- ② Press the shutter button to take pictures.

CHECK

Shutter speed setting


Wide-angle:

4 sec. to 1/4000 sec. in 1/3 EV increments

Telephoto:


4 sec. to 1/2000 sec. in 1/3 EV increments

! CAUTION

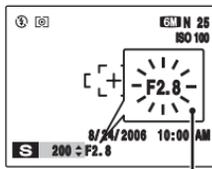

Lit red


When the correct exposure cannot be obtained with selected shutter speed, the aperture setting appears in red. When this occurs, adjust the shutter speed again.

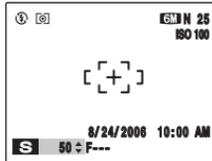

When the brightness of the subject is outside the camera's brightness metering range, "F---" appears as the aperture setting. When this occurs, press the shutter button down halfway to measure the light level again.

Shutter speed

When shooting a moving subject, you can either "freeze the motion" or "capture the sense of movement" by adjusting the shutter speed.

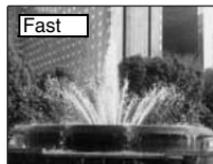

Freezes the motion of the subject.



Photographs the traces left by the subject's movement.

■ A Aperture Priority AE

This is an automatic mode to set the aperture. Use this mode to have the area in front of and behind the subject out of focus (large aperture) or have both near and far subjects in focus (small aperture).



Set the Mode dial to A.


Photography functions:

- PHOTOMETRY (→p.90)
- WHITE BALANCE (→p.91)
- AF MODE (→p.93)
- SHARPNESS (→p.95)
- FLASH (→p.95)
- BRACKETING (→p.96)

CHECK

Available flash modes

■ Setting the aperture

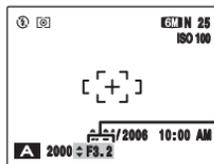

Aperture



① Press or to select the aperture.



② Press the shutter button to take pictures.


CHECK

Aperture settings

Wide-angle: F2.8 to F8 in 1/3 EV increments


Telephoto: F4.9 to F8 in 1/3 EV increments

CAUTION

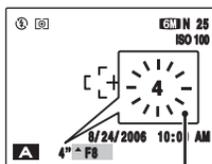

Lit red


When the correct exposure cannot be obtained with selected aperture setting, the shutter speed appears in red. When this occurs, adjust the aperture setting again. When **FORCED FLASH** is set, you can take a picture with a shutter speed of up to 1/45 sec.

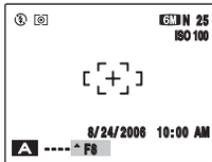

When the brightness of the subject is outside the camera's brightness metering range, "----" appears as the shutter speed. When this occurs, press the shutter button down halfway to measure the light level again.


Aperture

By adjusting the aperture, you can change the depth of focus (depth of field). Selecting a larger number of aperture (closed) obtains a larger depth of focus. Selecting a smaller number of aperture (open) has the area in front of and behind the subject out of focus.

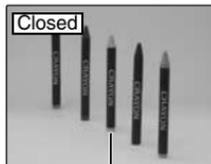

Main subject

The area in front of and behind the subject is also in focus in the shot.

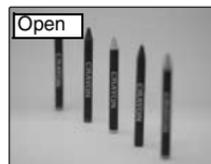

The area in front of and behind the subject is out of focus.

M Manual

This is a shooting mode that allows for settings including the shutter speed and aperture.

Set the Photography functions to manual to easily control yourself.



Set the Mode dial to M.

Photography functions:


- PHOTOMETRY (→p.90)
- WHITE BALANCE (→p.91)
- AF MODE (→p.93)
- SHARPNESS (→p.95)
- FLASH (→p.95)
- BRACKETING (→p.96)

CHECK

Available flash modes:



Setting the shutter speed

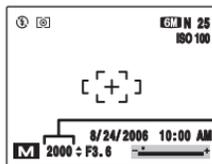

Shutter speed



① Press or to select the shutter speed.



② Press the shutter button to take pictures.

CHECK Shutter speed setting

30 sec. to 1/4000 sec. in 1/3 EV increments


MEMO

- Use a tripod to prevent camera shake.
- In shots with long exposures, noise (dots) may appear on the image.

CAUTION

If the shutter speed is set to a speed faster than 1/2000 sec., smearing (white stripes) may appear in the image (→p.181).

■ Setting the aperture

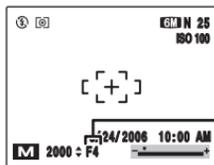

Aperture



- 1 Hold down .
Press  or  to select the aperture.



- 2 Press the shutter button to take pictures.


CHECK Aperture settings

Wide-angle: F2.8 to F11 in 1/3 EV increments
Telephoto: F4.9 to F11 in 1/3 EV increments

MEMO

Explanation of Terms "EV" (→p.181).

The exposure indicator

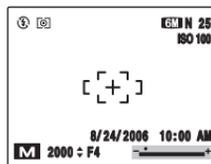

Use the exposure indicator on the screen as a guide when setting the exposure. When the brightness of the subject is outside the camera's brightness metering range, the exposure indicator disappears on the screen.


Adjusting the Image Brightness (Exposure Compensation)

Use this menu for shots to get the correct brightness (exposure), such as shots with extremely high contrast between the subject and the background.

Available Photography modes: P, S, A (→p.62, 63, 65)


Adjusting exposure compensation

Press  to display the exposure compensation setting screen.

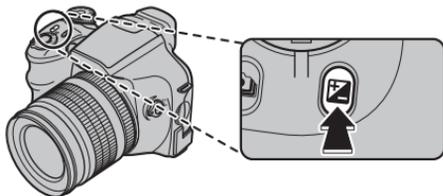

CAUTION

This function can only be used for P, S, or A in Shooting mode.

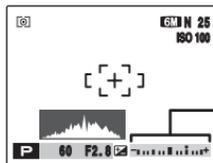

Exposure Compensation indicator



① Hold down . Press ◀ or ▶ to set the compensation value.




② Press the shutter button to take pictures.

CHECK

- The symbol indicating the compensation direction (– or +) turns yellow.
- The  icon also turns yellow while exposure compensation is being set and then turns blue after setting is completed.
- The screen brightness will increase or decrease depending on the exposure compensation setting.

Continued ➔

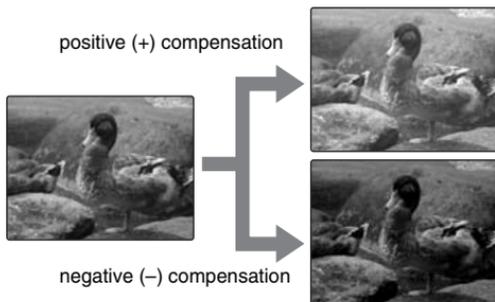

✓ CHECK

- Compensation range: -2 EV to +2 EV (13 steps in 1/3 EV increments)
- Explanation of Terms “EV” (→p.181)

📎 MEMO

- This setting is retained when the mode is changed or the camera is turned off (☑ icon appears). Set the exposure compensation to “0” unless compensation is required.
- Any of the following disables exposure compensation:
 - Using the flash in AUTO or 📷 mode
 - Shooting dark scenes in ⚡ mode

Guide to compensation

- Backlit portraits: +2 steps to +4 steps (+2/3 EV to +1 2/3 EV)



- Very bright scenes (such as snowfields) and highly reflective subjects: +3 steps (+1 EV)




- Shots made up predominantly of sky: +3 steps (+1 EV)
- Spotlight subjects, particularly against dark backgrounds: -2 steps (-2/3 EV)
- Scenes with low reflectivity, such as shots of pine trees or dark foliage: -2 steps (-2/3 EV)

Continuous AF


Use this button to take pictures of a moving subject. Using Continuous AF mode reduces the time required for focusing.

Available Photography modes: All (except for )


- ① Set the Focus mode selector switch to C-AF.

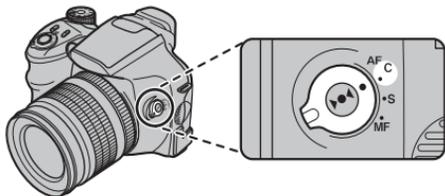

- ② Frame the shot so that the subject fills the entire AF frame. The camera continues to focus on the main subject in the AF frame.

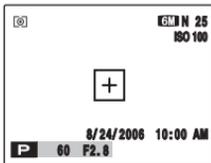

- ③ Press the shutter button down halfway to focus on the subject, and then press it down fully to take the picture.

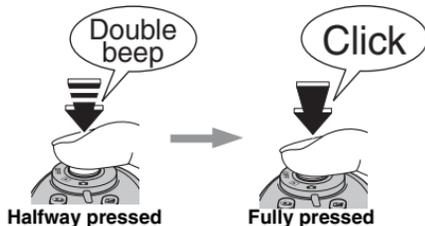

! CAUTION

Because the camera focuses continuously without pressing the shutter button, note the following:



- Watch the battery level carefully since the camera consumes more power in this mode than in other Focus modes (S-AF and MF).
- If the  Auto power off function is set to OFF, particular attention must be given to the battery level.

Manual focus

Use manual focus to lock the focus for a shot.

Available Photography modes: All

① Set the Focus mode selector switch to MF.

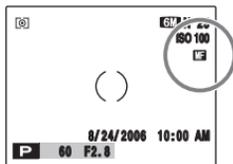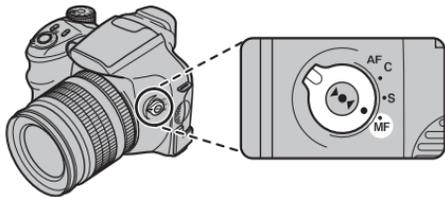


The **MF** appears on the screen.

! CAUTION

- Manual focus cannot be used in the  Movie mode.
-  AF MODE (→p.93) in SHOOTING MENU cannot be set.




② Press  to focus on the subject in the focus frame.

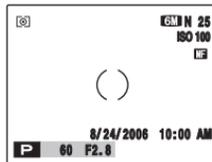

A focusing indicator mark appears on the screen. Check whether () mark appears in yellow.

MEMO

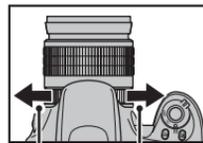

Long range

Close range

When the () mark is not yellow, turn the focus ring until the () mark appears in yellow.

■ Focusing indicator marks

The focus indicator marks in the following table appear when the area of focus is almost in focus. Use the marks to focus the shot.

 (Yellow)	The shot is focused.
	The focus is set too close. Turn the focus ring clockwise.
	The focus is set too far. Turn the focus ring counterclockwise.

MEMO

- If the focus is set to infinity using manual focusing, position the  mark on a subject close to infinity. Continuing to turn the focus ring will move the focus position beyond infinity and defocus the image.
- The image will not be focused if the camera is moved. Use a tripod to prevent camera shake and manually focus more effectively.

One-touch AF function

Use this function to focus the shot quickly. Pressing , the camera uses the autofocus function to focus on the subject.

CAUTION

- The focus indicator does not appear in One-touch AF mode.
- Pressing  (One-touch AF) when the shooting mode is , to set focus to infinity.



Macro (Close-up)

Use this mode to take close-up shots.

Available Photography modes: **AUTO**, , , , , , P, S, A, M

Press () to select Macro mode.

The Macro mode setting changes each time you press the ().

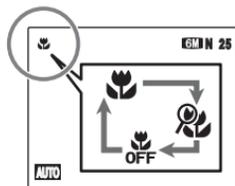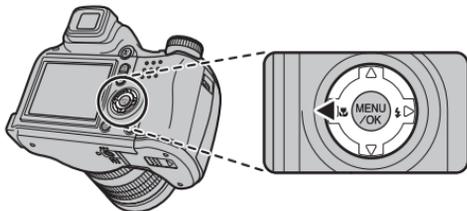

or appears on the screen indicating that you can take close-up shots.

! CAUTION

- The flash cannot be used when Super macro is set.
- Super macro cannot be used when NATURAL & is set.


✓ CHECK

- Focal range
Wide angle:
Approx. 10 cm to 3.0 m (3.9 in. to 9.8 ft.)
Telephoto:
Approx. 90 cm to 3.0 m (3.0 ft. to 9.8 ft.)
- Focal range in Super macro
Approx. 1 cm to 1.0 m (0.4 in. to 3.3 ft.) (Wide-angle only)
- Effective flash range
Wide-angle:
Approx. 30 cm to 2.0 m (1.0 ft. to 6.6 ft.)
Telephoto:
Approx. 90 cm to 2.0 m (3.0 ft. to 6.6 ft.)

📄 MEMO

- Use a tripod to prevent camera shake in Macro mode.
- Any of the following cancels Macro mode:
 - Changing the Mode dial to , , SP (except for) or mode
 - Turning the camera off
- If the flash is too bright, use flash brightness adjustment (→P.95).
- Even if MULTI (→p.93) in the AF-mode is set, the camera focuses near the center of the screen.
- AF-assist may not function correctly if the camera is up close to the subject, such as in macro-mode.

Super macro

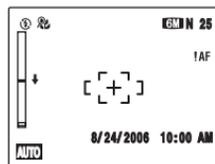



Use the lens at the wide-angle zoom setting in Super macro mode. If your camera select any other settings, and **!AF** appear on the screen. Turn the zoom ring to adjust zoom setting as indicated .

⚡ Setting the Flash (Intelligent Flash)

Flash photography is useful for taking pictures at night or indoor dark locations. Choose from 6 flash modes according to the type of shot. See p.76 for information on the available Photography modes.

📄 MEMO

By calculating subject distance and brightness, the camera automatically adjusts the flash amount and sensitivity to suit shooting conditions. This maintains consistent balance of bright/dark areas across the image in low-light conditions (dimly-lit room, etc). The Intelligent Flash feature guarantees consistent results when using the flash.

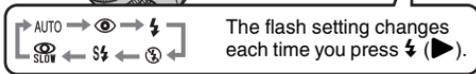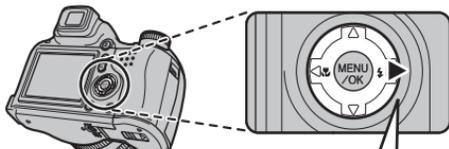

📄 MEMO

When pressing the shutter button down halfway, **⚡** appears on the screen before the flash fires.

AUTO Auto flash (not displayed)

Use this mode for ordinary photography. The flash fires as required by the shooting conditions.

👁️ RED EYE REDUCTION

This mode is suitable for shooting portraits in low-light conditions.

Use this mode to minimize red-eye (eyes appear in red in the finished photo).



📄 MEMO Red-eye effect

When using the flash to take a picture of people in low-light conditions, their eyes sometimes appear red in the picture. This is caused by the light of the flash reflecting off the inside of the eye.

⚡ FORCED FLASH

Use this mode in backlit scenes, or to get the correct colors when taking a picture under bright lighting. In this mode, the flash fires in bright as well as dark conditions.

🚫 SUPPRESSED FLASH

This mode is suitable for situations where the flash cannot be used.

Use a tripod to prevent camera shake when shooting in Suppressed flash mode in the dark condition. Any time, flash does not fire.

🚫 SLOW SYNCHRO, 👁️ RED EYE & SLOW

This mode allows you to take pictures of people at night that clearly show both your subjects and the night time backdrop. To prevent camera shake, always use a tripod. Using **👁️** synchronizes Red-eye reduction mode. Using **⌚** selects slow shutter speeds of up to 4 seconds.

⚠️ CAUTION

In bright scenes, overexposure may occur.

Continued ➔

⚡ Setting the Flash (Intelligent Flash)

✓ CHECK

List of available flash modes in each Photography mode

	AUTO	👁	⚡	Ⓢ	S&L	📷
AUTO	✓	✓	✓	✓		
👤	✓	✓	✓	✓		
N				✓		
👁⚡		✓	✓			
📷	✓	✓	✓	✓	✓	✓
▲				✓		
🏃	✓		✓	✓		
☾				✓	✓	✓
☀				✓		
📷		✓		✓		
📷	✓	✓	✓	✓		
📷	✓	✓	✓	✓		
OFF				✓		
🍷		✓				
✳				✓		
TEXT			✓	✓		
P	✓	✓	✓	✓	✓	✓
S		✓	✓	✓		
A		✓	✓	✓	✓	✓
M		✓	✓	✓		

✓ CHECK

Effective flash range (📷 : AUTO)

Wide-angle:

Approx. 60 cm to 8.3 m (2.0 ft. to 27.2 ft.)

Telephoto:


Approx. 2.0 m to 4.6 m (6.6 ft. to 15.1 ft.)

If you take pictures outside of the effective flash range, the image may appear dark even if the flash is used.

! CAUTION Notes on using flash

- If the shutter speed is set to a speed faster than 1/1000 sec., the image may appear dark even if the flash is used.
- If pressing the shutter button while the flash is charging (indicator lamp blinking orange), the picture will be taken without the flash (when using AUTO and 👁).
- The flash charging time may increase when the batteries are low on charge.
- When taking a picture using the flash, the image may disappear and go dark briefly due to flash charging. The indicator lamp blinks orange during charging.
- The flash fires several times (pre-flashes and the main flash). Do not move the camera until the picture is taken.


Popping the flash up automatically

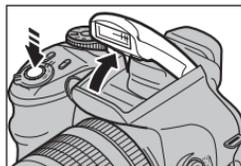

The flash pops up automatically and fires as required by the shooting conditions. Set to Ⓢ Suppressed flash mode when you want to take pictures without flash.

Taking pictures continuously

Use this mode to take pictures of a moving subject.

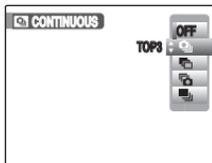

Hold down . Press or to select the Continuous shooting mode.
Release to confirm your selection.

- : TOP 3 continuous shooting
- : Auto bracketing
- : FINAL 3 continuous shooting
- : LONG PERIOD continuous shooting

! CAUTION

- Shooting continues as long as holding the shutter button down. In auto bracketing mode however, just press the shutter button once to shoot 3 frames.
- Number of available frames is limited depending on the available space on the **xD-Picture Card** or internal memory. When auto bracketing, if there is insufficient space on the **xD-Picture Card** or internal memory to record 3 frames, no pictures are taken.
- The focus is determined in the first frame and cannot be changed in mid-sequence (except for LONG PERIOD).
- The exposure is determined in the first frame, but in LONG PERIOD continuous shooting the exposure is adjusted for the scene being shot.
- The speed of continuous shooting varies depending on the shutter speed.
- The flash cannot be used as the flash mode is set to SUPPRESSED FLASH (→p.75). However, when the mode is changed back to normal photography, the flash setting specified before continuous shooting was selected is restored.
- For TOP 3, Auto bracketing and FINAL 3 continuous shooting, the results are always displayed after you shoot. Note that pictures taken using LONG PERIOD continuous shooting are recorded without displaying the results.
- In FINAL 3 and LONG PERIOD continuous shooting mode, only 1 frame can be shot when using the FINAL 3 / LONG PERIOD continuous shooting mode and Self-timer mode together.
- Continuous shooting cannot be selected in NATURAL & S.
- File recording time using TOP3, Auto bracketing, or FINAL 3 may increase when record to an **xD-Picture Card** or internal memory.

Continued ➔

TOP 3 continuous shooting

Available Photography modes: All (except for M)



Shooting continues as long as holding the shutter button down. This mode shoots up to 3 frames (max. 2.2 frames/sec.).

Auto bracketing

Available Photography modes: P, S, A, M



This mode shoots the same image with different exposure settings.

Bracketing shoots 3 continuous frames, each with a different exposure setting.

A is correctly exposed, B is overexposed and C is underexposed.

The exposure range settings can be changed in M Bracketing in the SHOOTING MENU.


CHECK

Auto bracketing settings (3) $\pm 1/3$ EV, $\pm 2/3$ EV, ± 1 EV

CAUTION

- If the underexposed or overexposed frame is outside the camera's control range, the picture is not taken with the specified setting increments.
- This function can only be used for P, S, A or M in Shooting mode.

MEMO Changing the setting (exposure range)

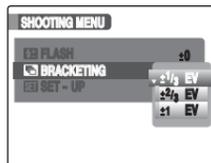


Press the MENU/OK to display the menu and change the setting in the M BRACKETING menu option (\rightarrow p.96).

FINAL 3 continuous shooting

Available Photography modes: All (except for )

Shooting continues as long as holding the shutter button down.


This mode shoots up to 40 times (max. 2.2 frames/sec.). The camera records the final 3 frames shot when you release the shutter button.

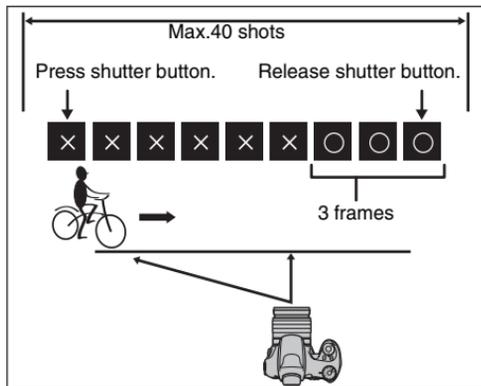

LONG PERIOD continuous shooting

Available Photography modes: All (except for )

Shooting continues as long as holding the shutter button down. This mode shoots up to **xD-Picture Card** or internal memory end.

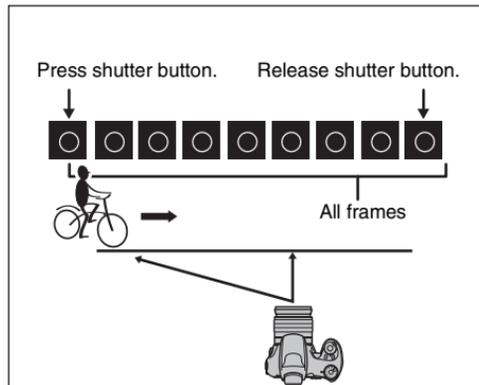

MEMO

Continuous shooting mode and assist window (→p.43) can be used together.



☀ Increasing Monitor Brightness

This is useful when checking the shot composition for outdoor scenes.

⬡ Increasing the screen brightness

Press DISP/BACK while pressing . The screen becomes bright.

Press DISP/BACK while pressing  again to cancel the function.

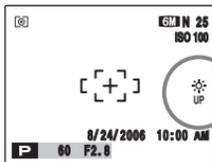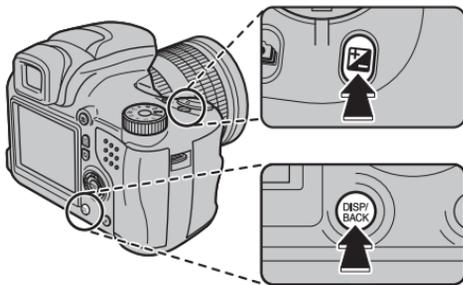

 blinks on the screen when the function is on.


MEMO

- This function is automatically canceled after each shot.
- When this function is active, it will increase the amount of speckling in images on the screen. This is normal and does not affect the photographed image.
- This function is purely for checking the composition of your shot. It does not increase the brightness of the image.
- Even if you increase the brightness in low-light conditions, you cannot check the subject.
- The color tones may vary depending on the subjects.

Using *F*-MODE MENU (Photography)/SHOOTING MENU


Use these menus to adjust image quality or focus. You can take pictures in a wide range of conditions.

Setting the *F*-MODE MENU (Photography)

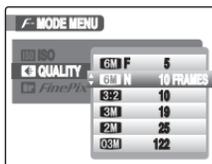

-  ① Press *F* to open the *F*-MODE MENU.
-  ② Press ▲ or ▼ to select the menu.
-  ③ Press ►.
-  ④ Press ▲ or ▼ to change the setting.
-  ⑤ Press MENU/OK to confirm the setting.

Setting the SHOOTING MENU

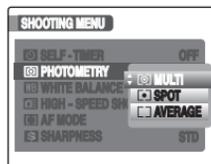

* This example of display appears when Intelligent Face Detection is off.

-  ① Press MENU/OK to open the SHOOTING MENU.
-  ② Press ▲ or ▼ to select the menu.
-  ③ Press ►.
-  ④ Press ▲ or ▼ to change the setting.
-  ⑤ Press MENU/OK to confirm the setting.

Continued ➔

■ List of **F**-MODE MENU options

Menu	Functions	Settings	Factory default
ISO (→p.85)	Specifies required sensitivity setting of the ambient light around the subject. The larger value of the sensitivity, the higher sensitivity is obtained. The higher sensitivity settings will allow you to take pictures in darker locations.	AUTO/3200/1600/ 800/400/200/100	200
QUALITY (→p.86)	Specifies the image size. The larger image size, the better image quality is obtained. The smaller image size, the larger number of images are recorded.	/ 	N
FinePix COLOR (→p.87)	Specifies required color tone. This mode is effective for taking more vivid shots or black and white shots.	STD/	STD

■ List of SHOOTING MENU options

Menu	Functions	Settings	Factory default
SCENE POSITION (→p.55)	This setting can be used when the Mode dial is set to . Use this setting to provide the best photography menu setting for the scene being shot.	/	
SCENE POSITION (→p.58)	This setting can be used when the Mode dial is set to SP. Use this setting to provide the best photography menu setting for the scene being shot.	/ / / / / /	
SELF-TIMER (→p.88)	This setting can be used with any of the modes. Used in situations such as group shots where the photographer is included in the shot.	(10 seconds)/ (2 seconds)/OFF	OFF
PHOTOMETRY (→p.90)	This setting can be used when the Mode dial is set to P, S, A or M. When M is set, Intelligent Face Detection is deactivated. Use this setting to specify the light metering method.	/ /	 (When the Intelligent Face Detection is off)
WHITE BALANCE (→p.91)	This setting can be used when the Mode dial is set to P, S, A or M. Use this setting to adjust the color balance to suit the color of the ambient light around the subject.	AUTO/ / / / / /	AUTO

Menu	Functions	Settings	Factory default
 HIGH-SPEED SHOOTING (→p.92)	This setting can be used with any of the modes. This setting is always set to ON when the Photography mode is set to  . Use this setting to reduce the time required for focusing.	ON/OFF	OFF
 AF MODE (→p.93)	This setting can be used when the Mode dial is set to P, S, A, or M, and Intelligent Face Detection is off. Use this setting to specify the focusing mode.	 /  / 	 (When the Intelligent Face Detection is off)
 SHARPNESS (→p.95)	This setting can be used when the Mode dial is set to P, S, A or M. Use this setting to soften or emphasize the outline of an image.	HARD/STANDARD/ SOFT	STANDARD
 FLASH (→p.95)	This setting can be used when the Mode dial is set to P, S, A or M. Use this setting to adjust the amount of light emitted by the flash to suit the photography conditions or to achieve a desired effect.	-2/3 EV to +2/3 EV in approx. 1/3 EV increments	0
 BRACKETING (→p.96)	This setting can be used when the Mode dial is set to P, S, A or M. Use this setting to photograph the same image with different exposure settings.	±1/3 EV, ±2/3 EV, ±1 EV	±1/3 EV

Continued →


 **MEMO**

The options available in the SHOOTING MENU vary depending on whether the mode is selected.


- **AUTO**, , , 



- , , , , , , , , , 

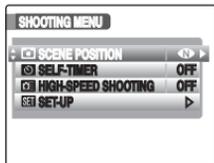

- 

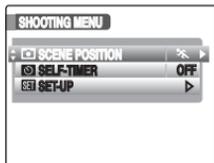

- P, S, A, M



* This example of display appears when Intelligent Face Detection is off.

Changing the sensitivity setting (ISO ISO)


Use this menu to specify required sensitivity setting of the ambient light around the subject. The larger value of the sensitivity, the higher sensitivity is obtained. The higher sensitivity settings will allow you to take pictures in darker locations.

CHECK

Settings

AUTO/100/200/400/800/1600/3200

Selecting AUTO as the sensitivity setting, the camera selects the best sensitivity setting for the subject's brightness.

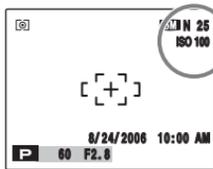

The selected sensitivity setting appears on the screen when the sensitivity setting is set to another setting excluding AUTO.

MEMO

- When anything other than P, S, A and M in the Photography mode is selected, only AUTO can be selected for the ISO (sensitivity) setting.
- When P, S, A and M in the Photography mode is selected, AUTO cannot be selected for the ISO (sensitivity) setting.

CAUTION

Although higher sensitivity settings will allow you to take pictures in darker locations, they will also increase the amount of speckling in your images. Choose the sensitivity setting that best suits the conditions.

Changing the quality setting (QUALITY)

Use this menu to specify the image size (number of recorded pixels).

Select the quality setting for the scene being shot.

Quality settings in Photography mode

Quality mode	Sample uses
6M F (2848 × 2136)	Printing at up to 10R (25.4 × 30.5 cm/ 10 × 12 in.) / A4 size For better quality, select 6M F
6M N (2848 × 2136)	
3:2 (3024 × 2016)	
6M (2048 × 1536)	Printing at up to 6R (15.2 × 20.3 cm/ 6 × 8 in.) / A5 size
2M (1600 × 1200)	Printing at up to 4R (10.2 × 15.2 cm/ 4 × 6 in.) / A6 size
6M (640 × 480)	To use for e-mail or web site

Area shot and quality setting

Area shot excluding **3:2**



Area shot with **3:2**



Normal shooting provides an aspect ratio of 4:3 and **3:2** shooting provides an aspect ratio of 3:2 (same aspect ratio as 35 mm film and post card).

MEMO

- The bigger the number of recorded pixels, the better the image quality becomes. As the number of recorded pixels becomes smaller, you will be able to record more frames to an **xD-Picture Card**.
- The quality setting is retained even when the camera is turned off or the mode setting is changed.
- When changing the quality setting, the number of available frames also changes (→p.179). The numbers to the right of setting show the number of available frames.

CAUTION

QUALITY Quality cannot be selected when setting CCD-RAW (→p.128).

Changing the FinePix COLOR setting (FinePix COLOR)

Use this menu to specify required color tone.
It is effective for taking vivid shots or black and white shots.

✓ CHECK

FinePix COLOR settings

STD F-STANDARD	The contrast and color saturation are set to standard. Use this mode for normal photography.
 F-CHROME	The contrast and color saturation are set to high. This mode is effective for taking more vivid shots of subjects such as flowers.
 F-B&W	This mode converts the colors in the photographed image to black and white.

When setting **F-CHROME** or **F-B&W**, the icon appears on the screen.

! CAUTION

When the Mode dial is set to ,  or SP,  does not appear on the screen.

MEMO


F-CHROME may have little visible effect with some subjects or the scene being shot. You may not be able to see any difference on the screen.

Self-Timer (SELF-TIMER)

Available Photography modes: All

The self-timer is used in situations where the photographer is included in the shot.

When selecting the self-timer setting, the self-timer icon appears on the screen.

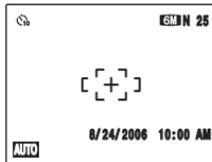


: The picture is taken after 10 seconds.

: The picture is taken after 2 seconds.

Intelligent Face Detection

If suitable focus cannot be achieved, after setting the self-timer, press  (Intelligent Face Detection). You can take a picture with the face in focus by detecting the face automatically. This is convenient when taking a self portrait.

- 1 Press the shutter button down halfway to focus on the subject and press the shutter button fully.



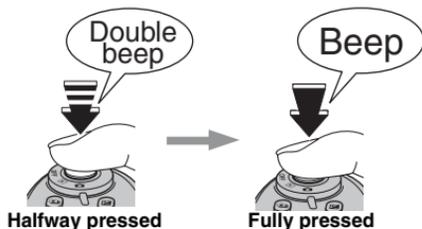


Pressing the shutter button down halfway that focuses on the subject.

Without releasing the shutter button, press the button all the way down (fully pressed) to start the self-timer.

2 Take pictures in selected time.

A picture is taken after the self-timer lamp changes from lit to blinking (only blinks with the 2-second self-timer).

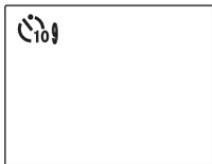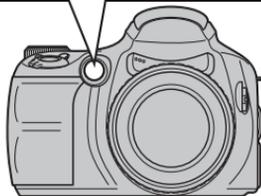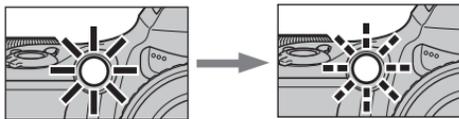

A countdown appears on the screen indicating the time remaining until the picture is taken.

Using the 2-second self-timer

This is useful when you worry about camera shake even if attaching the camera on a tripod.


MEMO

- To stop the self-timer, once it has started running, press DISP/BACK.
- Any of the following cancels the self-timer setting:
 - Completing the shooting
 - Changing the Photography mode setting
 - Setting the camera to Playback mode
 - Turning the camera off
- Take care not to stand in front of the lens when pressing the shutter button as this can prevent the correct focus or brightness (exposure) from being achieved.

Selecting light metering method (PHOTOMETRY)

Available Photography modes: P, S, A, M
(M is set, and Intelligent Face Detection is off)

Use this setting when the correct exposure cannot be obtained by the shooting conditions.

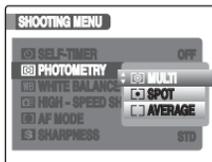

* This example of display appears when Intelligent Face Detection is off.

-  **MULTI (Pattern):** Light metering where the camera assesses the scene and selects the correct exposure.
-  **SPOT** : Light metering where the exposure is optimized for the center of the image.
-  **AVERAGE** : Light metering where an average value for the entire image is used.


To use the photometry modes effectively

- **MULTI**
In this mode, the camera uses automatic scene recognition to analyze the subject and provide optimum exposure in a wide range of shooting conditions.
- **SPOT**
This mode is useful for subjects with strongly contrasting light and dark areas where you want to achieve the correct exposure for a particular feature.
- **AVERAGE**
The advantage of this mode is that the exposure tends not to change for different compositions or subjects. This mode is particularly effective for shots of people wearing black or white clothing and shots of scenery.

Adjusting color balance (WB WHITE BALANCE)

Available Photography modes: P, S, A, M

Adjust the color balance based on white to suit the color of the ambient light around the subject.

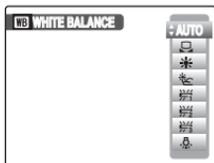


AUTO: Automatic adjustment

-  : Select the white balance by using white paper to suit the shooting conditions.
-  : Shooting outdoors in good weather
-  : Shooting in shade
-  : Shooting under Daylight fluorescent lamps
-  : Shooting under Warm White fluorescent lamps
-  : Shooting under Cool White fluorescent lamps
-  : Shooting in incandescent light

Custom white balance

- ① Select  custom white balance (→p.81).
- ② Hold a piece of white paper under the light source for setting the white balance, so that it fills entire the screen. Then press the shutter button to set the white balance.

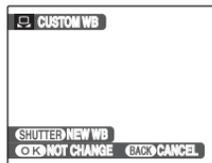


MEMO

- The white balance setting does not affect the image shown on the screen.
 - To use the white balance set previously, press the MENU/OK without pressing the shutter button.
- ③ When the correct exposure is measured, "COMPLETED!" appears. Press MENU/OK to confirm the setting.



Continued →

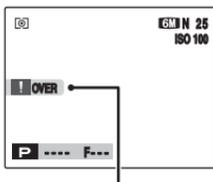**OVER or UNDER**

Set the exposure compensation again, using a negative value (–) when [OVER] appears and a positive value (+) when [UNDER] appears (→p.69).

Example

You can change the white balance for a photographed image by using colored paper instead of white paper.

 **MEMO**


- In AUTO mode, the correct white balance may not be achieved for subjects such as close-ups of people's faces and pictures taken under a special light source. Select the correct white balance for the light source.
- When the flash fires, the white balance (except for custom white balance) setting for the flash is used. Consequently, to achieve a particular effect, the flash mode should be set to  SUPPRESSED FLASH (→p.75).
- The specified custom white balance is retained until it is reset. This setting is retained even if the batteries are removed.
- The color tones may vary depending on the shooting conditions (light source, etc.).
- After taking the picture, check the image color (white balance).
- Explanation of Terms "White Balance" (→p.182)



Focusing the shot quickly (HIGH-SPEED SHOOTING)

Available Photography modes: All

Use this mode to reduce the time required for focusing when pressing the shutter button down halfway. It is useful to avoid missing snapshot opportunities.

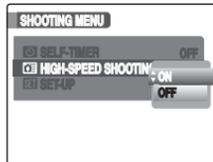**CAUTION**

 EVF/LCD MODE in the  SET-UP menu cannot be set (→p.123).

**MEMO**

- **Focal range**
Wide-angle:
approx. 2.0 m (6.6 ft.) to infinity
Telephoto:
approx. 4.0 m (13.1 ft.) to infinity
- When taking pictures while the High-speed shooting mode is set to ON, the batteries will run down more quickly.
- When setting  Sport mode, the camera sets to High-speed shooting mode automatically.

Specifying focusing mode (**[AF MODE]**)

Available Photography modes: P, S, A, M
(When the Intelligent Face Detection is off)

Use this mode to specify focusing mode that best suits the subject.



- [AF MODE]**: CENTER
- [+]**: MULTI
- [AREA]**: AREA


* This example of display appears when Intelligent Face Detection is off.

! CAUTION

The **[AF MODE]** AF mode can only be selected when the focus mode is S-AF (→p.33).


[CENTER]

The camera focuses on the center of the screen.
Use this setting when taking pictures with AF/AE lock (→p.39).

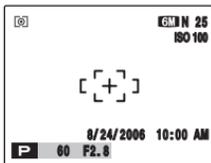

[+] MULTI

When pressing the shutter button down halfway, the camera recognizes any strongly contrasting subject near the center of the screen and displays the AF frame over subject in focus.

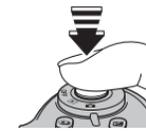

Halfway pressed



AF frame

! CAUTION

When taking pictures in Macro mode, the camera focuses on the center of the screen.




MEMO

When the AF frame does not appear in the focusing position, select **[CENTER]** in the AF mode and use AF/AE lock (→p.39).


Continued →

 **AREA**

The camera changes the focusing position on the screen. Use this setting when composing the shot using a tripod and changing the focusing position.

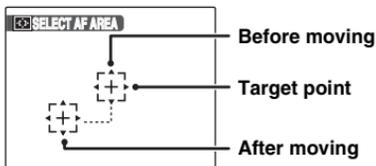

- ① Hold down the . Press , ,  or  to move the  (target point) to the focusing position.

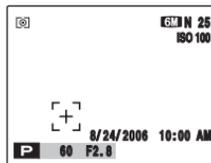

- ② The AF frame appears in the location to which the target point was moved when you release  (One-touch AF).



- ③ Press the shutter button to take pictures.

 **MEMO**

- To reposition the AF frame, repeat step ①.
- Regardless of the AF frame location, the exposure is always set using the area in the center of the screen. To expose the shot for your main subject, use AF/AE lock (→p.39).

Adjust the image outline (hard/soft) (S SHARPNESS)

Available Photography modes: P, S, A, M

Use this setting to soften or emphasize the outline and quality of an image.



* This example of display appears when Intelligent Face Detection is off.

HARD:

Emphasizes the outlines. Best for shots of subjects such as buildings or text where sharp images are desirable.

STANDARD:

Best for ordinary photography. Provides edge sharpness that is ideal for most picture taking situations.


SOFT:

Softens the outlines. Best for shots of subjects such as people, where a softer image is desirable.

Adjust the amount of light emitted by the flash (FLASH (Brightness Adjustment))

Available Photography modes: P, S, A, M

Use this setting to change the amount of light emitted by the flash to suit the photography conditions or to achieve a desired effect.

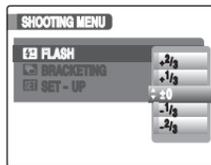

CHECK

Compensation range:

- $-2/3$ EV to $+2/3$ EV in approx. $1/3$ EV increments (total: 5 levels selectable)
- Explanation of Terms "EV" (→p.181)


CAUTION

- Depending on the type of subject and the shooting distance, brightness adjustment may have no effect.
- The image may appear dark when setting the shutter speed to higher than $1/1000$ sec.

Photograph the same image with different exposure (BRACKETING)

Available Photography modes: P, S, A, M

Use this setting to photograph the same image with different exposure settings. Bracketing shoots 3 continuous frames, one of which is correctly exposed while the remaining two are underexposed and overexposed respectively by a set amount.

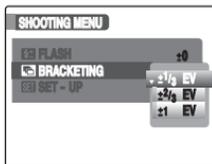


CHECK

- Bracketing settings (3) $\pm 1/3$ EV, $\pm 2/3$ EV, ± 1 EV
- Explanation of Terms “EV” (→p.181)

CAUTION

- If the underexposed or overexposed frame is outside the camera's control range, the picture is not taken with the specified setting increments.
- Flash photography cannot be used.
- This feature always takes 3 shots. However, if there is insufficient space on the **xD-Picture Card** or internal memory for 3 shots, no picture will be taken.

MEMO Auto bracketing

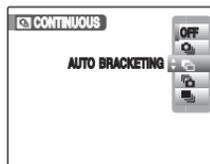


After setting the exposure for bracketing:

- ① Hold down .
- ② Press \blacktriangle or \blacktriangledown to select  AUTO BRACKETING.

Playback Information


Use this function to check the photography information. Hold down  to check the information.

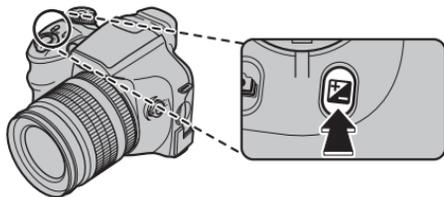

- ① Quality mode
- ② Sensitivity
- ③ Shutter speed/Aperture
- ④ FinePix COLOR
- ⑤ Flash
- ⑥ White balance
- ⑦ Exposure compensation setting
- ⑧ Frame number
- ⑨ Histogram

! CAUTION

- Highlight warning

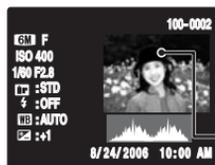


When the image is overexposed, areas where white blooming has occurred flash black.

Highlight warning

-  FinePix COLOR may not appear, depending on the shooting mode.

Histograms

A histogram is a chart showing the distribution of brightness in an image (horizontal axis: brightness; vertical axis: pixels).

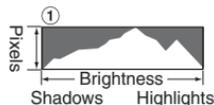

- ① Optimal exposure:
There is an ample distribution of pixels overall with a peak in the middle range.



- ② Overexposed:
The number of highlight pixels is high with the distribution sloping upwards to the right.



- ③ Underexposed:
The number of shadow pixels is high with the distribution sloping upwards to the left.

! CAUTION


The shape of the graph will vary depending on the subject.

Using *F*-MODE MENU (Playback)/PLAYBACK MENU

Use these menus to play back photographed images.

Setting the *F*-MODE MENU (Playback)

- ① Set the camera to Playback mode (→p.44).

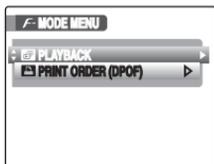

- ② Press *F* to open the *F*-MODE MENU.



- ③ Press ▲ or ▼ to select the menu.



- ④ Press ►.




- ⑤ Press ▲ or ▼ to change the setting.



- ⑥ Press MENU/OK to confirm the setting.

Setting the PLAYBACK MENU

- ① Set the camera to Playback mode (→p.44).

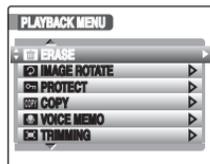

- ② Press MENU/OK to open the PLAYBACK MENU.



- ③ Press ▲ or ▼ to select the menu.



- ④ Press ►.




- ⑤ Press ▲ or ▼ to change the setting.



- ⑥ Press MENU/OK to confirm the setting.

Setting automatic playback (PLAYBACK)

Use this mode to play back photographed images continuously. You can select type of image transition.

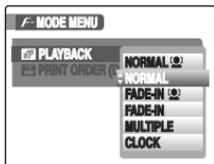

MEMO

- To interrupt automatic playback, press MENU/OK.
- Press ◀ or ▶ to advance or go back through the images when selecting NORMAL and FADE-IN.
- The Auto power off function (→p.130) does not operate during playback.
- Movie starts automatically. When the movie ends, the playback function moves it on.
- Press DISP/BACK once during playback to display on-screen help.

Intelligent Face Detection

The camera plays back the image taken with Intelligent Face Detection (→p.37) zoomed in on the detected face when NORMAL  or FADE-IN  is selected.

DPOF set frame (PRINT ORDER (DPOF))

You can specify the image, number of prints, with or without date of printing with a DPOF-compatible printer.



WITH DATE  : The date will be imprinted on your prints.

WITHOUT DATE: The date will not be imprinted on your prints.

RESET ALL : All DPOF settings will be canceled.

WITH DATE / WITHOUT DATE

Selecting WITH DATE ,  appears on the screen and the date will be imprinted on your prints.



① Press ◀ or ▶ to display the frame (file) for specifying DPOF setting.



② Press ▲ or ▼ to set a value.

Up to 99 sheets are printed.

For frames (files) that you do not want printed, set the number of prints to 0 (zero).

To specify more DPOF settings, repeat steps ① and ②.



③ Always press MENU/OK after the settings are completed.

Pressing DISP/BACK cancels those settings.



④ Press MENU/OK again. The total number of prints appears on the screen.

MEMO Canceling DPOF setting


- ① Press **F** to open the F-MODE MENU and press **▲** or **▼** to select  PRINT ORDER (DPOF).
- ② Press **▶**.
- ③ Press **▲** or **▼** to select WITH DATE  or WITHOUT DATE and press MENU/OK to display the print order screen.
- ④ Press **◀** or **▶** to select the frame (file) with the DPOF setting you want to cancel.
- ⑤ Press **▼** to set the number of prints to 0 (zero).

To cancel the DPOF setting for another frame (file), repeat steps ④ and ⑤.
Always press MENU/OK to complete the settings.

- RESET ALL (→p.103)

MEMO

- When DPOF settings were specified on another camera.

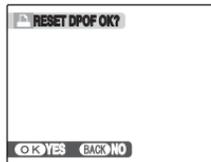

When the data includes a frame (file) with DPOF settings that were specified on another camera, "RESET DPOF OK?" appears.


Pressing MENU/OK erases all of the DPOF settings already specified for each frame (file). Specify the DPOF setting for each frame (file) again.

- Prints of up to 999 frames (files) can be ordered on the same **xD-Picture Card**.
- DPOF settings cannot be specified for movies and CCD-RAW.

CAUTION

- Pressing DISP/BACK while choosing settings will cancel all current settings. If there were previous DPOF settings, only the modifications are canceled.
- When selecting the WITH DATE  setting, the date is imprinted on your shots using the Print Service or a DPOF-compatible printer (depending on the printer specifications, the date may not be printed in some cases).
- Images photographed with a camera other than FinePix S6000fd / FinePix S6500fd may not be specified DPOF settings.


Intelligent Face Detection

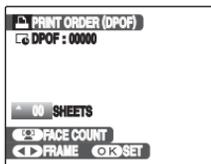

When DPOF settings are set to the images taking with the Intelligent Face Detection (→p.37) () appears on the screen, press  (Intelligent Face Detection), the frame appears around the detected face, and then the number of the detected faces is set to print number. It is easy to set the number of prints for each person in the picture. Press  or  to set the print number. Press  (Intelligent Face Detection) again, the number of the detected faces is set to the print number. After setting, press MENU/OK.

RESET ALL

To cancel all DPOF settings:

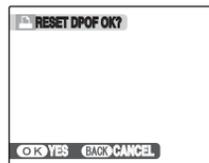


Select RESET ALL in the **F**-MODE MENU (→p.101).



Press MENU/OK.



MEMO

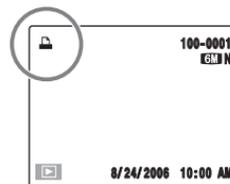

 appears on the screen during playback when the image has specified DPOF settings.

 **PRINT ORDER (DPOF)**

DPOF stands for Digital Print Order Format and refers to a format that is used for recording printing specifications for images shot using a digital camera on media such as an **xD-Picture Card**. The recorded specifications include information on which frames are to be printed.

This section gives a detailed description of how to order your prints with FinePix S6000fd / FinePix S6500fd.

*Some printers do not support date and time imprinting or specification of the number of prints.

*The warnings shown below may appear while specifying the prints.

“DPOF SPECIFIED. ERASE OK ?”

“DPOF SPECIFIED. ERASE ALL OK ?” (→p.49)

When erasing the image, the DPOF setting for that image is deleted at the same time.

“RESET DPOF OK ?” (→p.102)

When inserting an **xD-Picture Card** that contains images specified for printing by another camera, those print specifications are all reset and replaced by the new print specifications.

[DPOF FILE ERROR] (→p.165)

Up to 999 images can be specified on the same **xD-Picture Card**.

Rotating the images (IMAGE ROTATE)

When shooting in the vertical position, the image appears horizontal on the screen. Use this mode to rotate an image and to display correct direction. Your camera calls images “frames”.

! CAUTION

Protected frames (files) cannot be rotated. Unprotect the frames (files) before rotating them (→p.106).

MEMO

An image can be rotated only when playing back using FinePix S6000fd / FinePix S6500fd. You may not be able to rotate images that were shot with a camera other than the FinePix S6000fd / FinePix S6500fd.



- ① Press ◀ or ▶ to select the rotating frame (file).




- ② Press MENU/OK to open the PLAYBACK MENU.



- ③ Press ▲ or ▼ to select  IMAGE ROTATE.



- ④ Press MENU/OK.

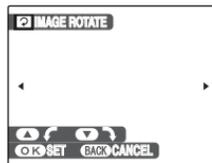

- ⑤ Press ▲ or ▼ to rotate the image.
▼: Rotates the image clockwise at a 90 degree angle.

▲: Rotates the image counterclockwise at a 90 degree angle.



- ⑥ Press MENU/OK to confirm the setting. Next time the image is played back, it will be automatically rotated. Press DISP/BACK to cancel rotating the image.



Continued →

Intelligent Face Detection


When shooting a person in a vertical position, press  (Intelligent Face Detection) to rotate to display the correct direction.

Protecting the images (PROTECT)


Use this mode to prevent frames (files) from being accidentally erased. Your camera calls images “frames”.

FRAME SET / RESET

To protect or unprotect only the selected frame (file):

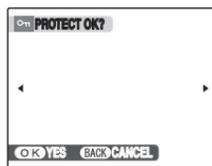

Unprotected

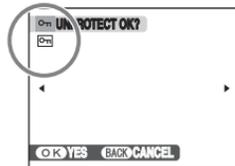

Protected ( appears)



① Press ◀ or ▶ to select the protecting/unprotecting frame (file).



② Press MENU/OK to protect/unprotect the currently displayed frame (file).

Unprotected: protecting frame (file)

Protected: reset frame (file)

To protect another frame (file), repeat steps ① and ②.
When protecting frames (files) is completed, press DISP/BACK.

SET ALL

Press MENU/OK to protect all the frames (files).

RESET ALL

Press MENU/OK to unprotect all the frames (files).

 **MEMO To stop the procedure midway**


If the images are very large, protecting or unprotecting all the frames (files) may take some time.

If you want to take a picture or record a movie during the procedure, press DISP/BACK.


 **CAUTION**

The Format function erases all the frames (files), including protected frames (files) (→p.130).

Copying the images (COPY COPY)

It is possible to transfer saved images between the internal memory and an **xD-Picture Card**. Your camera calls images "frames".

■ Selecting COPY

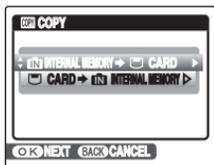


- ① Press ▲ or ▼ to select **INTERNAL MEMORY → CARD** or **CARD → INTERNAL MEMORY**.



- ② Press ►.


Copying one frame at a time (FRAME)

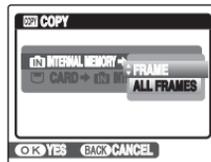

- ① Press ▲ or ▼ to select FRAME.



- ② Press MENU/OK.

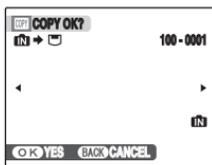

- ③ Press ◀ or ▶ to select the copying frame (file).




- ④ Press MENU/OK to copy the currently displayed frame (file).



MEMO

To copy another frame (file), repeat steps ③ and ④. When copying frames (files) is completed, press DISP/BACK.

Copying all frames (ALL FRAMES)

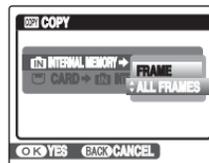


- ① Press ▲ or ▼ to select ALL FRAMES.



- ② Press MENU/OK.

Continued ➔

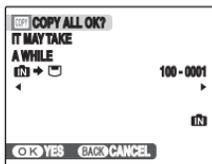

- ③ Press MENU/OK to copy all the frames (files).

! CAUTION

- When [MEMORY FULL] or [MEMORY FULL] appears on the screen, copying the data stops on the way.
- When copying the image that has specified DPOF setting, the DPOF setting is not copied.

Adding voice memos to the images (VOICE MEMO)

Voice memos of up to 30 seconds can be added to still images.

Recording voice memos



- ① Press ◀ or ▶ to select the image to add a voice memo.




- ② Press MENU/OK to open the PLAYBACK MENU.



- ③ Press ▲ or ▼ to select VOICE MEMO.




- ④ Press ▶.

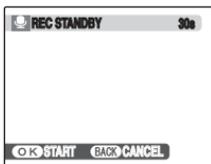


⑤ Press MENU/OK to start recording.


The remaining recording time appears during recording.

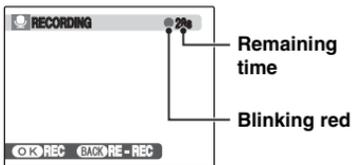

MEMO

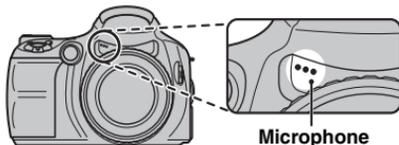

Face the microphone to record your comment.
Hold the camera about 20 cm (7.9 in.) away for the best results.

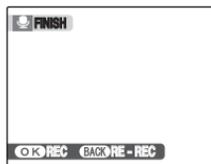


⑥ The voice memo ends when pressing MENU/OK midway or 30 seconds pass.

To record your comment: press MENU/OK.
To rerecord the comment: press DISP/BACK.

MEMO

- When the image already has a voice memo

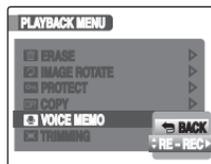

If you select an image that already has a voice memo, a screen appears in which you can select whether to rerecord the memo.

- When "PROTECTED FRAME" appears, unprotect the frame (→p.106).
- Voice memos cannot be added to movies.


Playing back voice memo



- ① Press ◀ or ▶ to select an image file with a voice memo. appears on the screen.




- ② Press ▼ to start playing back the voice memo.

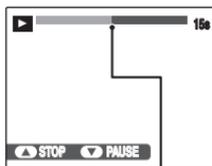

The playback time appears on the screen along with a progress bar.

Progress bar

! CAUTION

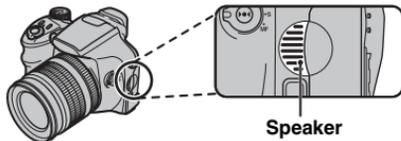

Speaker

Uncover the speaker.
The sound may be difficult to hear.

■ Playing back voice memos

	Control	Description
Playback		Playback begins. The voice memo stops when playback ends.
Pause / Resume		Pauses the voice memo during playback. Press ▼ again to resume playback.
Stop		Stops playback. Press ◀ or ▶ while voice memo playback is stopped to go back to the previous file or advance to the next file respectively.
Fast forward / Rewind		Press ◀ or ▶ during playback to skip forwards or backwards through the voice memo. These buttons do not function while playback is paused.

✓ CHECK

- Audio recording format:
WAVE (→p.181), PCM recording format
- Audio file size:
Approx. 480 KB (for a 30-second voice memo)




MEMO Playing voice memo files

You may not be able to play back some voice memo files recorded on other cameras.

Adjusting volume of voice memos

Volume can be adjusted while playing back voice memos.

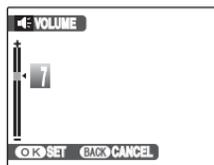

- 1 Press MENU/OK while playing back voice memo.
The voice memo is paused during playback.



- 2 Press ▲ or ▼ to adjust the volume.



- 3 Press MENU/OK to confirm your selection.
Camera starts to play back the voice memo.

Trimming the images (TRIMMING)

Use this mode to trim the required part of the photographed image.

1 Select the menu.



- 1 Press ◀ or ▶ to select the trimming frame (file).



- 2 Press MENU/OK to open the PLAYBACK MENU.



- 3 Press ▲ or ▼ to select  TRIMMING.




- 4 Press ▶.

Continued →

2 Specify trimming part of image.

▼ button
(Zoom out)

▲ button
(Zoom in)

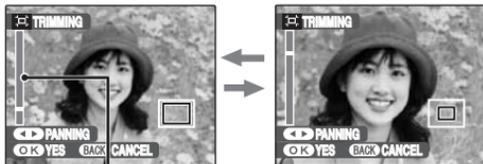

Zoom bar



- ① Press ▲ or ▼ to zoom in or out on an image.

MEMO

Press DISP/BACK to return to single-frame playback.



Navigation screen
(Current displayed image)



- ② Press ◀ or ▶ to move to another part of the image.



- ③ Press ▲, ▼, ◀, or ▶ to display another part of the image.

MEMO

Press DISP/BACK to return to the zoom setting.



- ④ Press MENU/OK.



3 Record the image.



Check the saved image size and press MENU/OK.

The trimmed image is added as a separate file in the final frame.



MEMO

- A saved image size varies depending on the zoom scale of step 2. For 0.3 M, **OK** YES option appears in yellow.
- Image sizes

3M	Printing at up to 6R (15.2 × 20.3 cm/6 × 8 in.) / A5 size
2M	Printing at up to 4R (10.2 × 15.2 cm/4 × 6 in.) / A6 size
03M	To use for e-mail or web site

- When **3:2** quality setting is selected, the image is trimmed to normal size (4:3 aspect ratio).

! CAUTION

You may not be able to trim images that were shot with a camera other than FinePix S6000fd / FinePix S6500fd.

! Intelligent Face Detection





Images taken with the Intelligent Face Detection (→p.37) ( appears on the screen). Press  (Intelligent Face Detection), the face that is focused on is zoomed in to help crop the main subject. To specify a cropped part of the image according to preference, specify and adjust according to the procedure in TRIMMING.

Recording Movies

Use this mode to record movies with sound.

1 Set the camera to Movie mode.

Set the Mode dial to .

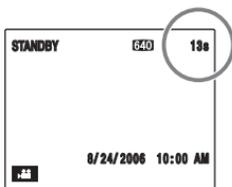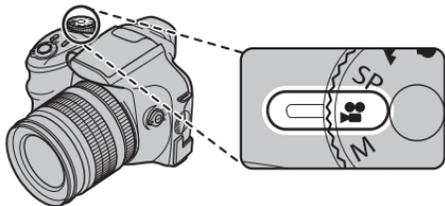


The available recording time appears on the screen.

2 Record movies.



Fully pressed

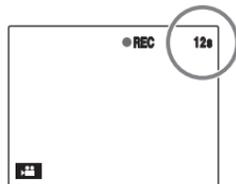

Press the shutter button down fully to start recording. During recording, ●REC and a counter that shows the remaining time appear on the screen.



Halfway pressed

Recording ends when pressing the shutter button down halfway during recording or the remaining time runs out.





MEMO

There is no need to hold down the shutter button during recording.

Zooming the image

Turn the zoom ring to zoom in or out during shooting. Refocus on the subject after zooming.

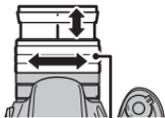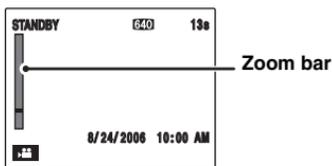

Turn the zoom ring to zoom in or out on an image.

Zoom ring

CHECK

- Optical zoom focal length
Approx. 28 mm to 300 mm (35 mm camera equivalent)
Max. zoom scale: 10.7x
- Focal range
Wide-angle: approx. 40 cm (1.3 ft.) to infinity
Telephoto: approx. 2 m (6.6 ft.) to infinity

CHECK Recording movies

- Specifications: Motion JPEG (→p.181), Monaural sound
- Quality selection method: **640** (640 × 480 pixels)
320 (320 × 240 pixels)
- Frame rate (→p.181): 30 frames per second (fixed)

MEMO


- The brightness and color of the screen shown during movie recording may differ from those shown before recording begins.
- Pressing the shutter button down fully fixes the focus, however the exposure and white balance are adjusted to the scene being shot.
- If recording is stopped immediately after it begins, 1 second of the movie is recorded onto the **xD-Picture Card** or internal memory.

CAUTION

- Because a movie is recorded onto the **xD-Picture Card** or internal memory as it is saved, it cannot be recorded correctly if the camera suddenly loses power (if the batteries run out or the AC power adapter is disconnected).
- A movie file taken by FinePix S6000fd / FinePix S6500fd may not be playable on other cameras.
- **EVF/LCD MODE** in the **SET-UP** menu cannot be set (→p.123).
- Because sound is recorded concurrently with the images, make sure that you do not cover the microphone with a finger, etc. (→p.14).
- Camera operation noises may be recorded during movie shooting.

Changing movie size

Press **F** to open the **F-MODE MENU**.

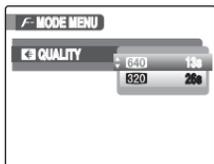

① Press **▶**.



② Press **▲** or **▼** to change the setting.



③ Press **MENU/OK** to confirm the setting.

Quality settings in Movie mode

640 (640 x 480 pixels): For better quality

320 (320 x 240 pixels): To record longer movies

MEMO

- The quality setting is retained even when the camera is turned off or the mode setting is changed.
- In **Movie** mode, you cannot set the **ISO** (sensitivity) setting and **FinePix COLOR** setting.
- See p.179 for information on recording times per **xD-Picture Card** or internal memory.


CAUTION

If you shoot using the **xD-Picture Cards** with model numbers containing "M" such as DPC-M1GB, movie recording time may be reduced if you repeatedly record and erase (frame erase) image files.

In such a case, erase all frames or format the **xD-Picture Card** before use. Back up important frames (files) onto your PC or another media.

▶ Playing Back Movies


Setting the camera to ▶
Playback mode (→p.44)

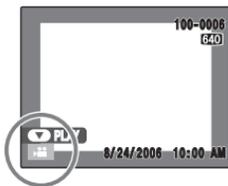

- ① Press ◀ or ▶ to select the movie file. ▶ appears on the screen.



- ② Press ▼ to begin playing back movie.

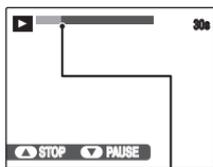

The playback time appears on the screen along with a progress bar.

Progress bar

■ Playing back movies

	Control	Description
Playback		Playback begins. Playback stops when the end of the movie is reached.
Pause / Resume		Pauses the movie during playback. Press ▼ again to resume playback.
Stop		Stops playback. Press ◀ or ▶ while playback is stopped to go back to the previous file or advance to the next file respectively.
Fast forward / Rewind		Press ◀ or ▶ during playback to skip forwards or backwards through the movie.
Skip playback		Press ◀ or ▶ when the movie is paused, the movie advances or goes back one frame. Hold down ◀ or ▶ to move through the frames quickly.

 **MEMO**


If the subject of the shot is very bright, white vertical streaks or black horizontal streaks may appear in the image during playback. This is normal.

 **CAUTION**

- You may not be able to play back some movie files recorded on other cameras.
- To play back movie files on a PC, save the movie file on the **xD-Picture Card** or internal memory to the PC's hard disk and then play back the saved file.
- Uncover the speaker. The sound is difficult to hear.

Adjusting volume of movies

Volume can be adjusted while playing back movies.

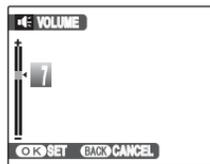

- ① Press MENU/OK while playing back movie.
The movie is paused during playback.



- ② Press ▲ or ▼ to adjust the volume.



- ③ Press MENU/OK to confirm the setting.
Camera starts to play back the movie.

Using the SET-UP menu

1 Open the SET-UP menu.



① Press MENU/OK to open the menu.




② Press ▲ or ▼ to select **SET** SET-UP.



③ Press ►.

2 Change the page.

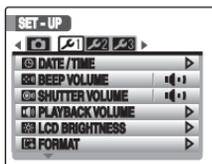


① Press ◀ or ▶ to select the page.



② Press ▼ to move to menu item.

3 Change the setting.

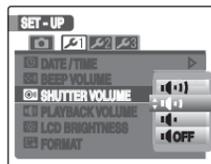

① Press ▲ or ▼ to select the menu.



② Press ►.
Different type of screen appears depending on selected item.



③ Press ▲ or ▼ to change the setting.



④ Press MENU/OK to confirm the setting.

SET-UP menu option

	Setting	Display	Factory default	Explanation	Page
📷	 IMAGE DISP.	CONTINUOUS/3 SEC/ 1.5 SEC/ZOOM (CONTINUOUS)	1.5 SEC	Sets the way for displaying the check image screen (photograph result) after taking a picture. The color tones in images recorded may differ from actual color. Play back the recorded images to check them.	125
	 FRAME NO.	CONTINUOUS/ RENEW	CONTINUOUS	Specifies whether frame numbers are assigned consecutively from previous numbers or begin again.	127
	 AF ILLUMINATOR	ON/OFF	ON	Specifies whether the AF-assist illuminator is ON or OFF.	41
	 CCD-RAW	ON/OFF	OFF	Sets the image quality to CCD-RAW. Because no image processing is performed on the camera for CCD-RAW images, images must be processed on a PC.	128
	 EVF/LCD MODE	30fps/60fps	30fps	Sets the screen display to the fine mode.	–
	 FOCUS CHECK	ON/OFF	ON	Enlarges the central portion of the screen for easy focusing, by turning the focus ring manually.	128
🔧	 DATE/TIME	–	–	Corrects the date or time.	27
	 BEEP VOLUME			Sets the volume of the tone emitted when the camera controls are used.	–
	 SHUTTER VOLUME			Sets the volume of the sound emitted when the shutter operates.	–
	 PLAYBACK VOLUME	–	7	Sets the volume of playing back movie and voice memo.	129
	 LCD BRIGHTNESS	–	0	Sets the screen brightness.	129
	 FORMAT	–	–	Initializes an xD-Picture Card or internal memory. Select this menu to erase all the frames (files).	130

Continued →

	Setting	Display	Factory default	Explanation	Page
2	 言語/LANG.	日本語/ENGLISH/ FRANCAIS/DEUTSCH/ ESPAÑOL/ITALIANO/ 中文簡/繁體/한글/ РУССКИЙ/PORTUGUÉS NEDERLANDS/TÜRKÇE	ENGLISH	Specifies the language used for screen display.	28
	 AUTO POWER OFF	5 MIN/2 MIN/OFF	2 MIN	Sets the time of turning camera off when camera is not used.	130
	 TIME DIFFERENCE			Specifies the time difference settings.	131
	 BACKGROUND COLOR	—	—	Specifies the colors of menu and background.	—
	 DISCHARGE	—	—	Discharges Ni-MH batteries.	159
	 VIDEO SYSTEM	NTSC/PAL	—	Specifies whether video output is set to NTSC or PAL.	—
3	 RESET	—	—	Resets all the camera settings (other than the DATE/TIME, TIME DIFFERENCE, BACKGROUND COLOR, and VIDEO SYSTEM) to the factory default values set at shipment. A confirmation message appears when you press  . To reset the camera settings, press  or  to select OK and press MENU/OK.	—

IMAGE DISP.

Use this setting to specify the way for displaying the check image screen (photograph result) after taking a picture.

CONTINUOUS:

The results are always displayed after you shoot. Press the MENU/OK to take another picture.

3 SEC/1.5 SEC:

The image appears for about 3 or 1.5 seconds and is then recorded.

ZOOM (CONTINUOUS):

The image appears enlarged. Use this mode to check details of image.

! CAUTION

- The color tones in images displayed when 3 SEC or 1.5 SEC is selected may differ slightly from those in the images actually recorded.
- IMAGE DISP. cannot be used when  LONG PERIOD (→p.79) is set.

■ Enlarging images

Navigation screen
(Current displayed image)



- ① Press ▲ or ▼ to zoom in or out the image.
- ② Press ◀ or ▶ to move to another part of the image.
- ③ Press ▲, ▼, ◀, or ▶ to display another part of the image.
- ④ Press MENU/OK to take another picture.
The image is recorded automatically.

Continued ➔

 **MEMO**

- When **Hi** quality setting is selected, the image cannot be enlarged.
- Pressing DISP/BACK cancels the zoom setting.
- This function is disabled when setting the continuous shooting.
- This function is disabled when selecting  in  SCENE POSITION.

 **Intelligent Face Detection**

Images taken with the Intelligent Face Detection (→p.37). Press  (Intelligent Face Detection) to alternate between the displayed faces. Press  or  to display the selected face zoomed in or out. Press  or  to move to another part of the image. Press , ,  or  to display another part of the image.

FRAME NO.


Use this function to specify whether frame numbers are assigned consecutively from previous numbers or begin again.

	<CONTINUOUS>	<RENEW>
A	0001 ⋮ 0005	0001 ⋮ 0005
↓		
B	0006 ⋮ 0010	0001 ⋮ 0005

* Formatted **xD-Picture Card** or internal memory used for both A and B.

CONTIN: Pictures are stored beginning from the highest file number stored on the last **xD-Picture Card** or internal memory used.

RENEW: Pictures are stored on each **xD-Picture Card** beginning with a file number 0001.

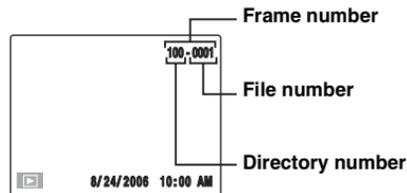CHECK

The last 4 digits of the 7-digit number in the top right corner of the screen are the file numbers, while the first 3 digits show the directory number.

MEMO

- Setting this function to **CONTINUOUS** makes file management easier as it makes sure that file names are not duplicated when images are downloaded to a PC.
- When the camera settings are **RESET** (→p.124), the frame number setting (**CONTINUOUS** or **RENEW**) is changed to **CONTINUOUS** and the frame number itself does not return to 0001.
- In **CONTINUOUS** setting, images are stored beginning from the highest file number on the current **xD-Picture Card** when the **xD-Picture Card** already contains image files with file numbers higher than the highest file number on the last **xD-Picture Card**.
- File number runs from 0001 to 9999. Once 9999 is exceeded, the directory number changes from 100 to 101. The maximum number is 999-9999.
- The displayed frame number may differ for images photographed on other cameras.

CCD-RAW

Setting **RAW** CCD-RAW to ON disables the signal processing functions (reconstituting the data received from the CCD as an image) performed on the camera. Consequently, this task must be performed on the PC. Use the bundled FinePixViewer software to perform the processing on a PC. Conversion using FinePixViewer also provides a simple way to create TIFF-format images. (Convertible file type will differ depending on your PC. For details, refer to the online help of FinePixViewer.)

! CAUTION

- The functions listed below cannot be used in CCD-RAW mode.
 - During shooting
 - Digital zoom, Continuous shooting, Quality and Post shot assist window are unavailable.
 - During playback
 - Playback can be zoomed up to 2.5x, but cropped images cannot be saved.
- You cannot take a picture when CCD-RAW is set and the internal memory is used.

✓ CHECK

To rebuild images, FinePixViewer (on the bundled CD-ROM "Software for FinePix CX") must be installed on your PC.

FOCUS CHECK

Use this function when it is difficult to see whether the image is focused.




Set FOCUS CHECK to ON. The center of the image can be zoomed in by turning the focus ring, and focusing can be more easily achieved in this portion of the screen. Take the picture to return to normal display.

! CAUTION

- Focus check function can be used in the MF mode (→p.72).
- Focus check function is disabled when setting the **G** High-speed shooting mode (→p.92) or setting **EVF/LCD MODE** (→p.123) to "60 fps" in the **SET** SET-UP menu.

PLAYBACK VOLUME

Use this function to adjust volume while playing back movie and voice memo.

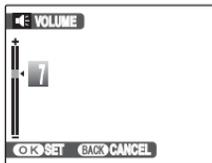


- 1 Press ▲ or ▼ to adjust the volume.
The larger the number, the larger the volume is emitted. 0 (zero) indicates a sound deadening.



- 2 Press MENU/OK to confirm the setting.

LCD BRIGHTNESS

Use this function to adjust the screen brightness.

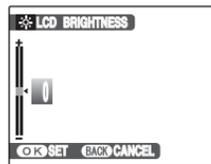


- 1 Press ▲ or ▼ to adjust the screen brightness.
The indicator moves to the + to display the screen brightly or to the - to darken the screen.



- 2 Press MENU/OK to confirm the setting.

FORMAT

Initialize (format) the **xD-Picture Card** or internal memory for use with the camera.

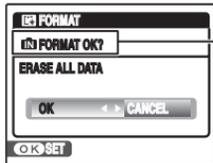

Place of initialize
 **FORMAT OK?:**
 Internal memory
 **FORMAT OK?:**
 xD-Picture Card



① Press ◀ or ▶ to select OK.



② Pressing MENU/OK initializes the **xD-Picture Card** or internal memory.

! CAUTION

- The Format function erases all the frames (files), including protected frames (files). Back up important frames (files) onto your PC or another media.
- Do not open the battery cover or slot cover during formatting, as formatting will be interrupted.

AUTO POWER OFF

When this function is active and the camera remains unused for 2 or 5 minutes, it turns camera off. Use this function when you want to get the maximum possible running time from your batteries.

! CAUTION

The Auto power off function is disabled during automatic playback (→p.100), discharging rechargeable batteries (→p.159), and when a printer or a PC connection (→p.136, 146) is being used.

MEMO To restore power to the camera

Refer to "Turning On and Off" (→p.24).

TIME DIFFERENCE

Use this function when traveling to destinations in different time zones. This function sets a time difference relative to the date and time currently set. When this setting is enabled, the specified time difference is applied when pictures are taken.

1 Use Time difference function.



Press ▲ or ▼ to change between HOME and LOCAL.

To set the time difference, select LOCAL.

HOME: Your home time zone

LOCAL: Your destination time zone

2 Move to TIME DIFFERENCE screen.



Press ►.

3 Set time difference.



① Press ◀ or ▶ to select +/-, hour, and minute.




② Press ▲ or ▼ to change the setting.



③ Always press MENU/OK after the settings are completed.

CHECK**Available time setting**

-23:45 to +23:45 (in 15-minute increments)

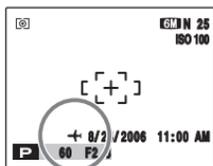MEMO

In the time difference setting, when you change to the Photography mode, **+** and the date is displayed for 3 seconds, the date display turns yellow.


CHECK

Upon returning from a trip, always change the time difference setting back to **HOME** and then check the date and time again.



Connecting to a TV

When connecting to a TV, images can be displayed on wider screen. Using Automatic playback function (→p.100) together, you can have fun with folks.

Plug the A/V cable (included) into the A/V OUT (Audio/Visual output) socket of the camera.

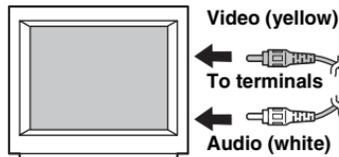

Plug the other end of the cable into the audio/video input socket on the TV.

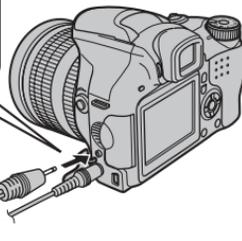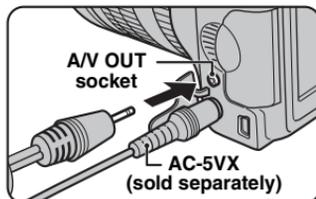

! CAUTION

- Plug the A/V cable (included) and the AC power adapter correctly and push them in each terminal.
- See p.159 for the information of the AC power adapter.


📄 MEMO

- When connecting the A/V cable (included) to TV, the camera's screen is turned off.
- The image quality for movie playback is lower than for still images.
- When connecting to a TV, even if you adjust the volume from the **[M]** PLAYBACK VOLUME, the TV volume cannot be changed. Refer to the instructions provided with your TV for more information on audio/video input for your TV.
- Use the AC-5VX (sold separately) when FinePix S6000fd / FinePix S6500fd is connected to a TV for long periods.

Using the AC power adapter (sold separately)

Always use a FUJIFILM AC Power Adapter AC-5VX (sold separately) (→p.153).

Use the AC power adapter to prevent losing power at inconvenient times, such as when downloading photographed images to your PC. You can take pictures and play back images without worrying about depleting the batteries.

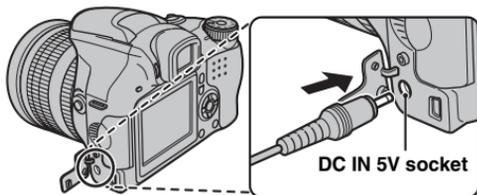

Check that the camera is off. Plug the AC power adapter connector into the DC IN 5V socket and then plug the AC power adapter into the power outlet.

⚠ CAUTION

- Only connect and disconnect the AC power adapter when the camera is off. Connecting or disconnecting the AC power adapter while the camera is on temporarily interrupts the power supply to the camera, which will stop the recording of any images or movies being shot. Failing to turn the camera off before connecting/disconnecting can also result in damage to the **xD-Picture Card**, or malfunction during PC connection.
- The socket-outlet shall be installed near the equipment and shall be easily accessible.
- The shape of the plug and socket-outlet depends on the country of use.
- Do not connect the AC power adapter to charge the AA-size Ni-MH (nickel-metal hydride) batteries. Use the optional charger to charge the Ni-MH batteries.

📄 MEMO

See p.159 for notes on using the AC power adapter.


Connecting Camera Directly to Printer — PictBridge Function



When a printer that supports PictBridge is available, images can be printed by connecting the camera directly to the PictBridge-compatible printer without a PC.

Connecting to a printer


- 1 Connect the camera to your printer using the USB cable (mini-B).

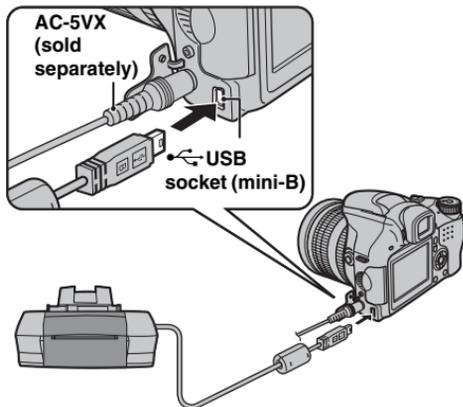

MEMO


Use the AC-5VX (sold separately) when FinePix S6000fd / FinePix S6500fd is connected to a printer.

- 2 Connect the camera to a printer and turn the printer on.
Set the Power switch to  to turn the camera on.

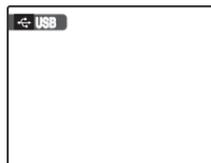

"USB" appears on the screen.

- 3 The following screen appears on the screen after a moment.

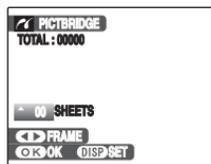


"Specifying images for printing"
→p.137
"Printing with DPOF setting"
→p.138

MEMO

Depending on the printer, some functions are disabled.

Specifying images for printing (PRINT WITH DATE / PRINT WITHOUT DATE)

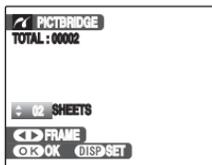

- 1 Press ◀ or ▶ to display the frame (file) for specifying PRINT setting.




- 2 Press ▲ or ▼ to set a value.
Up to 99 sheets are printed.

To specify more PRINT settings, repeat steps ① and ②.



- 3 Press MENU/OK to display the confirm setting.

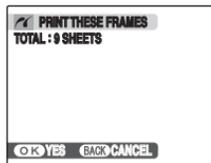

- 4 Press MENU/OK again to download the data to the printer and start printing the specified number of prints.




MEMO

Even if MENU/OK is pressed with total number of images set at 0 (zero), the screen printing once appears on the screen. Press MENU/OK again and printing starts.



MEMO Printing with date

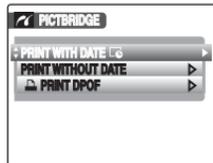


- 1 Press DISP/BACK to display the setting display.
- 2 Press ▲ or ▼ to select PRINT WITH DATE [date icon].
- 3 Press MENU/OK.



CAUTION

PRINT WITH DATE [date icon] is not available when the camera is connected to a printer that does not support date printing.

Printing with DPOF setting (PRINT DPOF)

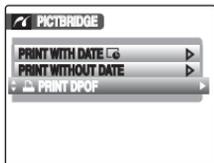


① Press DISP/BACK to open the menu.



② Press ▲ or ▼ to select PRINT DPOF.



③ Press MENU/OK to display the confirm setting.

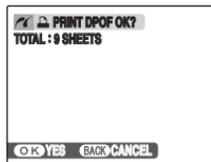

④ Press MENU/OK again to download the data to the printer and start printing the specified frames (files) continuously.


CHECK

To select PRINT DPOF, the DPOF settings must be specified on FinePix S6000fd / FinePix S6500fd beforehand (→p.101).

CAUTION

Even when WITH DATE is specified in the DPOF settings (→p.101), the date is not inserted on printers that do not support date printing.

MEMO

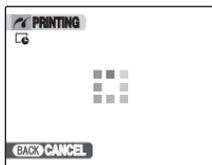

Press DISP/BACK to cancel the printing.
Depending on the printer, the printing may not be canceled immediately or printing may stop midway through.
When printing stops midway, briefly turn the camera off and then on again.

Disconnecting the printer

- ① Check that "PRINTING" is not displayed on the camera's screen.
- ② Turn the camera off. Unplug the USB cable (mini-B).

MEMO

DPOF setting can be specified for images on internal memory.

! CAUTION

- In PictBridge function, images photographed on other than a camera may not be printed.
- The camera cannot be used to specify printer settings such as the paper size and print quality.
- Please connect the AC Power Adapter AC-5VX (sold separately) to your camera.
- Use internal memory or an **xD-Picture Card** that was formatted on FinePix S6000fd / FinePix S6500fd.
- Movies and images with CCD-RAW cannot be printed.
- Images photographed with a camera other than FinePix S6000fd / FinePix S6500fd may not be printed.

Installation on a Windows PC

Pre-installation checklist

Hardware and software requirements

To run this software, you must have the hardware and software described below. Check your system before you begin the installation.

Operating System *1	Windows 98 SE Windows Millennium Edition (Windows Me) Windows 2000 Professional*2*3 Windows XP Home Edition*2 Windows XP Professional*2
CPU	200 MHz Pentium minimum
RAM	64 MB minimum Minimum 768 MB when converting CCD-RAW Data
Hard disk space	Amount required for installation: 450 MB minimum Amount required for operation: 600 MB minimum (When using ImageMixer VCD2 LE for FinePix: 2 GB or better) Minimum 2 GB when converting CCD-RAW Data (must specified in the OS as virtual memory or paging files)
Display	800 × 600 pixels or better, 16-bit color or better (When using ImageMixer VCD2 LE for FinePix: 1024 × 768 pixels or better)
Internet connection *4	<ul style="list-style-type: none">• To use the FinePix Internet Service or mail attachment function: An Internet connection or e-mail transmission software is needed• Connection speed: 56 k or better recommended

*1 Models with one of the above operating systems pre-installed.

*2 When you install the software, login using a system administrator account (e.g. "Administrator").

*3 Requires Service Pack4 when converting CCD-RAW Data.

*4 Required to use the FinePix Internet Service. The software can still be installed even if you do not have an Internet connection.

■ Recommended system

Operating System	Windows XP
CPU	2 GHz Pentium 4 or better recommended
RAM	512 MB or better recommended
Hard disk space	2 GB or better
Display	1024 × 768 pixels or better, Highest (32 bit)
Internet connection	Broadband (ADSL, FTTH, CATV, etc.)

! CAUTION

- Connect the camera directly to the PC using the USB cable (mini-B). The software may not operate correctly when you use an extension cable or connect the camera via a USB hub.
- When your PC has more than one USB port, the camera can be connected to either port.
- Push the USB connector fully into the socket to ensure that it is securely connected. The software may not operate correctly if the connection is faulty.
- Additional USB interface board is not guaranteed.
- Windows 95, Windows 98 and Windows NT cannot be used.
- Operation is not guaranteed on home-built PCs or on PCs running updated operating system software.
- When you reinstall or remove FinePixViewer, the Internet menu and your user ID and password for the FinePix Internet Service are deleted from your PC. Click the [Register now] button, enter your registered user ID and password and download the menu again.

Do not connect the camera to your PC until the software installation is completed.

1 Install FinePixViewer as instructed in the Quick start guide.

Launching the installer manually

- ① Double-click the "My Computer" icon.
* Windows XP users should click "My Computer" in the "Start" menu.
- ② Right-click "FINEPIX" (CD-ROM drive) in the "My Computer" window and select "Open".
- ③ Double-click "SETUP" or "SETUP.exe" in the CD-ROM window.



- * The way file names are displayed differs as described below depending on your PC settings.
- File extensions (3-letter suffixes indicating the file type) may be shown or hidden. (e.g. Setup.exe or Setup)
 - Text may be shown normally or all in uppercase (e.g. Setup or SETUP).

Installing other applications

You may see messages for installing ImageMixer VCD2 LE for FinePix. Install this application as directed by the on-screen instructions.

2 Install DirectX as directed by the on-screen instructions and then restart your PC. If the latest version of DirectX is already installed on your PC, this installation is not performed.

! CAUTION

- If the latest version is already installed, this window does not appear.
- Do not remove the CD-ROM during this procedure.

3 After restarting the PC, a message appears stating "Installation of the FinePixViewer has been completed".

Installation on a Mac OS X

Pre-installation checklist

Hardware and software requirements

To run this software, you must have the hardware and software described below. Check your system before you begin the installation.

Compatible Mac *1	Power Macintosh G3*2, PowerBook G3*2, Power Macintosh G4, iMac, iBook, Power Macintosh G4 Cube, PowerBook G4, Power Macintosh G5, MacBook, MacBook Pro, or Mac mini
Operating System	Mac OS X (compatible with version 10.3.9 to 10.4.6)
RAM	192 MB minimum Minimum 768 MB when converting CCD-RAW Data
Hard disk space	Amount required for installation: 200 MB minimum Amount required for operation: 400 MB minimum (When using ImageMixer VCD2 LE for FinePix: 2 GB or better) Minimum 2 GB when converting CCD-RAW Data (required on the system disk)
Display	800 × 600 pixels or better, at least 32,000 colors (When using ImageMixer VCD2 LE for FinePix: 1024 × 768 pixels or better)
Internet connection *3	<ul style="list-style-type: none">• To use the FinePix Internet Service or mail attachment function: An Internet connection or e-mail transmission software is needed• Connection speed: 56 k or better recommended

*1 PowerPC, Intel processor loaded


*2 Models with a USB port as a standard feature

*3 Required to use the FinePix Internet Service. The software can still be installed even if you do not have an Internet connection.

CAUTION

- Connect the camera directly to the Macintosh using the USB cable (mini-B). The software may not operate correctly if you use an extension cable or connect the camera via a USB hub.
- Push the USB connector fully into the socket to ensure that it is securely connected. The software may not operate correctly if the connection is faulty.
- Additional USB interface board is not guaranteed.

- 1** Turn your Macintosh on and start up Mac OS X. Do not launch any other applications.
- 2** When the bundled CD-ROM is loaded into the CD-ROM drive, the “FinePix” icon appears. Double-click the “FinePix” icon to open the “FinePix” volume window.
- 3** Double-click on “Installer for MacOSX”.
- 4** The Installer setup dialog appears. Click the [Installing FinePixViewer] button.

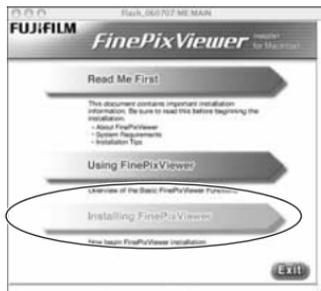

- !** **CAUTION**
For more information on what is installed, click the [Read Me First] button and [Using FinePixViewer] button.
- 5** The “Authenticate” dialog appears. Enter the name and password for the administrator account and then click the [OK] button.*
- * The administrator account is the user account used for Mac OS X installation and you can confirm the user account in the Accounts dialog in the System Preferences.
- 6** The “License” dialog appears. Read the agreement carefully and then, if you agree to the terms of the Agreement, click the [Accept] button.
 - 7** The “Read me” dialog appears. Click the [Continue] button.
 - 8** The “FinePixInstallOSX” window appears. Click the [Install] button to install FinePixViewer.

9 The ImageMixer VCD2 LE for FinePix installer automatically starts up and a window showing the installation progress appears (Installation may take several minutes).


10 The “FinePixViewer installation completed” message dialog appears. Then click exit button and close it.

! **CAUTION**

When Safari is used as the Web browser, a message may be displayed and the CD-ROM may not be removed. If this happens, click the Safari icon in the Dock to make Safari the active application and then select “Quit Safari” in the “Safari” menu to shut down Safari.

11 Launch “Image Capture” from the “Applications” folder.

12 Change the Image Capture settings. Select “Preferences...” from the “Image Capture” menu.

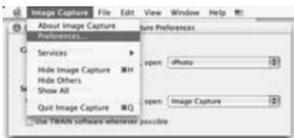

13 Select “Other...” from “When a camera is connected, open”.

14 Select “FPVBridge” from “FinePixViewer” folder in the “Applications” folder and click the [Open] button.



15 Select “Quit Image Capture” menu in the “Image Capture” menu.

Connecting to a PC

By connecting the camera to a PC, your system can be expanded to fill a wide range of uses. Using “FinePixViewer” performs images saving, browsing and file management etc.

MEMO

If the power cuts out during data transmission, the data will not be transmitted correctly. Always use the AC power adapter when connecting the camera to a PC.

Refer to Software Installation (→p.140, 143) the first time you connect the camera to your PC.

Install the software first. Do not connect the camera to the PC before installing all the software.




CD-ROM
(Software for FinePix CX)

① Insert the **xD-Picture Card** with images into the camera (→p.22).

CAUTION

- Do not format the **xD-Picture Card** in the camera on the PC.
- Use the **xD-Picture Card** with images taken by a FUJIFILM Digital camera.
- When connecting to a PC, if the **xD-Picture Card** contains large image or movie files, connection or transmission may take time or images may not be stored. In these cases, use the Image Memory Card Reader (sold separately), etc.

② Connect the camera to your PC using the USB cable (mini-B).

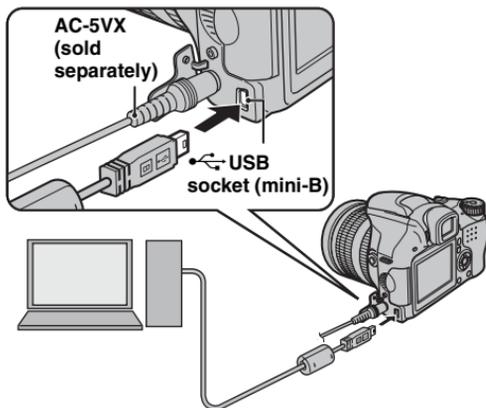

③ Set the Power switch to  to turn the camera on.

! CAUTION

- FinePix S6000fd / FinePix S6500fd is compatible with PTP (Picture Transfer Protocol). A PTP-compatible camera is a camera which can recognize the PC and printer automatically when connected.
- Always use the FUJIFILM AC Power Adapter AC-5VX (sold separately). If the camera suddenly loses power during data exchange, the **xD-Picture Card** or internal memory could be damaged.
- Do not disconnect the USB cable (mini-B) when the camera is communicating with a PC. If disconnecting the USB cable (mini-B) during communication, the files on the **xD-Picture Card** or internal memory may cause damage.
- In Mac OS X, you must set the automatic setup when the first time you connect the camera to your PC.
- Make sure that USB cable (mini-B) is connected correctly and pushed in.
- Perform pre-arranged steps to disconnect and turn off the camera (→p.148-149).
- When the camera and PC are exchanging data, the indicator lamp blinks alternately green and orange.
- Auto power off is disabled during USB connection.
- Before replacing the **xD-Picture Card**, always disconnect the camera from the PC. See p.148, 149 for information on the disconnection procedure.
- The camera and PC may be exchanging data even when "Copying" disappears on your PC screen. Before disconnecting the USB cable (mini-B), always check that the indicator lamp is off.
- Always use FinePixViewer to transfer images with voice memos to a PC.
- An image taken with **RAW** CCD-RAW (→p.128) setting is required to be transferred to a PC using FinePixViewer.

④ Set a PC.

Windows 98 SE / Me / 2000 Professional / Macintosh

! CAUTION

The Windows CD-ROM may also be required during installation. In this event, change CD-ROMs as directed by the on-screen instructions.

- FinePixViewer automatically starts up and the Save Image Wizard window (Save Image dialog box) appears. Follow the instructions provided on screen to save the images. To proceed without saving the images, click the [Cancel] button.



* Screen for Windows 2000 Professional

📄 MEMO

- You can only see images saved on a PC. Save images on a PC.
- If you cancel saving by clicking the [Cancel] button, set the Power switch to OFF to turn off the camera and then disconnect it from the PC.

Windows XP

① The “Found New Hardware” help message appears in the bottom-right corner of your screen. This message will close when the settings are completed. No action is required.

! CAUTION

This step is not required for subsequent connections.

② FinePixViewer automatically starts up and the Save Image Wizard window (Save Image dialog box) appears. Follow the instructions provided on screen to save the images. To proceed without saving the images, click the [Cancel] button.

MEMO

- You can only see images saved on a PC. Save images on a PC.
- If you cancel saving by clicking the [Cancel] button, set the Power switch to OFF to turn off the camera and then disconnect it from the PC.

Proceed to “Using FinePixViewer” (→p.149).

Disconnecting the camera


1 Windows

Once the image has been saved, the window below appears (Save Image Wizard window). To disconnect the camera, click the [Remove] button.




Macintosh

Once the image has been saved, the window below appears. To disconnect the camera, click the [OK] button.

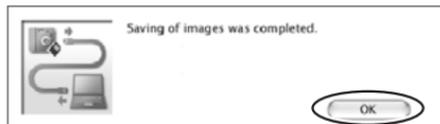

- 2** ① Set the Power switch to OFF to turn the camera off.
- ② Unplug the USB cable (mini-B) from the camera.

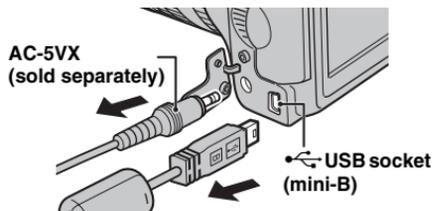

Using FinePixViewer

Mastering FinePixViewer

For all information on FinePixViewer functions, refer to "How to Use FinePixViewer" in the Help menu for details.

• **What is explained in "How to Use FinePixViewer"...**
"How to Use FinePixViewer" covers a range of topics, including batch processing and ordering prints.

Example: Looking up slide shows

- ① Click "How to Use FinePixViewer" in the FinePixViewer Help menu.
- ② Click "Basic Operation" and then click "Slide Show" in the menu that appears.
- ③ The "Slide Show" information appears. Press the "<<<" key to view the previous page or the ">>>" key to view the next page.

Uninstalling the software

Only perform this operation when you no longer require the installed software or when the software was not installed correctly.

Windows

- 1 Check that the camera is not connected to the PC.
- 2 Quit all currently running applications.
- 3 Open the "My Computer" window. Then open the "Control Panel" and double-click on "Add/Remove Programs".



- 4 The "Add/Remove Programs Properties" window appears. Select the software to be uninstalled (FinePixViewer or the driver) and then click the [Add/Remove] button.

To remove FinePixViewer

FinePixViewer Ver. 5.3

To remove the driver software

FUJIFILM USB Driver



- 5 When the message appears, click the [OK] button. Check your selection carefully since the process cannot be canceled once you click the [OK] button.



- 6 Automatic uninstallation begins. When uninstallation ends, click the [OK] button.


Macintosh

Quit FinePixViewer. Then drag the installed FinePixViewer folder to the Trash and select "Empty Trash" in the "Finder" menu.

System Expansion Option

By using FinePix S6000fd / FinePix S6500fd together with other optional FUJIFILM products, your system can be expanded to fill a wide range of uses.

Accessory availability may vary by country. Please check with your local Fujifilm representative to confirm product availability.

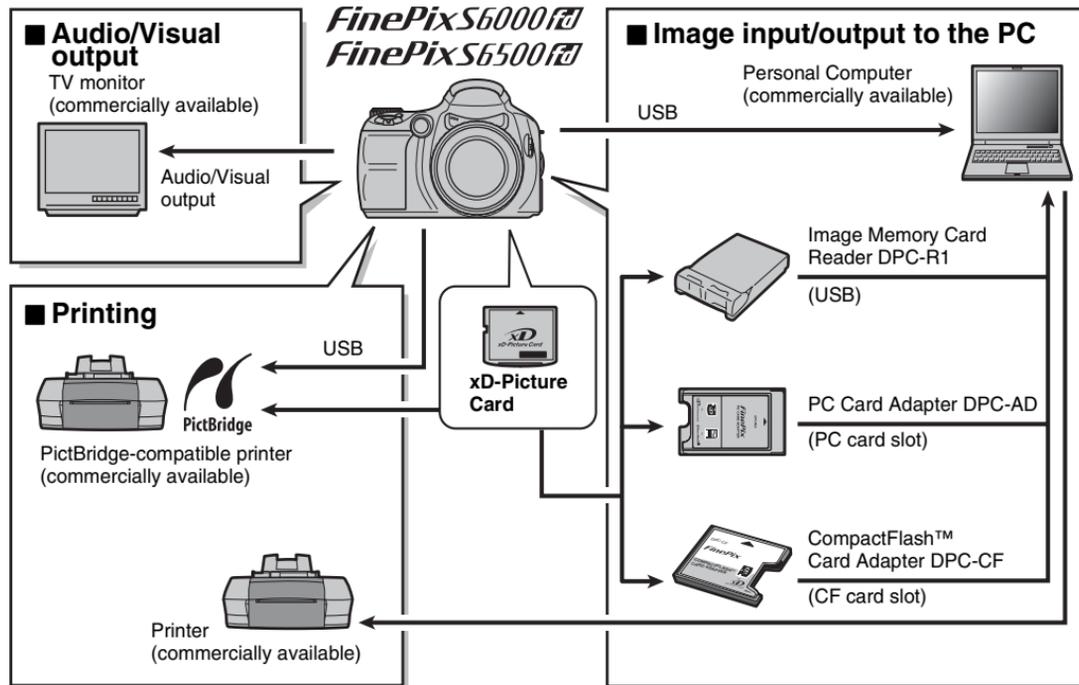

Accessories Guide

Visit the FUJIFILM web site for the latest information on camera accessories.

<http://www.fujifilm.com/products/digital/index.html>

Accessory availability may vary by country. Please check with your local Fujifilm representative to confirm product availability.

• **xD-Picture Card**

Use the following **xD-Picture Cards**:

16MB/32MB/64MB/128MB/256MB/512MB/1GB/2GB

There are two types of **xD-Picture Card**: standard type and Type M (containing "M" in the model number, such as DPC-M1GB).

FinePix S6000fd / FinePix S6500fd is compatible with Type M, however they may not be compatible depending on the device used (Image Memory Card Reader, etc.).



• **AC Power Adapter AC-5VX**

Use the AC-5VX when taking pictures or play back images for long periods or when FinePix S6000fd / FinePix S6500fd is connected to a PC.

* The shape of the AC power adapter, the plug, and power outlet depend on the country.



• **Soft Case SC-FXS9**

This case protects the camera against soil, dust, and minor impacts when it is being carried.

• **Wide Conversion Lens WL-FXS6**

See p.155 for details.

• **Image Memory Card Reader DPC-R1**

The DPC-R1 provides a quick and easy way to transfer images back and forth between your PC and an image memory card (**xD-Picture Card** and SmartMedia). The DPC-R1 uses the USB interface for high-speed file transfer.

-Compatible with **xD-Picture Card** of 16 MB to 512 MB, and SmartMedia of 3.3 V, 4 MB to 128 MB.



• **PC Card Adapter DPC-AD**

The PC Card Adapter allows the **xD-Picture Card** and SmartMedia to be used as a PC Card Standard ATA-compliant (PCMCIA 2.1) PC card (Type II).

-Compatible with **xD-Picture Card** of 16 MB to 512 MB, and SmartMedia of 3.3 V, 2 MB to 128 MB.



Continued ➔

- **CompactFlash™ Card Adapter DPC-CF**

Loading an **xD-Picture Card** into this adapter allows you to use the card as a CompactFlash card (Type I).



Overview of the Conversion Lens

■ Wide Conversion Lens WL-FXS6

This accessory converts the focal length of your lens by 0.8 times (equal to a 22.4 mm wide-angle lens) without changing its F-stop value.

■ Wide conversion lens specifications

Magnification	x0.8
Lens configuration	3 lenses in 3 groups
Shooting range	approx. 40 cm (1.3 ft.) to infinity
Dimensions	ø95 mm (3.7 in.) × L37.5 mm (1.5 in.)
Weight	approx. 214 g (7.5 oz.)
Accessories	lens caps (front and rear), Lens pouch



Mount the Wide conversion lens by screwing in the direction of arrow.

! CAUTION

- The WL-FXS6 should only be used for wide-angle shots where distortion does not occur. Using the lens at the telephoto setting increases the amount of distortion.
- The wide conversion lens and built-in flash cannot be used together.
- When using the wide conversion lens, there is a possibility of ghost images in shots that are taken facing towards the sun or very strong light. This risk can be decreased or eliminated by framing the shot so that bright light sources such as the sun are out of the shot as much as possible.

📄 MEMO

What is ghost image?

Ghost image is an effect whereby strong light shining directly into the lens causes random reflections within the lens that appear as circles or rings of light at different points to the original light source.

Using Your Camera Correctly

Read this information and the “Safety Notes” (→p.192), to make sure you use your camera correctly.

■ Places to Avoid

Do not store or use the camera in the following types of locations:

- In the rain or in very humid, dirty, or dusty places
- In direct sunlight or in places subject to extreme temperature rises, such as in a closed car in summer
- Extremely cold places
- Places with strong vibration
- Places with smoke or steam
- Places subject to strong magnetic fields (such as near motors, transformers, or magnets)
- In contact with chemicals such as pesticides
- Next to rubber or vinyl products

■ Damaged by Water or Sand

FinePix S6000fd / FinePix S6500fd can be damaged on the inside and outside by water and sand. When you are at the beach or close to water, make sure that the camera is not damaged by water or sand. Take care not to place the camera on a wet surface.

■ Damaged by Condensation

If the camera is carried from a cold location into a warm place, water droplets (condensation) may form on the inside of the camera or on the lens. When this occurs, turn the camera off and wait an hour before using the camera. Condensation may also form on the **xD-Picture Card**. In this event, remove the **xD-Picture Card** and wait a short time.

■ When the Camera is Not Used or is stored Periods of Time

If you do not intend to use the camera for a long period of time, remove the batteries and the **xD-Picture Card**.

■ Cleaning Your Camera

- Use a blower brush to remove any dust on the lens, LCD monitor or viewfinder, and then gently wipe the camera with a soft, dry cloth. If any soil remains, apply a small amount of lens cleaning liquid to a piece of FUJIFILM lens cleaning paper and wipe gently.
- Do not scratch hard objects against the lens, LCD monitor or viewfinder.
- Clean the body of the camera with a soft, dry cloth. Do not use volatile substances or cleaning products these items can cause damage.

■ Using the Camera When Traveling

When traveling overseas, do not place your camera in the check-in baggage. Baggage can be subjected to violent shocks, and the camera may be damaged inside or outside.

Power Supply and Batteries

Applicable Batteries

- In the camera, use AA-size alkaline or Ni-MH (nickel-metal hydride) rechargeable batteries. Do not use AA-size manganese or nickel-cadmium (Ni-Cd) batteries in your FinePix S6000fd / FinePix S6500fd because the heat created by the batteries could damage the camera or cause it not to work.
- The life of alkaline batteries varies between brands. The life of batteries you purchase may be shorter than those provided with the camera.

Notes on the Batteries

Incorrect use of the batteries could cause them to leak, become hot, ignite, or burst. Always observe the precautions given below.

- Do not heat the batteries or throw them into a fire.
- Do not carry or store batteries with metal objects such as necklaces or hairpins.
- Do not expose the batteries to water, and keep batteries from getting wet or stored in moist locations.
- Do not attempt to take apart or change the batteries, including battery casings.
- Do not subject the batteries to strong impacts.
- Do not use batteries that are leaking, deformed, discolored.
- Do not store batteries in warm or humid places.
- Keep the batteries out of reach of babies and small children.
- Make sure that the battery polarity (\oplus and \ominus) is correct.
- Do not use new with used batteries. Do not use charged and discharged batteries together.
- Do not use different types or brands of batteries at the same time.

- If you do not intend to use the camera for a long period of time, remove the batteries from the camera. Note if the camera is left with the batteries removed, the time and date settings are cleared.
- The batteries feel warm right after being used. Before removing the batteries, turn the camera off and wait for the batteries to cool down.
- Since batteries do not work well in cold weather or locations, warm the batteries by placing them inside your garments before use. Batteries do not work well when cold. They will work again when the temperature returns to normal.
- Soil (such as fingerprints) on the battery terminals makes the batteries charge less reducing the number of images. Carefully wipe the battery terminals with a soft dry cloth before loading.



If any liquid at all leaks from the batteries, wipe the battery compartment thoroughly and then load new batteries.



If any battery fluid comes into contact with your hands or clothing, flush the area thoroughly with water. Note that battery fluid can cause loss of eyesight if it gets into your eyes. If this occurs, do not rub your eyes. Flush the fluid out with clean water and contact your physician for treatment.

Using the AA-size Ni-MH batteries correctly

- As a power source in digital cameras, AA-size Ni-MH batteries (referred to hereafter as Ni-MH batteries) are superior to alkaline batteries in several ways, such as allowing more shots to be taken with the camera. However, care must be taken with the way Ni-MH batteries are used if their original performance is to be maintained.
- Ni-MH batteries left unused in storage for long periods can become “deactivated”. Also, repeatedly charging Ni-MH batteries that are only partially discharged can cause them to suffer from the “memory effect”. Ni-MH batteries that are “deactivated” or affected by “memory” suffer from the problem of only providing power for a short time after being charged. To prevent this problem, discharge and recharge them several times using the camera’s “Discharging rechargeable batteries” function. By repeating this cycle several times, the temporary reduction in performance caused by “memory” or “deactivation” can be remedied and the batteries can be restored to their original performance levels. Deactivation and memory are specific to Ni-MH batteries and are not in fact battery faults. See p.159-160 for the procedure for “Discharging rechargeable batteries”.

CAUTION

Do not use the “Discharging rechargeable batteries” function when alkaline batteries being used.

- To charge Ni-MH batteries, use the quick battery charger (sold separately). Refer to the instructions supplied with the charger to make sure that the charger is used correctly.
- Do not use the battery charger to charge other batteries.
- Note that the batteries feel warm after being charged.
- Due to the way the camera is constructed, a small amount of current is used even when the camera is turned off. Note in particular that leaving Ni-MH batteries in the camera for a long period will overdischarge the batteries and may render them unusable even after recharging.
- Ni-MH batteries will self-discharge even when not used, and the time for which they can be used may be shortened as a result.
- Ni-MH batteries will deteriorate rapidly if overdischarged (e.g. by discharging the batteries in a flashlight). Use the “Discharging rechargeable batteries” function provided in the camera to discharge the batteries.
- Ni-MH batteries have a limited service life. If a battery can only be used for a short time even after repeated discharge-charge cycles, it may have reached the end of its service life.

Disposing of Batteries

When disposing of batteries, do so in accordance with your local waste disposal regulations.

AC Power Adapter

Always use the AC Power Adapter AC-5VX with the camera.

The use of an AC power adapter other than AC-5VX can be damaged to your digital camera.

- Use the AC power adapter for indoor use only.
- Plug the connection cord plug securely into the DC input terminal of the FUJIFILM Digital camera.
- Turn off the FUJIFILM Digital camera before disconnecting the cord from the FUJIFILM Digital camera's DC input terminal. To disconnect, pull out the plug gently. Do not pull on the cord.
- Do not use the AC power adapter with any device other than your camera.
- During use, the AC power adapter will become hot to the touch. This is normal.
- Do not take apart the AC power adapter. Doing so could be dangerous.
- Do not use the AC power adapter in a hot and humid place.
- Do not subject the AC power adapter to strong shocks.
- The AC power adapter may emit a humming. This is normal.
- If used near a radio, the AC power adapter may cause static. If this happens, move the camera away from the radio.

Discharging rechargeable batteries

The Discharging rechargeable batteries function can only be used with Ni-MH batteries.

The Discharging rechargeable batteries function should not be used with alkaline batteries as it will completely drain the battery charge.


Use the Discharging rechargeable batteries function in the following situations:

- When the batteries only last for a short time after being charged normally
- When the batteries have not been used for a long period
- When you purchase new Ni-MH batteries

Do not use the Discharging rechargeable batteries function while using the AC power adapter. In these situations, the Ni-MH batteries will not be discharged due to the external power supply.

Continued ➔

To discharge rechargeable batteries:

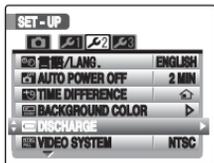

- ① Set the Power switch to to turn the camera on.



- ② Press MENU/OK to display the menu on the screen.



- ③ Press ▲ or ▼ to select **SET** SET-UP.




- ④ Press ► to display the SET-UP menu.



- ⑤ Press ◀ or ▶ to select .



- ⑥ Press ▲ or ▼ to select DISCHARGE.

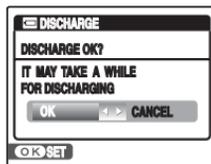

- ⑦ Press ►.



- ⑧ Press MENU/OK.



- ⑨ Press ◀ or ▶ to select OK.



- ⑩ The screen changes and discharging begins. When the battery level indicator blinks red and discharging ends, the camera turns off.

! CAUTION

To cancel discharging, press DISP/BACK.

Notes on the xD-Picture Card™ and the Internal Memory

■ Image Memory Card

- This Image Memory Card is a new image recording media (**xD-Picture Card**) developed for digital cameras. The Image Memory Card consists of a semiconductor memory (NAND-type flash memory) to record digital image data.
The recording process is electrically performed and enables erasure of existing image data as well as re-recording of new image data.
- When using a new Memory Card, or a Memory Card that has been formatted by a PC, be sure to format the card with your digital camera before using it.

■ Internal Memory

- Images held in the camera's internal memory may be corrupted or erased due to problems such as camera faults. Save your important data to another media (i.e., DVD-R, CD-R, CD-RW, hard disk, etc.).
- Data stored in the camera's internal memory cannot be guaranteed in the event that the camera is submitted for repairs.
- When the camera is repaired, any data stored in the camera's internal memory is subject to checking by the repairer.

■ Protecting Your Data

- Images and movies may be lost or destroyed in the following situations. Please note that FUJIFILM assumes no responsibility for data that is lost or destroyed.
 1. Removal of the memory card or turning the power off while the memory card or internal memory is being accessed (i.e., during record, erase, initialization, and playback operations).
 2. Improper handling and use of the memory card or internal memory by the user or third party.

MEMO

Save your important data to another media (i.e., DVD-R, CD-R, CD-RW, hard disk, etc.).

■ Handling xD-Picture Card

- When storing **xD-Picture Cards**, make sure that they are kept out of the reach of children. An **xD-Picture Card** could be swallowed cause suffocation. If a child swallows an **xD-Picture Card**, seek medical attention or call emergency number right away.
- When inserting the **xD-Picture Card** into the camera, hold the **xD-Picture Card** straight as you push it in.
- Do not expose an **xD-Picture Card** to shock. Do not apply pressure, and avoid bending.
- Do not use or store **xD-Picture Card** in hot and humid places.
- Clean the **xD-Picture Card** with a soft dry piece of cloth when dirty.
- When carrying or storing an **xD-Picture Card**, keep it in the special protective case.
- The **xD-Picture Card** will work well for long time, but will sooner or later lose its ability to store and play back images or movies. If this happens replace it with a new **xD-Picture Card**.
- Never remove the **xD-Picture Card** or turn the camera off during data recording or erasing (**xD-Picture Card** formatting) as this could be damaged to the **xD-Picture Card**.
- The use of **xD-Picture Cards** is recommended with FinePix S6000fd / FinePix S6500fd.
The recording quality cannot be guaranteed when **xD-Picture Cards** other than those manufactured by FUJIFILM are used.

Continued ➔

- The **xD-Picture Card** may feel warm when it is removed from the camera after taking pictures. This is normal.
- Do not put labels on the **xD-Picture Card**. Peeling labels can cause the camera not to work properly.



MEMO

- There are two types of **xD-Picture Card**: standard type and Type M (containing “M” in the model number, such as DPC-M1GB). FinePix S6000fd / FinePix S6500fd is compatible with Type M, however they may not be compatible depending on the device used (Image Memory Card Reader, etc.).
- While Type H and M share the same compatibility, Type H cannot be used with **xD-Picture Card** USB drive DPC-UD1, while Type M can.

■ Using **xD-Picture Card** or Internal Memory with a PC

- When taking pictures using an **xD-Picture Card** or internal memory that has been used on a PC, reformat the **xD-Picture Card** or internal memory using your camera for best quality.
- When formatting an **xD-Picture Card** or internal memory, a directory (folder) is created. Image data is then recorded in this directory.
- Do not change or delete the directory (folder) or file names on the **xD-Picture Card** or internal memory because this will make it impossible to use the **xD-Picture Card** or internal memory in your camera.
- Always use the camera to erase image data on an **xD-Picture Card** or internal memory.
- To edit image data, copy or transfer the image data to the PC and edit the copied or transferred data.

■ Specifications

Type

Memory type
Conditions for use

Dimensions

Image memory card for digital cameras (**xD-Picture Card**)
NAND-type flash memory
Temperature:
0°C to +40°C (+32°F to +104°F)
Humidity:
80% max. (no condensation)
25 mm × 20 mm × 2.2 mm
(0.98 in. × 0.79 in. × 0.09 in.)
(W × H × D)

Warning Displays

The table below lists the warnings that are displayed on the screen.

Warning Displayed	Explanation	Remedy
 (Lit red)  (Blinking red)	The batteries are low or completely out of charge.	Load new or fully charged batteries.
	There is a strong likelihood of camera shake because the shutter speed is slow.	Use flash photography. A tripod may be recommended, depending on the scene and mode.
	The AF (autofocus) cannot work effectively.	<ul style="list-style-type: none"> • If the image is too dark, take the picture at a distance of around 2 m (6.6 ft.) from the subject. • Use AF lock to take the picture (→p.39). • Select Macro mode when taking close-up shots.
Aperture/ Shutter speed display (Lit red)	The camera cannot shoot the picture at the correct brightness due to too bright or dark shooting condition.	The picture can be taken, but the correct brightness (exposure) will not be obtained.
FOCUS ERROR ZOOM ERROR	Camera malfunction or fault.	<ul style="list-style-type: none"> • Turn the camera on again, taking care not to touch the lens. • Turn the camera off and on again. If the message still appears, contact your FUJIFILM dealer.
NO CARD	xD-Picture Card is not inserted when transferring images.	Insert an xD-Picture Card .
CARD NOT INITIALIZED	<ul style="list-style-type: none"> • The xD-Picture Card or internal memory is not formatted. • The xD-Picture Card contact area is soiled. • Camera fault. 	<ul style="list-style-type: none"> • Format the xD-Picture Card or internal memory on the camera (→p.130). • Wipe the contact area on the xD-Picture Card with a soft, dry cloth. It may be necessary to format the xD-Picture Card (→p.130). If the message still appears, replace the xD-Picture Card. • Contact your FUJIFILM dealer.

Continued ➔

Warning Displayed	Explanation	Remedy
CARD ERROR	<ul style="list-style-type: none"> • The xD-Picture Card contact area is soiled. • The xD-Picture Card format is incorrect. • Camera fault. • The xD-Picture Card is damaged. 	<ul style="list-style-type: none"> • Wipe the contact area on the xD-Picture Card with a soft, dry cloth. It may be necessary to format the xD-Picture Card (→p.130). If the message still appears, replace the xD-Picture Card. • Contact your FUJIFILM dealer.
 MEMORY FULL  MEMORY FULL	The internal memory or xD-Picture Card is full.	Erase some images in internal memory or xD-Picture Card (→p.48), or use an xD-Picture Card that has ample free space.
WRITE ERROR	<ul style="list-style-type: none"> • The data could not be recorded due to an xD-Picture Card error or a connection error between the xD-Picture Card and camera. • The image cannot be recorded as it is too large to fit in the available space on the xD-Picture Card. • The xD-Picture Card or internal memory is not formatted. 	<ul style="list-style-type: none"> • Re-insert the xD-Picture Card or turn the camera off and then on again. If the message still appears, contact your FUJIFILM dealer. • Use a new xD-Picture Card. • Format the xD-Picture Card or internal memory on the camera (→p.130).
BUSY	The timing for recording was incorrect because the xD-Picture Card was formatted on a PC.	Use an xD-Picture Card that was formatted on the camera.
FRAME NO. FULL	The frame number has reached 999-9999.	<ol style="list-style-type: none"> ① Insert a formatted xD-Picture Card into the camera. ② Set RENEW as the FRAME NO. setting in the  SET-UP menu (→p.127). ③ Start taking pictures (The frame number starts from "100-0001"). ④ Set CONTINUOUS as the FRAME NO. setting in the  SET-UP menu.
READ ERROR	<ul style="list-style-type: none"> • The played back file was not recorded correctly. • The xD-Picture Card contact area is soiled. • Camera fault. • An attempt was made to play back the image or the movie that was not recorded on this camera. 	<ul style="list-style-type: none"> • This file cannot be played back. • Wipe the contact area on the xD-Picture Card with a soft, dry cloth. It may be necessary to format the xD-Picture Card (→p.130). If the message still appears, replace the xD-Picture Card. • Contact your FUJIFILM dealer. • The movie and image cannot be played back.

Warning Displayed	Explanation	Remedy
TOO MANY FRAMES	An attempt was made to show 5,000 or more image by date sorting.	No more than 4,999 images can be shown by date sorting.
PROTECTED FRAME	<ul style="list-style-type: none"> An attempt was made to erase a protected file. An attempt was made to add a voice memo to protected file. An attempt was made to rotate a protected file. 	<ul style="list-style-type: none"> Protected files cannot be erased. Remove the protection (→p.106). Protected files cannot be added to voice memos. Remove the protection (→p.106). Protected files cannot be rotated. Remove the protection (→p.106).
 ERROR	<ul style="list-style-type: none"> The voice memo file is faulty. Camera fault. 	<ul style="list-style-type: none"> The voice memo cannot be played back. Contact your FUJIFILM dealer.
 NO IMAGE  NO IMAGE	An attempt was made to transfer images from the xD-Picture Card or internal memory that memory was empty.	It is impossible to copy.
 CAN NOT TRIM  CAN NOT TRIM	An attempt was made to trim a 0.3M image or an image shot with the RAW setting.	The image cannot be trimmed.
CAN NOT TRIM	<ul style="list-style-type: none"> An attempt was made to trim an image shot using a camera other than FinePix S6000fd / FinePix S6500fd. The image is damaged. 	The image cannot be trimmed.
DPOF FILE ERROR	Prints were specified for 1000 or more frames in the DPOF frame settings.	The maximum number of frames for which prints can be specified on the same xD-Picture Card is 999. Copy the images for which you want to order prints onto another xD-Picture Card and then specify the DPOF settings.
 CAN NOT SET DPOF  CAN NOT SET DPOF  CAN NOT SET DPOF	An attempt was made to specify DPOF settings for a movie or an image that is not supported by DPOF.	DPOF printing cannot be used with this image format.
CAN NOT ROTATE  CAN NOT ROTATE	An attempt was made to rotate a movie or an image shot using a camera other than FinePix S6000fd / FinePix S6500fd.	These images cannot be rotated by image formats.

Continued ➔

Warning Displayed	Explanation	Remedy
COMMUNICATION ERROR	The camera is not connected to a PC or printer.	<ul style="list-style-type: none">• Check that the USB cable (mini-B) is connected correctly.• Check that your printer is turned on.
PRINTER ERROR	Displayed for PictBridge.	<ul style="list-style-type: none">• Check that the printer is not out of paper or out of ink.• Turn the printer off briefly and then turn it back on.• Refer to the user manual supplied with your printer.
PRINTER ERROR RESUME?	Displayed for PictBridge.	Check that the printer is not out of paper or out of ink. Printing automatically restarts when the error is cleared. If the message still appears after checking, press MENU/OK to restart printing.
CANNOT BE PRINTED	Displayed for PictBridge.	<ul style="list-style-type: none">• Refer to the user manual for the printer being used and check whether the printer supports the JFIF-JPEG or Exif-JPEG image format. If not, the printer cannot print the images.• Movies and images with CCD-RAW cannot be printed.• Was the image data photographed using FinePix S6000fd / FinePix S6500fd? You may not be able to print some images photographed on other cameras.

Troubleshooting

■ Getting ready

Matters	Problems	Possible causes	Solutions	Page
Batteries and power supply	Nothing happens when setting the Power switch to  or  .	The batteries have run out.	Load new or fully charged batteries.	19, 21, 157
		The batteries are loaded backward.	Load the batteries in the corrected direction.	20
		The batteries cover or slot cover is not closed securely.	Close the batteries cover or slot cover securely.	20
		The camera and AC power adapter are not connected correctly.	Connect the camera and AC power adapter correctly.	135, 159
		The camera has been left for a long period with batteries and AC power adapter removed.	Load the batteries or connect the AC power adapter, and wait a short time before turning the camera on.	19, 24, 135
	Batteries run out quickly.	Camera is used in extremely cold conditions.	Put the batteries in your pocket or another warm place to heat it and then load it into the camera just before you take a picture.	19, 21, 157
		The battery terminals are soiled.	Wipe the battery terminals with a clean, dry cloth.	21, 157
		Same batteries have been used for a long period.	The batteries can no longer be recharged. Load a new batteries.	19, 21, 157
		The rechargeable batteries (if used) have become deactivated, or the battery capacity has diminished due to the memory effect.	Use the rechargeable battery discharging function to restore the rechargeable batteries to full capacity.	159
	Power cuts out during operation.	The batteries have run out.	Load new or fully charged batteries.	19, 21, 157
The camera and AC power adapter are not connected correctly.		Connect the camera and AC power adapter correctly.	135, 159	

■ Setting menu etc.

Matters	Problems	Possible causes	Solutions	Page
Screen display	Screens are not displayed in English.	A language other than English is selected in the 言語/LANG. setting in the SET-UP menu.	Select ENGLISH.	28

■ Shooting

Matters	Problems	Possible causes	Solutions	Page
Basic operations	No photograph is taken when pressing the shutter button.	The xD-Picture Card or internal memory is full.	Insert a new xD-Picture Card or erase some unnecessary frames.	22, 48
		The xD-Picture Card or internal memory is not formatted.	Format the xD-Picture Card or internal memory on the camera.	122, 130
		The xD-Picture Card contact area is soiled.	Wipe the xD-Picture Card contact area with a soft, dry cloth.	22, 161
		The xD-Picture Card is damaged.	Insert a new xD-Picture Card .	22
		The batteries have run out.	Load new or fully charged batteries.	19, 21, 157
	The Auto power off function has turned the camera off.	Turn the camera on.	24	
	The screen darkens after taking a picture.	You took pictures with flash.	The screen may darken for charging flash. Wait a short time.	76
Focusing	Camera has difficulty in focusing on the subject.	You took a close-up shot without selecting Macro mode.	Select Macro mode.	74
		You photographed scenery with Macro mode selected.	Cancel Macro mode.	74
		You are shooting a subject that is not suited to autofocus (→p.40).	Use AF/AE lock or "MF" Manual focus mode to take the picture.	39, 72

Continued ➔

Matters	Problems	Possible causes	Solutions	Page
Intelligent Face Detection	Cannot set Intelligent Face Detection.	The Shooting mode is set to , , , , , or .	Change the Shooting mode.	54
Macro	Cannot set the camera to Macro (close-up) mode.	The Shooting mode is set to , , , , , , , , or .	Change the Shooting mode.	54
Flash	Cannot use the flash.	The shutter button was pressed while the flash was charging.	Wait until the charging is completed before pressing the shutter button.	76
		The Shooting mode is set to , , , , or .	Change the Shooting mode.	54
		The batteries have run out.	Load new or fully charged batteries.	19, 21, 157
		Continuous shooting is selected.	Set continuous shooting to OFF.	77
		The flash is set to SUPPRESSED FLASH mode.	Set to another flash mode excluding the SUPPRESSED FLASH mode.	75
		Super macro mode is selected.	Cancel Super macro mode.	74
	Cannot pop up the flash.	The flash is set to SUPPRESSED FLASH mode.	Set to another flash mode excluding the SUPPRESSED FLASH mode.	75
		The shooting condition is bright enough not to need flash.	Set to FORCED FLASH mode when you want to take pictures with flash.	75
	The flash settings are restricted and cannot be selected.	The Shooting mode is set to anything other than and .	The flash settings are restricted because the camera settings are tailored to the scene being shot. Change the Shooting mode for a wider range of flash settings.	54, 76
	The playback image is dark even though the flash was used.	The subject is too far away.	Move to within the effective flash range before taking the picture.	74, 76
Your finger was covering the flash.		Hold the camera correctly.	34	

Matters	Problems	Possible causes	Solutions	Page
Photographed images	The image is blurred.	The lens is dirty.	Clean the lens.	156
		!AF appeared when taking pictures.	Check the focus on the subject and take pictures.	34, 39, 163
		!👤 appeared when taking pictures.	It may cause camera shake. Hold the camera steadily.	36, 163
	There is speckling on the image.	The picture was taken with a slow shutter speed (long exposure) in a high-temperature environment.	This is a characteristic of CCDs and does not indicate a camera fault.	–
Recording images	Photographed images or movies are not recorded.	AC power adapter was connected or disconnected during turning the camera on.	Connect or disconnect the AC power adapter only when the camera is off. Failing to turn the camera off first can result in damage to the xD-Picture Card or malfunctions during PC connection.	135, 159
Continuous shooting	Only 1 frame can be shot even though continuous shooting mode was set.	A picture is taken using self-timer when setting FINAL 3 or LONG PERIOD continuous shooting mode.	Only 1 frame can be shot when using FINAL 3 or LONG PERIOD continuous shooting mode and Self-timer mode together.	77, 79

Continued ➔

■ **Playing back**

Matters	Problems	Possible causes	Solutions	Page
Playing back movie / voice memo	The camera does not emit any sound.	The camera volume is set too low.	Adjust the volume.	113, 120, 122, 129
		The microphone was blocked during shooting/recording.	Take care not to block the microphone during shooting/recording.	14, 111, 117
		There is something covering the speaker during playback.	Make sure that the speaker is uncovered.	14, 112, 120
Erasing	Erasing FRAME does not erase the frame.	Some frames may be protected.	Unprotect frames using the camera on which the protection was first applied.	106
	Erasing ALL FRAMES does not erase all the frames.			
Frame No.	CONTINUOUS in the frame number setting does not function.	You opened the battery cover without turning the camera off when replacing the batteries or xD-Picture Card .	Always turn the camera off when replacing the batteries or xD-Picture Card . Opening the battery cover without turning the camera off may cause the frame number memory to not function.	24

■ Connecting

Matters	Problems	Possible causes	Solutions	Page
Connecting to TV	There is no image or sound on the TV.	The camera is not connected to the TV correctly.	Connect the camera and TV correctly.	134
		The included A/V cable was connected during movie playback.	After the movie playback mode is stopped, connect the camera and TV correctly.	119, 134
		"TV" is selected as the TV input.	Set the TV input to "VIDEO".	–
		The video output setting is incorrect.	Change the setting to NTSC or PAL.	122, 124
		The TV volume is turned down.	Adjust the volume.	–
	The TV image is black and white.	The video output setting is incorrect.	Change the setting to NTSC or PAL.	122, 124
Connecting to PC	PC does not recognize the camera.	The USB cable (mini-B) is not correctly connected to the PC or camera.	Set up the camera, and connect the USB cable (mini-B) correctly.	146
Connecting to printer	Cannot print with PictBridge.	<ul style="list-style-type: none"> The USB cable (mini-B) is not correctly connected to the printer or camera. The printer is not turned on. 	<ul style="list-style-type: none"> Set up the camera, and connect the USB cable (mini-B) correctly. Turn the printer on. 	136

Continued ➔

■ Others

Matters	Problems	Possible causes	Solutions	Page
Camera operation etc.	Nothing happens when pressing the buttons on the camera.	Camera malfunction may be caused temporarily.	Briefly remove the batteries or disconnect the AC power adapter. Then reload the batteries or reconnect the AC power adapter and try again.	19, 20, 135, 159
		The batteries have run out.	Load new or fully charged batteries.	19, 21, 157
	The camera no longer works correctly.	Camera malfunction may be caused temporarily.	Briefly remove the batteries or disconnect the AC power adapter. Then reload the batteries or reconnect the AC power adapter and try again. If you think the camera is faulty, contact your FUJIFILM dealer.	19, 20, 135, 159

Specifications

System	
Model	Digital camera FinePix S6000fd / FinePix S6500fd
Effective pixels	6.3 million pixels
CCD	1/1.7-inch Super CCD HR
Storage media	Internal memory (approx. 10 MB)/ xD-Picture Card (16/32/64/128/256/512 MB/1 GB/2 GB)
File format	Still image: DCF-compliant Compressed: Exif ver.2.2 JPEG, DPOF-compatible Uncompressed: CCD-RAW (RAF) *Design rule for Camera File System compliant DPOF compatible Movie: AVI format, Motion JPEG Audio: WAVE format, Monaural sound
Number of recorded pixels	Still image: 2848 × 2136 pixels/3024 × 2016 pixels/2048 × 1536 pixels/ 1600 × 1200 pixels/640 × 480 pixels (6M/3.2M/2M/0.8M)
File size	See the table on the p.179
Lens	Fujinon 10.7× optical zoom lens F2.8-F4.9
Focal length	f=6.2 mm-66.7 mm (Equivalent to approx. 28 mm-300 mm on a 35 mm camera)
Digital zoom	Approx. 2.0× (10.7× optical zoom lens is used together: Max. zoom scale: approx. 21.4×)
Aperture (Wide-angle)	F2.8 to F11 Up to 13 steps in 1/3 EV increments Manual/Auto selectable
Focal range	Normal: Wide-angle: approx. 40 cm (1.3 ft.) to infinity (In High-speed shooting mode: approx. 2.0 m (6.6 ft.) to infinity) Telephoto: approx. 2.0 m (6.6 ft.) to infinity (In High-speed shooting mode: approx. 4.0 m (13.1 ft.) to infinity) Macro: Wide-angle: approx. 10 cm (3.9 in.) to 3.0 m (9.8 ft.) Telephoto: approx. 90 cm (3.0 ft.) to 3.0 m (9.8 ft.) Super macro: approx. 1 cm to 1.0 m (0.4 in. to 3.3 ft.) (Wide-angle only)

Continued ➔

System	
Sensitivity	AUTO/Equivalent to ISO 100/200/400/800/1600/3200
Photometry	TTL 256-zones metering Multi, Spot, Average
Exposure control	Program AE (When using P mode : Program Shift is enabled)/Shutter priority AE/Aperture priority AE/Manual exposure
Scene position	(NATURAL LIGHT), (NATURAL &), (PORTRAIT), (LANDSCAPE), (SPORT), (NIGHT), (FIREWORKS), (SUNSET), (SNOW), (BEACH), (MUSEUM), (PARTY), (FLOWER), (TEXT)
Picture Stabilization	Available
Intelligent Face Detection	Available
Exposure compensation	-2 EV to +2 EV in 1/3 EV-step increments (P, S, A)
Shutter speed	: 1/4 sec. to 1/4000 sec.* : 1/4 sec. to 1/500 sec.* : 4 sec. to 1/500 sec.* : 4 sec. to 1/2 sec.* : 1/45 sec. to 1/1000 sec.* (flash only). P, S, A: 4 sec. to 1/4000 sec.* M: 30 sec. to 1/4000 sec.* *depend on Exposure mode
Continuous shooting	Top-3: Number of recorded frames: up to 3 frames (Max. 2.2 frames/sec.) Final-3: Number of recorded frames: Last 3 frames before releasing the shutter button (Max. 2.2 frames/sec.) Long-period: Number of recorded frames: Depend on memory size. 1.5 sec. interval at N depending on quality level. (Max. 0.6 frames/sec.)
Auto bracketing	± 1/3 EV, ± 2/3 EV, ± 1 EV
Focus	Mode: Single-AF, Continuous AF, Manual focus/One-touch AF (when using Manual focus) AF system: TTL contrast-type, AF-assist illuminator AF frame selection: AF (CENTER), AF (MULTI), AF (AREA)

System	
White balance	Automatic scene recognition/Preset (Fine, Shade, Fluorescent (Daylight), Fluorescent (Warm White), Fluorescent (Cool White), Incandescent) /Custom
Self-timer	Approx. 2 sec./10 sec.
Flash type	Popping the flash up automatically Effective range: (ISO: AUTO): Wide-angle: approx. 60 cm-8.3 m (2.0 ft.-27.2 ft.) Telephoto: approx. 2.0 m-4.6 m (6.6 ft.-15.1 ft.) (Macro): Wide-angle: approx. 30 cm-2.0 m (1.0 ft.-6.6 ft.) Telephoto: approx. 90 cm-2.0 m (3.0 ft.-6.6 ft.)
Flash mode	Auto, Red-eye Reduction, Forced Flash, Suppressed Flash, Slow Synchro, Red-eye Reduction + Slow Synchro
Viewfinder	0.33 inches, approx. 115,000 pixels low-temperature polysilicon TFT color LCD finder, Approx. 100% coverage
LCD monitor	2.5 inches, Aspect ratio: 4:3; approx. 235,000 pixels Amorphous silicon TFT color LCD monitor, Approx. 100% coverage
Movie	640 × 480 pixels/320 × 240 pixels (640/320) (30 frames per second with monaural sound) A series of continuous image can be recorded depending on the available space on an xD-Picture Card or internal memory.
Photography functions	Intelligent face detection, High-speed shooting, Best framing, Post shot assist window, Frame No. memory, Histograms
Playback functions	Intelligent face detection, Trimming, Automatic playback, Multi-frame playback, Sorting by date, Image rotate, Histograms (Highlight warning), Voice memo
Other functions	PictBridge, Exif print, Language (日本語, English, Francais, Deutsch, Español, Italiano, 中文简, 繁體, 한글, Русский, Português, Nederlands, Türkçe), Time difference, FinePix photo mode(F-mode), Discharging rechargeable batteries

Continued ➔

Input/Output Terminal

A/V OUT (Audio/Visual output) NTSC/PAL-type (with monaural sound)

Digital input/output USB 2.0 High-Speed/PTP (Picture Transfer Protocol)

DC input socket AC Power Adapter AC-5VX (sold separately)

Power Supply and Others**Power supply**

Use one of the following:

- 4x AA-size alkaline batteries
- 4x AA-size Ni-MH (Nickel-Metal Hydride) batteries (sold separately)
- AC Power Adapter AC-5VX (sold separately)

Guide to the number of available frames for battery operation

Battery Type	With LCD monitor ON	With viewfinder (EVF) ON
Alkaline batteries	Approx. 200 frames	Approx. 200 frames
Ni-MH batteries 2500 mAh	Approx. 400 frames	Approx. 400 frames

According to the CIPA (Camera & Imaging Products Association) standard procedure for measuring digital still camera battery consumption (extract):

When using alkaline batteries, use the batteries supplied with the camera. You can use Ni-MH batteries also. The storage media should be **xD-Picture Card**.

Pictures should be taken at a temperature of +23°C (+73°F), with the LCD monitor turned on, the optical zoom moved from full wide-angle to full telephoto (or vice-versa) and back again to its original position every 30 seconds, the flash used at full power every second shot and the camera turned off and then on again once every 10 shots.

- Note: Because the number of available shots varies depending on the capacity of alkaline batteries or the level of charge in Ni-MH batteries, the figures shown here for the number of available shots using batteries are not guaranteed.

The number of available shots will also decline at low temperatures.

Camera dimensions (W/H/D) 130.7 mm × 97.2 mm × 119.5 mm/5.1 in. × 3.8 in. × 4.7 in. (not including accessories and attachments)

Camera mass (weight) Approx. 570 g/20.1 oz. (not including accessories, batteries and **xD-Picture Card**)

Weight for photography Approx. 660 g/23.3 oz. (including batteries and **xD-Picture Card**)

Operating Conditions Temperature: 0°C to +40°C (+32°F to +104°F)
80% humidity or less (no condensation)

■ Standard number of available frames/recording time per xD-Picture Card and internal memory

The number of available frames, recording time or file size varies slightly depending on the subjects photographed. Note also that the divergence between standard number of frames and the actual number of frames is greater for xD-Picture Cards with higher capacities.

Quality setting	6M F	6M N	3:2	3M	2M	03M	RAW	640 (30 fps)	320 (30 fps)
Number of recorded pixels	2848 × 2136		3024 × 2016	2048 × 1536	1600 × 1200	640 × 480	—*	640 × 480	320 × 240
Image data size	3.0 MB	1.5 MB	1.5 MB	780 KB	630 KB	130 KB	13.4 MB	—	—
Internal memory (approx. 10 MB)	3	6	6	12	15	77	0	8 sec.	16 sec.
16 MB	5	10	10	19	25	122	1	13 sec.	26 sec.
32 MB	10	20	20	40	50	247	2	27 sec.	54 sec.
64 MB	21	42	42	81	101	497	4	55 sec.	109 sec.
128 MB	42	84	84	162	204	997	9	111 sec.	219 sec.
256 MB	85	169	169	325	409	1997	19	223 sec.	7.3 min.
512 MB	170	339	339	651	818	3993	38	7.4 min.	14.6 min.
1 GB	341	680	680	1305	1639	7995	76	14.9 min.	29.3 min.
2 GB	680	1360	1360	2558	3198	15992	152	29.8 min.	58.7 min.

* Number of recorded pixel is 4048 × 3036 when displaying images on PC by using FinePixViewer.

Continued ➔

If you shoot using the **xD-Picture Cards** with model numbers containing "M" such as DPC-M1GB, movie recording time may be reduced if you repeatedly record and erase (frame erase) image files. In such a case, erase all frames or format the **xD-Picture Card** before use. Back up important frames (files) onto your PC or another media.

- * These specifications are subject to change without notice. FUJIFILM shall not be held liable for damages resulting from errors in this Owner's Manual.
- * The LCD monitor on your digital camera is manufactured using advanced high-precision technology. Even so, small bright points and anomalous colors (particularly around text) may appear on the monitor. These are normal display characteristics and do not indicate a fault with the monitor. This phenomenon will not appear on the recorded image.
- * The operation error may be caused in a digital camera by the strong radio interference (i. e. electric fields, static electricity, line noise, etc.).
- * Due to the nature of the lens, the edges of images may appear distorted. This is normal.

Explanation of Terms

Deactivated batteries

Leaving an Ni-MH battery unused in storage for a long period may cause a rise in the level of substances that inhibit current flow inside the battery and result in a dormant battery. A battery in this state is referred to as deactivated.

Because current flow is inhibited in a deactivated Ni-MH battery, the battery's original level of performance cannot be achieved.

EV

A number denotes Exposure Value. The EV is determined by the brightness of the subject and sensitivity (speed) of the film or CCD. The number is larger for bright subjects and smaller for dark subjects. As the brightness of the subject changes, a digital camera maintains the amount of light hitting the CCD at a constant level by adjusting the aperture and shutter speed. When the amount of light striking the CCD doubles, the EV increases by 1. Likewise, when the light is halved, the EV decreases by 1.

Frame rate (fps)

The frame rate refers to the number of images (frames) that are photographed or played back per second. For example, when 10 frames are continuously photographed in a 1-second interval, the frame rate is expressed as 10 fps.

For reference, TV images are displayed at 30 fps (NTSC).

JPEG

Joint Photographic Experts Group

A file format used for compressing and saving color images. The higher the compression rate, the greater the loss of quality in the decompressed (restored) image.

Memory effect

If an Ni-MH battery is repeatedly charged without first being fully discharged, its performance may drop below its original level. This is referred to as the "memory effect".

Motion JPEG

A type of AVI (Audio Video Interleave) file format that handles images and sound as a single file. Images in the file are recorded in JPEG format. Motion JPEG can be played back by QuickTime 3.0 or later.

Smear

A phenomenon specific to CCDs whereby white streaks appear on the image when there is a very strong light source, such as the sun or reflected sunlight, in the photography screen.

WAVE

A standard format used on Windows systems for saving audio data. WAVE files have the ".WAV" file extension and the data can be saved in either compressed or uncompressed format. Uncompressed recording is used on this camera.

WAVE files can be played back on a personal computer using the following software:

Windows: MediaPlayer

Macintosh: QuickTime Player

* QuickTime 3.0 or later

White Balance

Whatever the kind of the light, the human eye adapts to it so that a white object still looks white. On the other hand, devices such as digital cameras see a white subject as white by first adjusting the color balance to suit the color of the ambient light around the subject. This adjustment is called matching the white balance.

Exif Print

Exif Print Format is a newly revised digital camera file format that contains a variety of shooting information for optimal printing.

FUJIFILM Digital Camera Worldwide Network

If you have technical questions or if you need repair service, ask the following local distributor.

Please present the warranty card and your purchase receipt when you ask for repairs. Refer to the warranty card for conditions of the warranty.

There is a case that repair and Technical support cannot be accepted for some models which your local distributor does not deal with.

These lists are subject to change without notice.

NORTH AMERICA

Canada	Fuji Photo Film Canada Inc. Technical support Repair service	600 Suffolk Court Mississauga Ontario, L5R 4G4 TEL 1-866-818-FUJI (3854) http://www.fujihelp.ca 600 Suffolk Court Mississauga Ontario, L5R 4G4 TEL 1-800-263-5018 FAX 1-905-755-2993 http://www.fujihelp.ca
U.S.A.	Fuji Photo Film USA Technical support Repair service	1100 King George Post Rd., Edison, NJ 08837 TEL 800-800-3854 FAX 732-857-3487 digitalinfo@fujifilm.com 1100 King George Post Rd., Edison, NJ 08837 TEL 732-857-3000 FAX 732-857-3471 njcamerarepair@fujifilm.com
Hawaii	Fuji Photo Film Hawaii, Inc. Technical support & Repair service	94-468 Akoki Street, Waipahu, HI. 96797 TEL 1-808-677-3854, ext. 209 FAX 1-808-677-1443 kurt_kmett@fujifilmhawaii.com

CENTRAL & SOUTH AMERICA

Argentina	Imagen e informacion S.A. Technical support & Repair service	Fondo de la Legua 936 San Isidro Pcia. de Buenos Aires TEL +54-11-4836-1000 FAX +54-11-4836-1144 servtec@imageneinformacion.com.ar
Bolivia	Reifschneider Bolivia Ltda. Technical support & Repair service	Calle H N.º 5 - Equipetrol Norte - Santa Cruz TEL +591 33 44 1129 FAX +591 33 45 2919 gciagral@bibosi.scz.entelnet.bo
Brazil	Fuji Photo Film do Brasil Ltda. Technical support & Repair service	Av. Vereador José Diniz, 3400 - Campo Belo, São Paulo/SP TEL 0800-12-8600 FAX +55 11 5091-4150 camarasdigitais@fujifilm.com.br
Chile	Reifschneider SA Technical support & Repair service	Av. El Conquistador del Monte 5024, Huechuraba, Santiago, Chile TEL 02-4431500 FAX 02-4431596 ceciliacalvo@reifschneider.cl
Colombia	Animex de Colombia Ltda. Technical support & Repair service	Calle 44 N.º 13-43 Piso 2 Apartado 18001 - Bogotá TEL +57 1 338-0299 FAX +57 1 288-2208 animex@etb.net.co
Ecuador	Espacri Cia Ltda Technical support & Repair service	Bolivar 5-69 y Hermano Miguel TEL 593-72-835526 FAX 593-72-833157

FUJIFILM Digital Camera Worldwide Network

Ecuador	Importaciones Espacri Cia. Ltda. Technical support & Repair service	Simón Bolívar 5-69 y Hno. Miguel - Cuenca TEL +593 783 5526 FAX +593 783 3157 portiz@fujifilm.com.ec
Mexico	Fujifilm de Mexico, S.A. de C.V. Technical support Repair service	Av. Ejercito Nacional 351, Col. Granada 11520 Mexico, D.F. TEL (52-55) 5263-5566 / 68 FAX (52-55) 5254-1508 jlgraud1@fujifilm.com.mx Av. Presidente Juarez 2007, Col. Tepetlalcusco, 54090 Tlalnepantla, Edo. de Mexico TEL (52-55) 5263-5500 FAX (52-55) 5254-1508 jlgraud1@fujifilm.com.mx
Paraguay	Errece S.R.L. Technical support & Repair service	Edificio Unitas 15 de Agosto 1035, Asunción TEL +595 21 444256 FAX +595 21 444651 jmarbulo@fujifilm.com.py
Peru	Procesos de Color S.A. Technical support & Repair service	Pablo Bermudez 111 Apartado 3794 - Esq. Arequipa - Lima 11 TEL +51 14 33 5563 FAX +51 14 33 7177 jalvarado@fujifilm.com.pe
Uruguay	Fotocamara S.R.L. Technical support & Repair service	Cuareim 1439, montevideo, Uruguay TEL +598-2-9002004 FAX +598-2-9008430 fotocam@adinet.com.uy
Uruguay	Kiel S.A. Technical support & Repair service	Maldonado 1787 Montevideo- Uruguay TEL (05982) 419 4542 FAX (05982) 412 0046 kiel@fujifilm.com.uy
Venezuela	C. Hellmund & Cia Sa Technical support & Repair service	Av. Ppal Diego Cisneros Caracas Venezuela Edf Oficentro TEL 0212-2022300 FAX 0212-2399796 hellmund@hellmund.com
EUROPE		
Austria	Fuji Film Oesterreich Technical support & Repair service	Traviatagasse/Pfarrgasse, 1230 Vienna, Austria TEL 0043 1 6162606/51 or 52 FAX 0043 1 6162606/58 kamera.service@fujifilm.at
Belgium	Belgian Fuji Agency Technical support & Repair service	20, Avenue Lavoisier, Wavre, 1300, Belgium TEL 3210242090 FAX 3210238562 info@fuji.be
Croatia	I&I d.o.o. Technical support Repair service	Hondlova 2, Zagreb, Croatia TEL 38512319060 FAX 2310240 dsaravanja@fujifilm.hr Hondlova 2, Zagreb, Croatia TEL 38512316228 FAX 2310240 info@fujifilm.hr
Cyprus	PMS IMAGING LTD Technical support & Repair service	11, Dighenis Akritas Avenue, P.O.BOX 22315, 1586 Nicosia TEL 35722746746 FAX 35722438209 mariosashiotis@fujifilm.com.cy

Cyprus	Doros Neophytou CAMERA REPAIRS Technical support & Repair service	28B, Agiou Demetriou, Acropoli, Nicosia TEL 35722314719 FAX 35722515562 dorosn@logosnet.cy.net
Czech Republic	Fujifilm Cz., s.r.o. Technical support	U nakladoveho nadrazi 2/1949, 130 00 Praha 3 TEL 00420 234 703 411 FAX 00420 234 703 489 fricman@fujifilm.cz
Czech Republic	AWH servis Repair service	Milesovska 1, 130 00 Praha 3, Czech republic TEL 00420 222 721 525 FAX 00420 222 720 122 awh@awh.cz
Denmark	Fujifilm Denmark A/S Technical support & Repair service	Stubbeled 2, 2950 Vedbæk Denmark TEL 0045 45662244 FAX 0045 45662214 fujifilm@fujifilm.dk
Finland	Fuji Finland Oy Technical support & Repair service	Martinkyläntie 41, 01720 Vantaa, Finland TEL +358 9 825951 FAX +358 9 870 3818 fuji@fuji.fi
France	FUJIFILM France Technical support & Repair service	2, Avenue Franklin, 78186 Saint-Quentin en Yvelines, France FAX 33 1 01 30 58 58 65 direction.technique@fujifilm.fr
Germany	Fuji Photo Film (Europe) GmbH Technical support & Repair service	Heesenstr. 70, 40549 Düsseldorf International call TEL +49 211 50890 FAX +49 211 5089668 service@fujifilm.de National call* TEL 0180 5898980 FAX 0180 5898982 *12 Cent/Min aus dem deutschen Festnetz
Greece	FUJIFILM HELLAS S.A. Technical support & Repair service	1, Ihouc & Ag. Anargiron str., 175 64 P.Phaliro, Athens, Greece TEL 0030 210 9404100 FAX 0030 210 9404397 fujifilm@fujifilm.gr
Hungary	Fujifilm Hungary Ltd. Technical support	Vaci ut 19. Budapest, 1134, Hungary TEL 3612389410 FAX 3612389401 fujifilm@fujifilm.hu
Iceland	Icephoto (Ljosmyndavorur) Technical support & Repair service	Skipholt 31, 105 Reykjavik, Iceland TEL 354 568 0450 FAX 354 568 0455 framkollun@fujifilm.is
Italy	FujiFilm Italia S.p.A. Technical support Repair service	Via Dell'Unione Europea, 4 - 20097 San Donato Milanese (MI), Italy TEL 039-02895821 FAX 039-0289582912 info@fujifilm.it Fujifilm On Line - Call center TEL 039-026695272 info@fujifilm.it
Lithuania	Fujifilm Lithuania Technical support & Repair service	Gerosios Vilties str. 38, LT-03143 Vilnius, Lithuania TEL 370-5-2130121 FAX 3705-5-2134066 info@fujifilm.lt

FUJIFILM Digital Camera Worldwide Network

Malta	Ciancio (1913) Co.Ltd. Technical support & Repair service	Fuji Tech Centre, Ciancio House, Cannon Road, Qormi, QRM05 TEL 0356-21-480500 FAX 0356-21-488328 info@fujifilm.com.mt
Netherlands	Fujifilm Nederland BV Technical support	Hoogstraat 39, 3011 PE, Rotterdam, The Netherlands TEL 010-2812345 FAX 010-2812334 fuji@fujifilm.nl
	Repair service	Hoefenseweg 43, 4877 LA, Etten-Leur, The Netherlands TEL 010-2812345 FAX 076-7502641 reparatie@fujifilm.nl
Norway	Fujifilm Norge AS Technical support	Lilleakerveien 10, 0283 Oslo, Norway TEL 0047-22736000 FAX 0047-22736020 http://www.fujifilm.no/ mailto:post@fujifilm.no
	Repair service	Liaveien 1, 5132 Nyborg, Norway TEL 0047-55393880 FAX 0047-55195201 http://www.camera.no/ mailto:service@camera.no
Poland	Fujifilm Polska Distribution Sp. z o.o. Technical support	Poland Al..Jerozolimskie 178; 02-486 Warszawa TEL +48-22-517-66-00 FAX +48-22-517-66-02 fujifilm@fujifilm.pl
	Repair service	Poland, Muszkieterow 15, 02-273 Warszawa TEL +48-22-886-94-40 FAX +48-22-886-94-42 serwis@fujifilm.pl
Portugal	Fujifilm Portugal, Lda Technical support	Av. Fontes Pereira de Melo, 342, 4100-259 Porto, Portugal TEL (351) 226194200 FAX (351) 226194213 finepix@fujifilm.pt
	Repair service	Av. Fontes Pereira de Melo, 342, 4100-259 Porto, Portugal TEL (351) 226194200 FAX (351) 225194662 cameras@fujifilm.pt
Romania	CTS-Cardinal Top Systems Ltd Technical support & Repair service	112, Calea Dorobanti street, 4 flat, 1sector, Bucharest, Romania TEL 4021-230-09-82 FAX 4021-230-09-82 cts_tirla@hotmail.com
Russia	ZAO "Fujifilm RU" Technical support	Bld. 1, 10, Rozanova str., Moscow, 123007, Russia TEL +7-095-956-9858 FAX +7-095-230-6217 info@fujifilm.ru
	Repair service	18, Shelepikhinskaya Naberezhnaya str., Moscow, 123290, Russia TEL +7-095-797-3434 FAX +7-095-797-3434
Slovakia	Fujifilm Slovakia Technical support	Pribylinska 2, 831 04 Bratislava, Slovakia TEL 00421 2 44 888 077 FAX 00421 2 44 889 300 fujifilm@fujifilm.sk
	Repair service	FIS Tatracentrum, Hodzovo nam. 4 - Tatracentrum, 811 06 Bratislava, Slovakia TEL 00421 2 54 647 347 fis.tatracentrum@stonline.sk
Spain	Fujifilm España S.A. Technical support	Aragón 180, 08011 Barcelona (España) TEL 902012535 FAX 934515900 / 933230330 info@fujifilm.es
	Repair service	Aragón 180, 08011 Barcelona (España) TEL 934511515 FAX 934515900 / 933230330 tallersat@fujifilm.es

Sweden	Fujifilm Sverige AB Technical support Repair service	Sveavägen 167 104 35 Stockholm TEL 46 8 506 141 70 FAX 46 8 506 142 09 kamera@fujifilm.se Sveavägen 167 104 35 Stockholm TEL 46 8 506 513 54 FAX 46 8 506513 54 kameraverkstaden@fujifilm.se
Switzerland / Lichtenstein	Fujifilm (Switzerland) AG Technical support & Repair service	Niederhaslistrasse 12, 8157 Dietlikon, Switzerland TEL +41 44 855 5154 FAX +41 44 855 5329 RepairCenter@fujifilm.ch
Turkey	Fujifilm Turkiye Sinfo A.S. Technical support Repair service	Fujifilm Plaza, Dereboyu Cad. 39 34660 Halkali, Istanbul, Turkey TEL +90 212 696 5090 FAX +90 212 696 5009 csarp@fujifilm.com.tr Fujifilm Plaza, Dereboyu Cad. 39 34660 Halkali, Istanbul, Turkey TEL +90 212 696 5090 FAX +90 212 696 5010 servis@fujifilm.com.tr
U.K.	Fuji Photo Film (UK) Ltd. Technical support Repair service	St Martins Way St Martins Business Centre Bedford MK42 0LF TEL +44 (0)123 424 5383 FAX +44 (0)123 424 5285 fujitec@fuji.co.uk St Martins Way St Martins Business Centre Bedford MK42 0LF TEL +44 (0)123 421 8388 FAX +44 (0)123 424 5285 fujitec@fuji.co.uk
Ukraine	Image Ukraine CJSC Technical support & Repair service	12, Kontraktova ploshcha, Kyiv 04070, Ukraine TEL +380-44-4909075 FAX +380-44-4909076 d@fujifilm.ua
MIDDLE EAST		
Iran	Tehran Fuka Co. Technical support & Repair service	229, "Fuji" Bldg., Mirdamad Blvd., Tehran 19189, Iran TEL (+98-21)2254810-19 FAX (+98-21)2221002 fuka@neda.net
Israel	Shimone Group Ltd. Technical support Repair service	Efal 33 keyriat Arie Petah Tikva 49130, Israel TEL (+) 972 3 9250666 digital@fujifilm.co.il Efal 33 keyriat Arie Petah Tikva 49130, Israel TEL (+) 972 3 9250666 FAX 972 3 9250699 khaim@shimone.com
Jordan	Grand Stores Technical support & Repair service	Al- Abdali, Amman / Jordan TEL 009626-4646387 FAX 009626-4647542 gstores@go.com.jo
Qatar	Techno Blue Technical support	Blue Salon Bldg, 3rd Floor, Suhaim bin Hamad st, Al- Saad, Doha TEL 00974 44 66 175 FAX 00974 44 79 053 prabu@techno-blue.com
Saudi Arabia	Emam Distribution Co. Ltd. Technical support	P.O. Box 1716, Jeddah 21441, Saudi Arabia TEL 96626978756 FAX 96626917036 service@fujifilm.com.sa

FUJIFILM Digital Camera Worldwide Network

Syria	Film Trading Company	Al-Shahbandar P.O. Box:31180 Damascus SYRIA
	Technical support Repair service	TEL + 963 11 2218049 FAX + 963 11 44673456 f.t.c@Net.SY Al-cheikh Taha P.O. Box: 6171 Aleppo SYRIA TEL + 963 21 4641903 FAX + 963 21 4641907 filmtradin@Net.SY
U.A.E.	Grand Stores	P. O. Box 2144, Saleh Bin Lahej Building, Al Garhoud, Deira, Dubai
	Technical support & Repair service	TEL + 971-4-2823700 FAX + 971-4-2828382 photography@grandstores.ae
Yemen	Al-Haidary Trading	P.O.Box-2942 Haddah St. HTC, Sana'a, Yemen
	Technical support Repair service	TEL 00967-1-503980 FAX 00967-1-503983 P.O.Box-2942 Haddah St. HTC, Sana'a, Yemen TEL 00967-1-503977 FAX 00967-1-503983

AFRICA

Egypt	Foto Express Egypt	426 Pyramids St., Giza, Egypt
	Technical support & Repair service	TEL (202) 7762062 FAX (202) 7760169 fotoegypt@access.com.eg
Kenya	Fuji Kenya Ltd	P.O.Box 41669-00100, Fuji Plaza, Chiromo Road, Nairobi, Kenya.
	Repair service	TEL (254-20)4446265-8 FAX (254-20)4448515 / 7 info@fujifilm.co.ke

OCEANIA

Australia	FUJIFILM Australia Pty Ltd	114 Old Pittwater Road, Brookvale, NSW, 2100, Australia
	Technical support Repair service	TEL 1800 226 355 FAX +61 (2) 9938 1975 digital@fujifilm.com.au 114 Joynton Avenue, Zetland, NSW, 2017, Australia TEL 1800 226 355 FAX +61 (2) 9938 1975 digital@fujifilm.com.au
Fiji	Brijlal & Co. Ltd	70-72 Cumming Street, Suva, Fiji
	Technical support & Repair service	TEL (679)3304133 FAX (679)3302777 kapadia@connect.com.fj
New Caledonia	Phocidis SARL	58, rue Higginson - B.P.661 - 98845
	Technical support & Repair service	TEL (00 687) 25-46-35 FAX (00 687) 28-66-70 phocidis@phocidis.nc
New Zealand	Fujifilm NZ Ltd	Cnr William Pickering & Bush Road Albany, Auckland
	Technical support & Repair service	TEL +64-9-4140400 FAX +64-9-4140410 glenn.beaumont@fujifilm.co.nz
Papua New Guinea	Oceania PNG Limited	Section 15, Allotment 1, Reke St, Boroko NCD. PNG. Mail: PO Box 2167, Boroko NCD. PNG. TEL +675 3256411 FAX +675 3250311 oceania@daltron.com.pg

ASIA

Hong Kong	Fuji Photo Products Co., Ltd. Technical support & Repair service	8/F., TSUEN WAN IND. CENTRE, 220 TEXACO RD., TSUEN WAN, HONG KONG TEL (852)2406 3287 FAX (852)2408 3130 rsd@chinahkphoto.com.hk
Indonesia	PT Modern Photo Tbk Technical support & Repair service	Jl.Matraman Raya 12, Jakarta Timur 13150 TEL +62 021 2801000 FAX +62 021 8581620+62 021 2801012 kmr-srv@moderngroup.co.id
Malaysia	Fuji Photo Film (Malaysia) Sdn. Bhd. Technical support Repair service	Letter Box 1, Level 10, 11 & 12, Menara Axis, No 2, Jalan 51A/223, 46100 Petaling Jaya, Selangor Darul Ehsan, Malaysia TEL 603-79584700 FAX 603-79584110 digital@fujifilm.com.my Letter Box 1, Level 10, 11 & 12, Menara Axis, No 2, Jalan 51A/223, 46100 Petaling Jaya, Selangor Darul Ehsan, Malaysia TEL 603-79584700 FAX 603-79584110 technical@fujifilm.com.my
Philippines	YKL Development & Trdg. Corp. Technical support Repair service	24 Sto. Domingo St., Quezon City 1100, Philippines TEL 632-7436601-06 FAX 632-7324661 digital@yklcolor.com 24 Sto. Domingo St., Quezon City 1100, Philippines TEL 632-7436601-06 FAX 632-7324661 tech_services@yklcolor.com
Singapore	Fuji Photo Film Singapore Pte Ltd Technical support & Repair service	10 New Industrial Road Fujifilm Building Singapore 536201 TEL 65-6380 5557 FAX 65-6281 3594 service@fujifilm.com.sg
South Korea	Korea Fujifilm Co., Ltd. Technical support	30-1, Mukjeung-dong, Jung-gu, Seoul, Korea TEL +82-2-3282-7363 FAX +82-2-2269-7435 photo@fujifilm.co.kr
South Korea	Yonsan AS Center (Fujidigital) Repair service	#301, 3F, Jeonjaland, 16-9, Hangangro3-ga, Yongsan-gu, Seoul, Korea TEL +82-2-701-1472 FAX +82-2-718-1331 1bowl@hanmail.net
South Korea	Kangnam AS Center (Digitalgallery) Repair service	2F, Hyeongin Tower, 23-2, Bangyi-dong, Songpa-gu, Seoul, Korea TEL +82-2-2203-1472 FAX +82-2-418-5572 nurijili@hanmail.net
South Korea	Busan AS Center (Digital-Sewon) Repair service	241-4, Bujeon-dong, Busanjin-gu, Busan, Korea TEL +82-51-806-1472 FAX +82-51-817-0083 merahan@yahoo.co.kr
Taiwan	Hung Chong Corp. Technical support & Repair service	No. 38, Min-Chuan E. Rd. Sec. 6, Taipei (114), Taiwan, R.O.C. TEL 886-2-6602-8988 FAX 886-2-2791-8647 dah@mail.hungchong.com.tw
Thailand	Fuji Photo Film (Thailand) Ltd. Technical support Repair service	388 SP Building, 8th Floor, Phayathai, Bangkok 10400 TEL +662-2730029 ext. 755 FAX +662-2730239 supaleark@fujifilm.co.th 388 SP Building, 8th Floor, Phayathai, Bangkok 10400 TEL +662-2730029 ext.761,762 FAX +662-2730239 warin@fujifilm.co.th

Safety Notes

- Make sure that you use your FinePix S6000fd / FinePix S6500fd camera correctly. Read these Safety Notes and your Owner's Manual carefully before use.
- After reading these Safety Notes, store them in a safe place.

About the Icons

The icons shown below are used in this document to indicate the severity of the injury or damage that can result if the information indicated by the icon is ignored and the product is used incorrectly as a result.



WARNING

This icon indicates that death or serious injury can result if the information is ignored.



CAUTION

This icon indicates that personal injury or material damage can result if the information is ignored.

The icons shown below are used to indicate the nature of the information which is to be observed.



Triangular icons tell you that this information requires attention ("important").



Circular icons with a diagonal bar tell you that the action indicated is prohibited ("Prohibited").



Filled circles with an exclamation mark tell you an action that must be performed ("Required").



WARNING

If a problem arises, turn the camera off, remove the batteries, disconnect and unplug the AC power adapter.

Continued use of the camera when it is emitting smoke, is emitting any unusual odor, or is in any other abnormal state can cause a fire or electric shock.

- Contact your FUJIFILM dealer.



Unplug from power socket.

Do not allow water or foreign objects to enter the camera.

If water or foreign objects get inside the camera, turn the camera off, remove the batteries and disconnect and unplug the AC power adapter.

Continued use of the camera can cause a fire or electric shock.

- Contact your FUJIFILM dealer.



Do not use the camera in the bathroom or shower.

This can cause a fire or electric shock.



Do not use in the bathroom or shower.

Never attempt to change or take apart the camera. (Never open the casing.)

Do not use the camera when it has been dropped or the casing is damaged.

This can cause a fire or electric shock.

- Contact your FUJIFILM dealer.



Do not disassemble.



WARNING

Do not change, heat or unduly twist or pull the connection cord and do not place heavy objects on the connection cord.

These actions could damage the cord and cause a fire or electric shock.

- If the cord is damaged, contact your FUJIFILM dealer.



Do not place the camera on an unstable surface.

This can cause the camera to fall or tip over and cause injury.



Never attempt to take pictures while in motion.

Do not use the camera while you are walking or driving a vehicle.

This can result in you falling down or being involved in a traffic accident.



Do not touch any metal parts of the camera during a thunderstorm.

This can cause an electric shock due to induced current from the lightning discharge.



Do not use the batteries except as specified.

Load the batteries with the ⊕ and ⊖ marks.



WARNING

Do not heat, change or take apart the batteries.

Do not drop or subject the batteries to impacts.

Do not attempt to recharge lithium or alkaline batteries.

Do not store the batteries with metallic products.

Do not use chargers other than the specified model to charge the batteries.

Any of these actions can cause the batteries to burst or leak and cause fire or injury as a result.



Use only the batteries or AC power adapters specified for use with this camera.

Do not use voltages other than the power supply voltage shown.

The use of other power sources can cause a fire.



If the battery leaks and fluid gets in contact with your eyes, skin or clothing. Flush the affected area with clean water and seek medical attention or call an emergency number right away.



Do not use the charger to charge batteries other than those specified here.

The charger is designed for Fujifilm HR-AA Ni-MH batteries. Using the charger to charge conventional batteries or other types of rechargeable batteries can cause the battery to leak fluid, overheat or burst.



 WARNING	
<p>When discarding or storing batteries, cover the battery terminals with insulation tape.</p> <p>Contact with other metallic objects or batteries could cause the batteries to ignite or burst.</p>	
<p>Keep xD-Picture Cards out of the reach of small children.</p> <p>Because xD-Picture Cards are small, they can be swallowed by children. Be sure to store xD-Picture Cards out of the reach of small children. If a child swallows an xD-Picture Card, seek medical attention or call an emergency number.</p>	

 CAUTION	
<p>Do not use this camera in locations affected by oil fumes, steam, humidity or dust.</p> <p>This can cause a fire or electric shock.</p>	
<p>Do not leave this camera in places subject to extremely high temperatures.</p> <p>Do not leave the camera in locations such as a sealed vehicle or in direct sunlight. This can cause a fire.</p>	
<p>Keep out of the reach of small children.</p> <p>This product could cause injury in the hands of a child.</p>	
<p>Do not place heavy objects on the camera.</p> <p>This can cause the heavy object to tip over or fall and cause injury.</p>	
<p>Do not move the camera while the AC power adapter is still connected. Do not pull on the connection cord to disconnect the AC power adapter.</p> <p>This can damage the power cord or cables and cause a fire or electric shock.</p>	
<p>Do not use the AC power adapter when the plug is damaged or the plug socket connection is loose.</p> <p>This could cause a fire or electric shock.</p>	
<p>Do not cover or wrap the camera or the AC power adapter in a cloth or blanket.</p> <p>This can cause heat to build up and distort the casing or cause a fire.</p>	



CAUTION

When you are cleaning the camera or you do not plan to use the camera for an extended period, remove the batteries and disconnect and unplug the AC power adapter.

Failure to do so can cause a fire or electric shock.



When charging ends, unplug the charger from the power socket.

Leaving the charger plugged into the power socket can cause a fire.



Using a flash too close to a person's eyes may temporarily affect the eyesight.

Take particular care when photographing infants and young children.



When an xD-Picture Card is removed, the card could come out of the slot too quickly. Use your finger to hold it and gently release the card.



Request regular internal testing and cleaning for your camera.

Build-up of dust in your camera can cause a fire or electric shock.

- Contact your FUJIFILM dealer to request internal cleaning every 2 years.
- Please note this is not a free of charge service.



FUJIFILM

FUJI PHOTO FILM CO., LTD.

26-30, Nishiazabu 2-chome, Minato-ku, Tokyo 106-8620, Japan

<http://www.fujifilm.com/products/digital/>

Printed in China

FPT/Y-608107-PY